


Compatibility Notes

This kit may be used with any DaVinci or Maestro fireplace that has the TouchSmart™ control system.

Overview

The heat exchanger is designed to circulate room air through the fireplace to extract heat from the exhaust stream and deliver that heat back into the room. The heat exchanger is installed in line with the venting and air from a blower is routed through the exchanger and back into the room through a register.

Install the heat exchanger when venting the appliance. Make sure all work on ducts is complete and sealed before installing drywall.

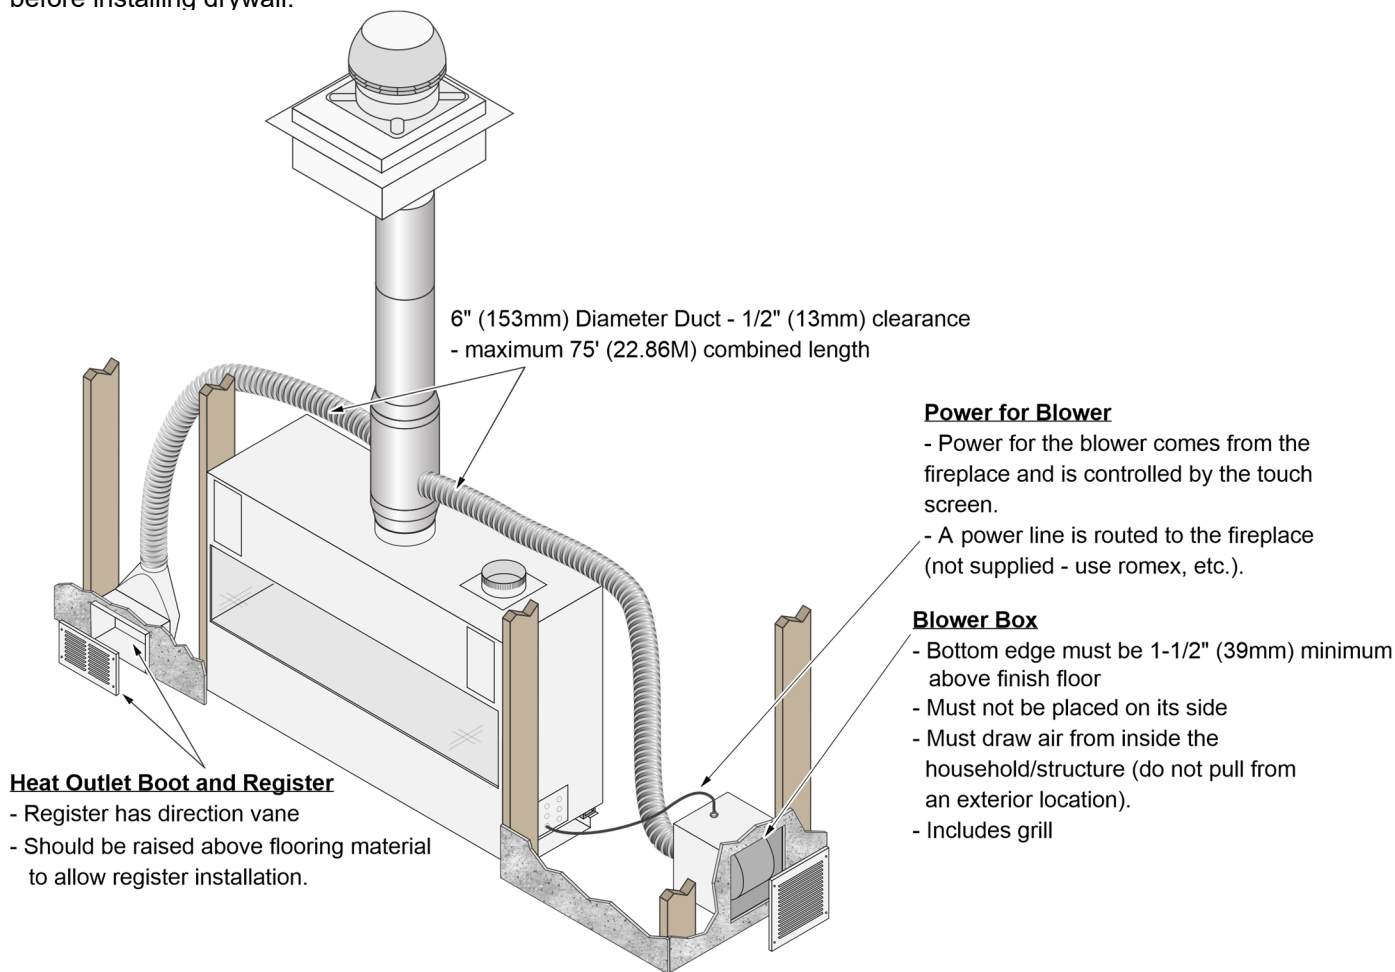


Packing List

- Heat Exchanger Vent section
- Blower Assembly with Strain Relief
- Blower Grill
- Heat Exchanger Lead (2 wire Molex)
- Register Boot - 6" Dia. to 6" x 12" (153mm Dia. to 153mm x 305mm)
- Output Register (12" x 6") (305mm x 153mm)
- 33' (10.06M) of 6" (153mm) Diameter Duct (U.L. 181)
- 10" (254mm) starter collar (for use with inline 180 fan **only**)

Category 2 - Heat Exchanger Location

- For category 2 fireplaces with (2) flues, the heat exchanger is always located on the primary module (near the exhaust).

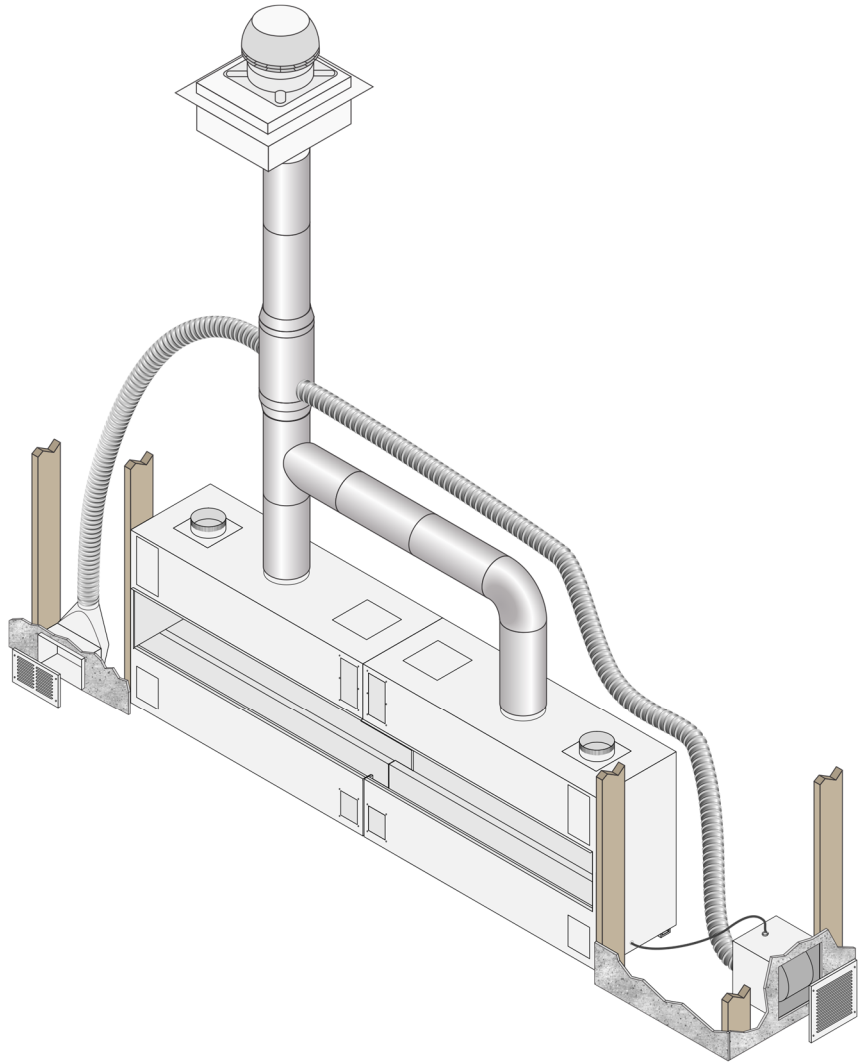


Additional Options

- Remote Blower Intake Grill, SKU # 94400131 (allows for intake box to be concealed & air to be drawn from a register)

Installation Warnings

- Warning:** This kit must be installed as specified in these instructions. Do not modify any component.
- Warning:** Use of any external blower other than the blower included with this kit will void the warranty and listing of this appliance and may create a fire hazard.
- Warning:** Disconnect power to the fireplace (turn the service breaker off) before conducting the installation. Enable power to the fireplace only after the installation is verified.
- Note:** This kit **must** be installed by a qualified service technician.
- Note:** Some building codes may require the use of firestop spacers whenever the duct passes from room to room.

Heat Exchanger Dimensions

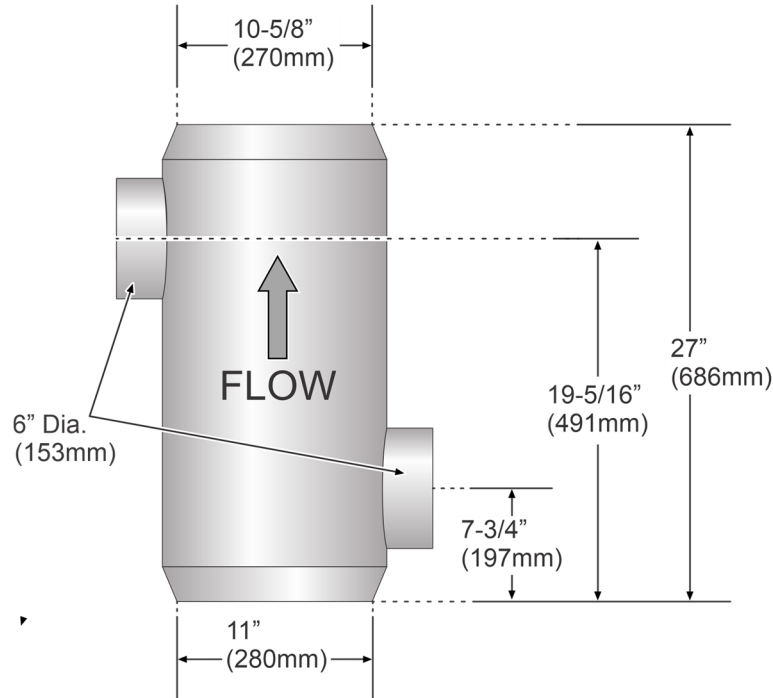

Fireplace Heat Exchanger Requirements

- The heat exchanger must be installed directly on the flue starter collar (or on top of the vent "t" section if it is installed on a 2-flue fireplace).
- The heat exchanger fan must be ducted to the lower of the two side collars on the heat exchanger.
- The inlet and outlet of the heat exchanger must be in the same airspace (cannot be installed in separate rooms that can be isolated by a door).
- All connections to and from the heat exchanger (vent and duct) must be sealed with aluminum (U.L. 181A-P) tape.

Clearances

- Minimum 3-1/2" (89mm) clearance is required to the heat exchanger.
- The duct (and its connection to the heat exchanger) has a minimum 1/2" (13mm) clearance.

Duct Installation


Maximum Duct Length

- The maximum duct length is 75' (22.9M) (inlet and outlet combined length).


Using an Inline Power Vent

If using an inline power vent fan in conjunction with the heat exchanger, you must use the Inline 180. The collar on the inline fan is 8" (204mm) and the heat exchanger is 10" (254mm). A 10" (254mm) starter is included with this kit to adapt the fan to the heat exchanger.

- Locate the (4) screws around the intake of the fan and remove them using a 1/4" nut driver
- Place the 10" (254mm) collar over the existing 8" (204mm) collar and secure using the screws

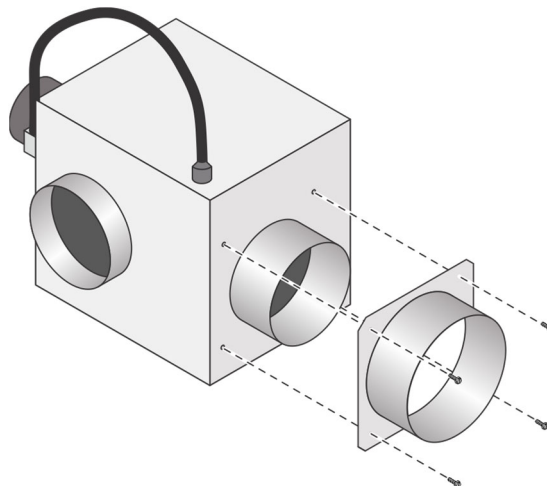


- Secure the 8" (204mm) pipe to the outlet of the blower with self-tapping screws.
- Seal the pipe to the outlet of the inline blower with 600° rated silicone caulk.
- All pipe between the heat exchanger and the inline fan must be 10" (254mm) diameter.
- All pipe between the inline fan and the termination must be 8" (204mm) diameter.
- Install the heat exchanger directly on the flue collar of the fireplace.
- The inline fan can be installed directly on top of the heat exchanger. Support as needed.

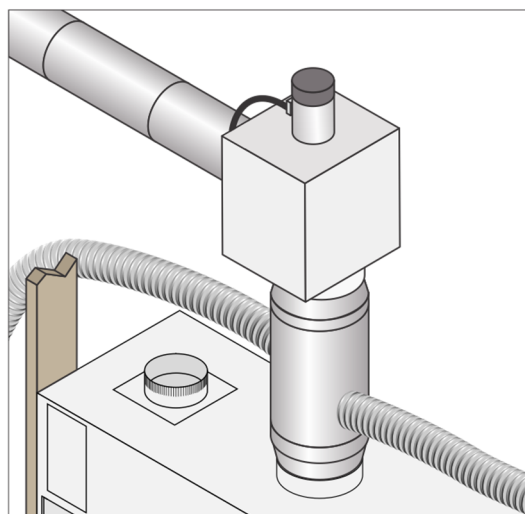


Duct Routing

- The duct has a 1/2" (12.7mm) minimum clearance to combustibles.
- The duct must maintain a minimum 1" (26mm) clearance to the fireplace B-Vent exhaust.
- Do not route duct in external areas or areas subject to severe cold or heat.
- The duct inlet and outlet must be placed within the household/structure. Do not pull air from outside the household/structure.
- The included duct is listed to U.L. 181. If using an alternative duct, make sure it complies with U.L. 181.
- Secure all flex connections with three self-tapping screws and seal with aluminum (U.L. 181A-P) tape

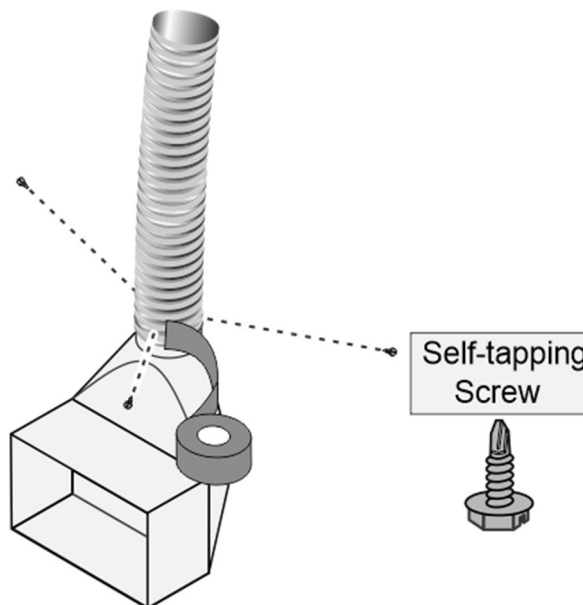


Blower Box Placement

- The blower box has a removable grill that allows access to the blower. The blower box must be placed so it may be accessed at a later time.
- The blower box must only be placed so the power in strain relief is on top (grill cannot be facing upward or downward). **Do not place the blower box on its side** (power inlet on the side with the grill on its side).

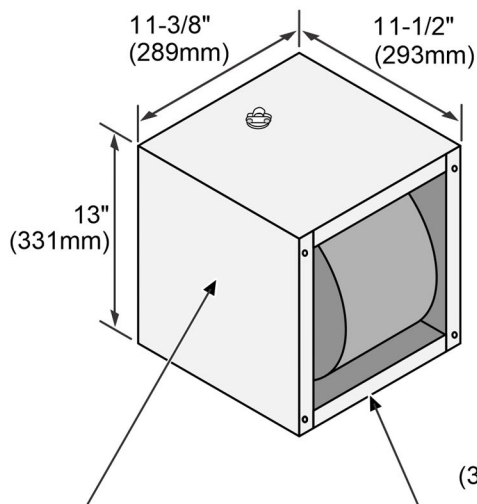

NOTE: Do not place the blower on its side (being installed on its side will cause the internal damper to not function properly).

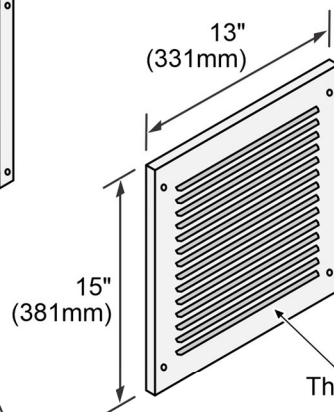


The intake grill is primed and ready to paint.

NOTE: If placing the blower near the floor, make sure the bottom edge is a min. 1-1/2" (39mm) above the finished floor to allow the grill to install.


Wiring Instructions

WARNING: All wiring should be done by a qualified electrician and shall be grounded in accordance with local codes or in the absence of local codes, with the current National Electric Code ANSI/NFPA 70, or with CSA C22.1 Canadian Electric Code.

Wiring Diagram

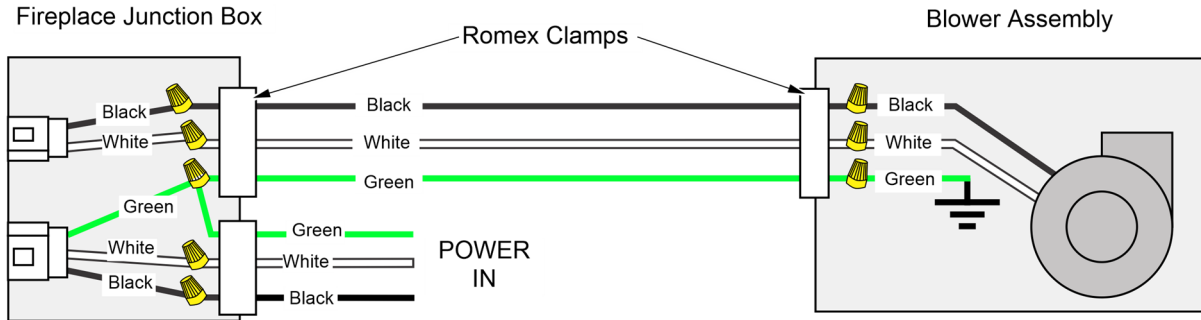


Blower Box Wiring

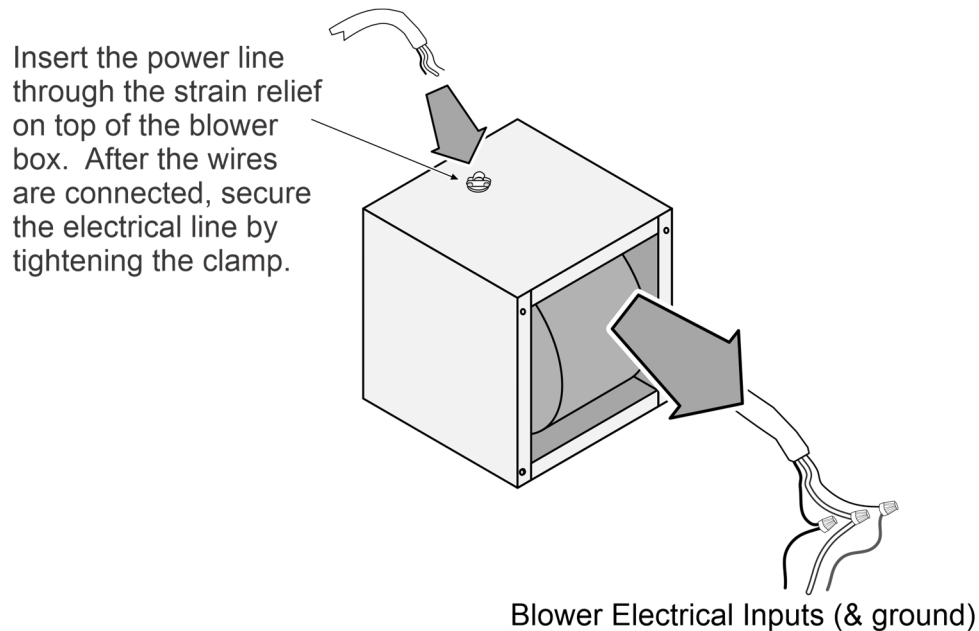

Wiring on the Fireplace Junction Box

- See manual for details on accessing the junction box.
 - Route the power from the heat exchanger blower to the connector on the fireplace as shown below.
- NOTE:** The ground wire from the blower should be connected to the ground wire from the power in.

DaVinci HeatSmart™ Heat Exchanger (AUST)

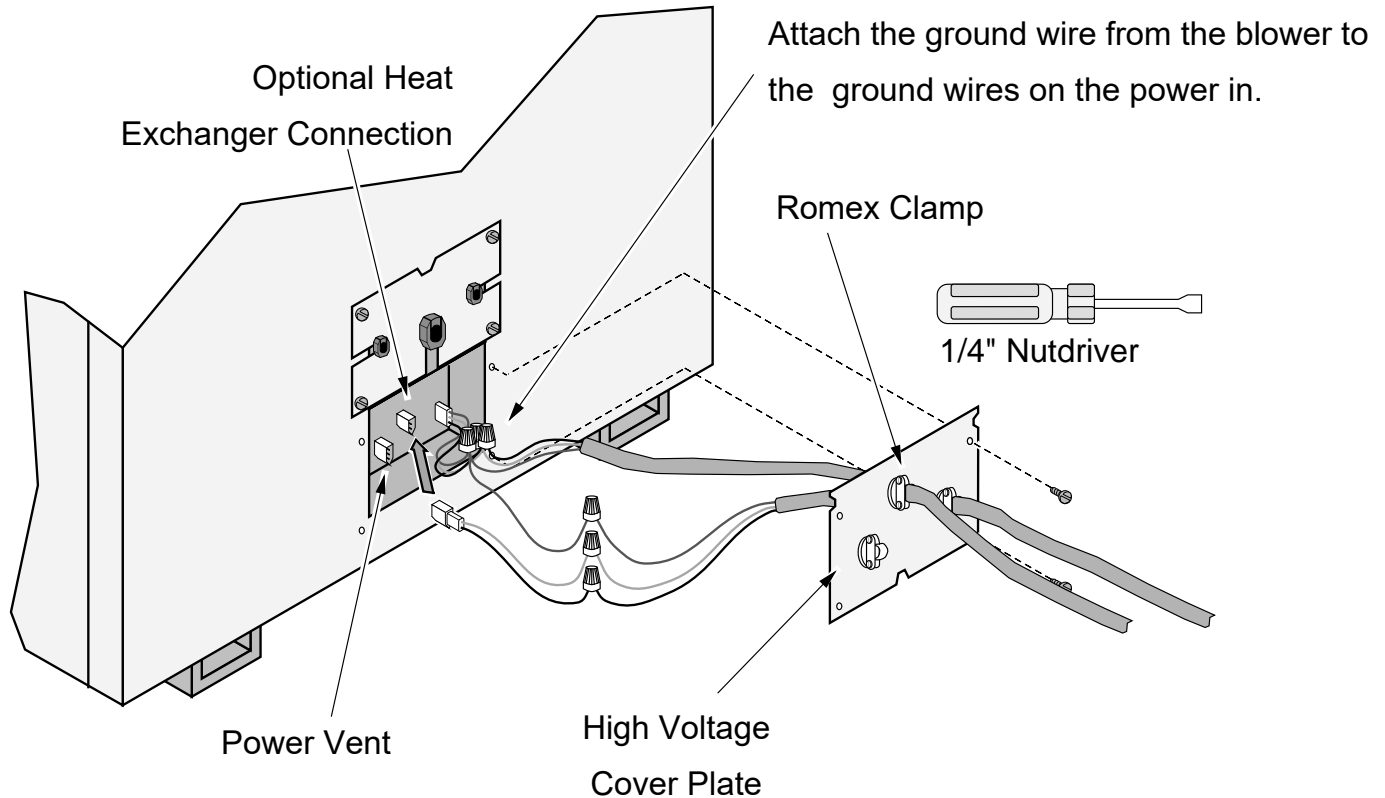

Operating Instructions

- The person operating the fireplace must turn the blower on and off manually using the fireplace TouchSmart™ controller. If the blower is left on and the fireplace is turned off, the heat exchanger will turn off as well and will come back on at the last setting when the fireplace is turned back on.
- Use the touch screen to control the blower speed (see manual for details).

Maintenance Instructions

- Once a year the grill should be removed and the blower area cleaned. Use a vacuum to clean around the squirrel-cage blower, being careful not to damage any of the blades.