



Linear Fireplace Birch Log Set – PB / HO

Installation Instructions (sku# 94500974)

Compatibility

ProBuilder Linear Fireplaces			
	42 ProBuilder Linear	54 ProBuilder Linear	72 ProBuilder Linear
MV	SN# 3220-000805 or later	SN# 3221-000311 or later	SN# 3222-000251 or later
GSB2/GSR2	SN# 3217-002083 or later	SN# 3218-001010 or later	SN# 3219-001043 or later

NOTE: If using this log set kit with a ProBuilder fireplace prior to the above SN#'s, you will need to purchase a replacement media tray (see part numbers below).

- 42 ProBuilder Linear Media Tray – sku# 250-05352
- 54 ProBuilder Linear Media Tray – sku# 250-05353
- 72 ProBuilder Linear Media Tray – sku# 250-05354







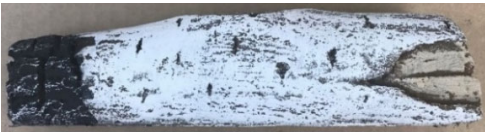









HO Linear Fireplaces

- 3615 HO GSR2 - SN# 3213-003633 or later
- 4415 HO GSR2 - SN# 3212-012115 or later
- 4415 HO ST GSR2 - SN# 3216-001942 or later
- 6015 HO GSR2 - SN# 3214-007337 or later

Table of Contents

Compatibility	1
Packing List	2
Tools Required	3
Installation Notes	3
42 ProBuilder	4
42 ProBuilder - Preparing the Media Tray	4
42 ProBuilder - Overview:	5
Log Installation - 42 ProBuilder	5
54 ProBuilder	12
54 ProBuilder - Preparing the Media Tray	12
54 ProBuilder - Overview:	13
54 ProBuilder - Log Installation	13
72 ProBuilder	21
Preparing the Media Tray – 72 ProBuilder	21
72 ProBuilder - Overview:	22
72 ProBuilder - Log Installation	22
3615 HO	31
3615 HO - Preparing the Media Tray	31
3615 HO - Overview:	32
3615 HO - Log Installation	32
4415 HO	39
4415 HO - Preparing the Media Tray	39
4415 HO - Overview:	40
4415 HO - Log Install	40
6015 HO	48
6015 HO - Preparing the Media Tray	48
6015 HO - Overview:	49
6015 HO - Log Installation	49
4415 HO ST	59
4415 HO ST - Preparing the Media Tray	59
4415 HO ST - Overview:	60
4415 HO ST - Log Installation	60
Crushed Glass Installation (see manual for additional details)	69
Replacement Part Numbers	70

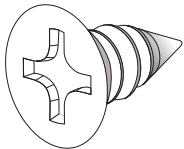Packing List

Log #1 (1) - 	Log #2 (1) - 
Log #3 (1) - 	Log #4 (1) - 
Log #5 (1) - 	Log #6 (1) - 
Log #7 (1) - 	Log #8 (1) - 
Log #9 (1) - 	Stone #10 (2) - 
Stone #13 (2) - 	Stone #32 (1) - 
Stone #35 (1) - 	Log Placement Plates (2) - 
Log Locating Pins (4) - 	Screws - 8x3/8" – Black (4) 



Linear Fireplace Birch Log Set – PB / HO

Installation Instructions (sku# 94500974)

Tools Required

- Philips Screwdriver

Installation Notes



WARNINGS:

- Make sure the gas control valve is OFF and the heater is cool prior to conducting service.
- Failure to position the parts in accordance with these diagrams or failure to use only parts specifically approved with this appliance may result in property damage or personal injury.



HINTS:

- The fireplace should be in place, with the gas line and vent attached and the firebacks installed (see owner's manual for further details).
- If using propane (LP), convert the appliance before installing the logs (see the owner's manual for details).



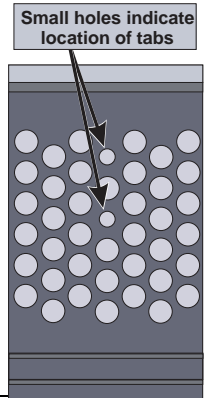
ORDER OF INSTALLATION:

- If converting to LP (propane), convert the appliance prior to installing the log set.
- The fireplace should be in place, with the gas line and vent attached and the firebacks installed (see owner's manual for further details).

42 ProBuilder

42 ProBuilder - Preparing the Media Tray

1. Remove the glass frame assembly to gain access to the firebox (see manual for details).
2. The map below shows the location of the log and stone locating tabs in relation to the media tray. Look in the approximate location indicated and you will notice holes that are slightly smaller than the others. The smaller holes will receive the screws that secure the log locating tabs to the media tray.




HINTS:

- Lay all the locating brackets in their approximate location and orientation. Then go back with a flashlight and screwdriver (with screws) to locate the attachment holes and secure the brackets.
- Do not to overtighten the screws when securing the log/stone locating tabs to the media tray.



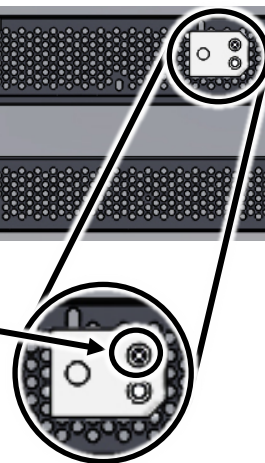NOTE: Only (1) screw is used to secure this clip to the media tray. The proper hole must be used as indicated.




42 ProBuilder - Overview:

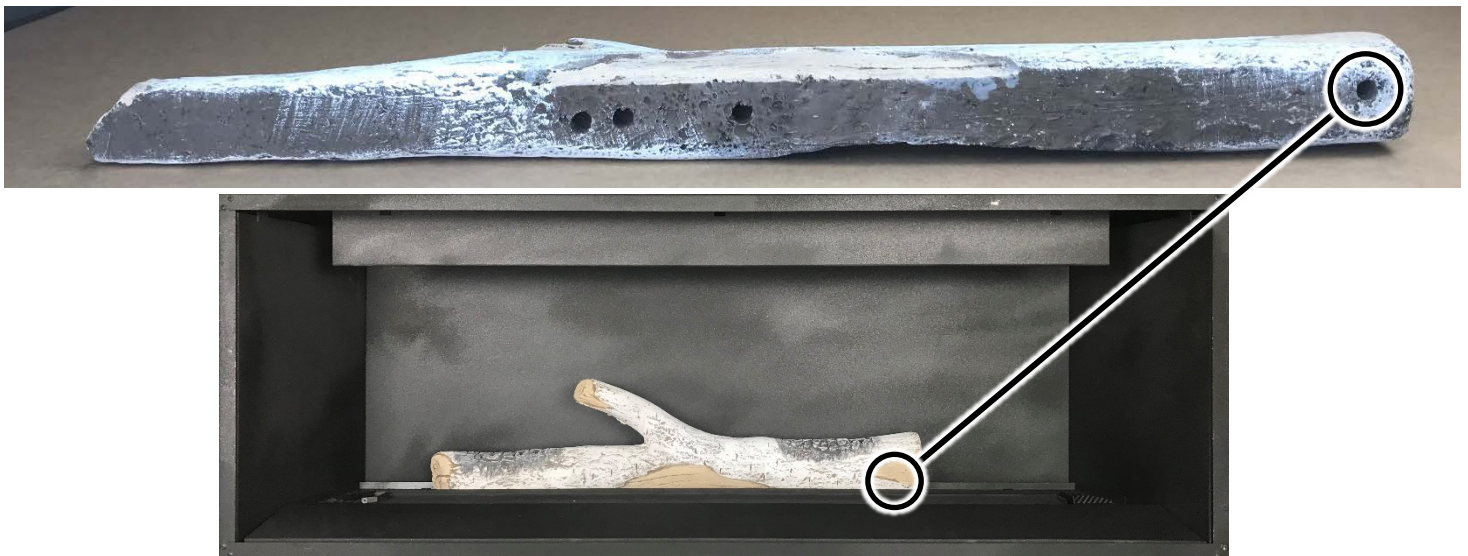
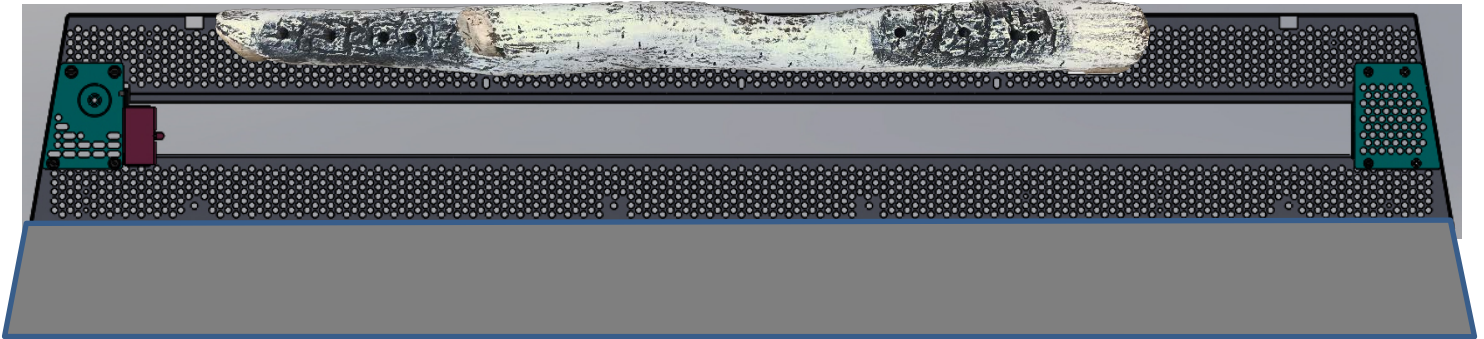
Logs used for this installation: #2, #4, #5, #8, #9

Stones used for this installation: #10, #13, #32



Log Installation - 42 ProBuilder


-  **The logs are fragile, especially after being exposed to heat.**
- Install Log 2 as shown below. The pins on the log locating plates insert into the holes on the log bottom of the log.



Linear Fireplace Birch Log Set – PB / HO



Installation Instructions (sku# 94500974)

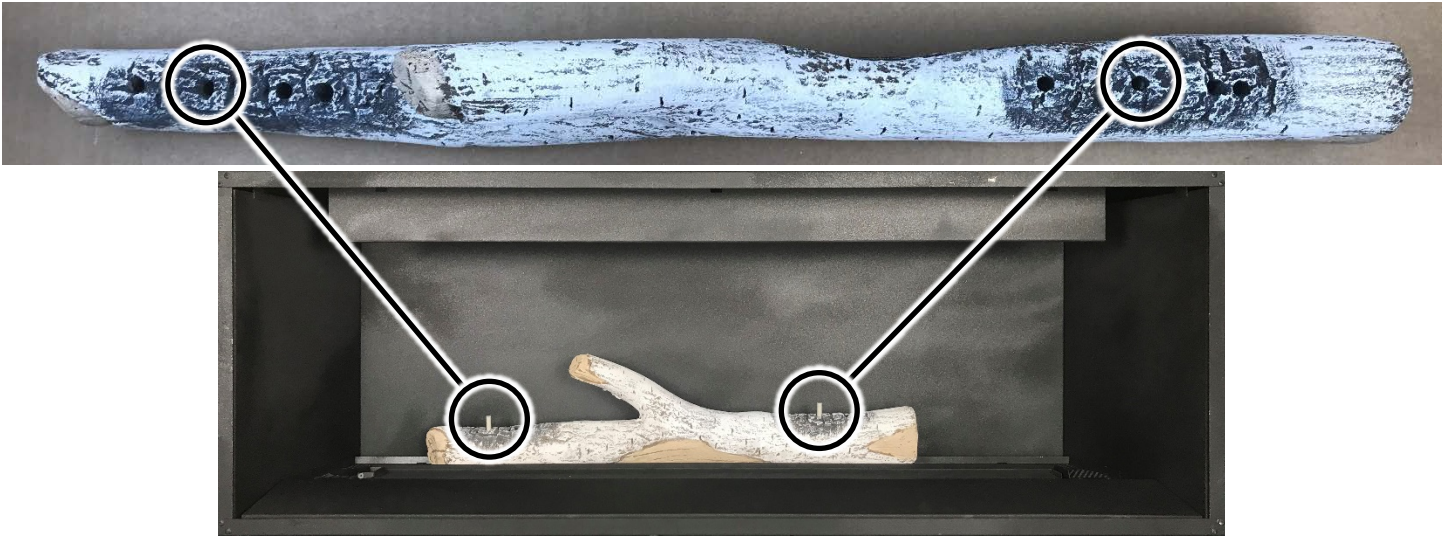- Install (2) log locating pins in the appropriate holes on the top of Log #2. For this application, install the left pin in the second hole from the left. Install the right pin in the third hole from the right.




42 ProBuilder - Log Installation - continued

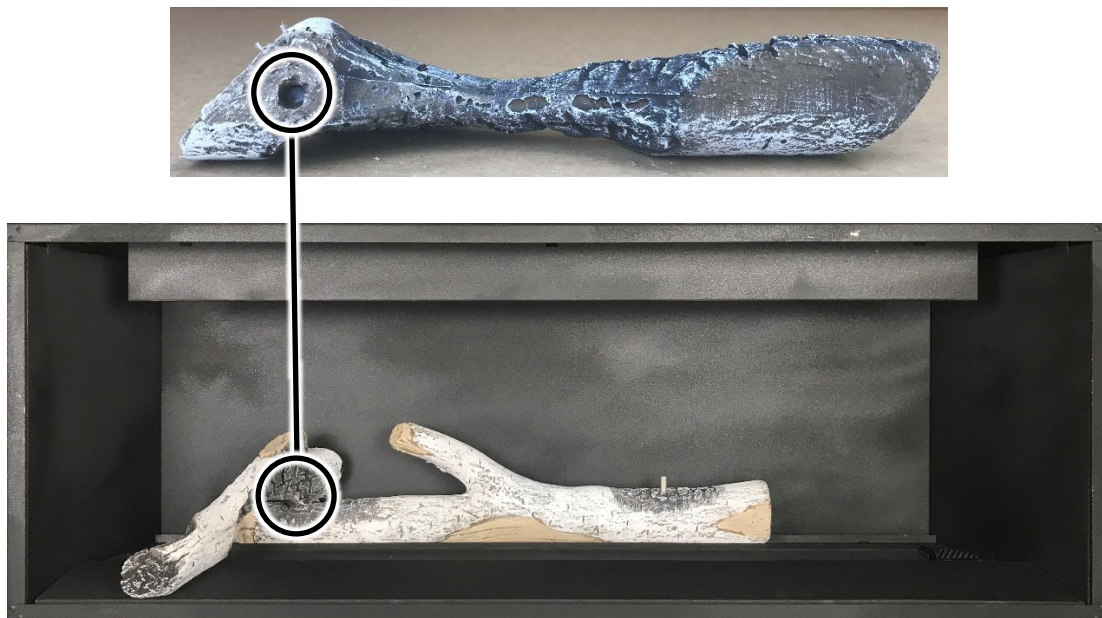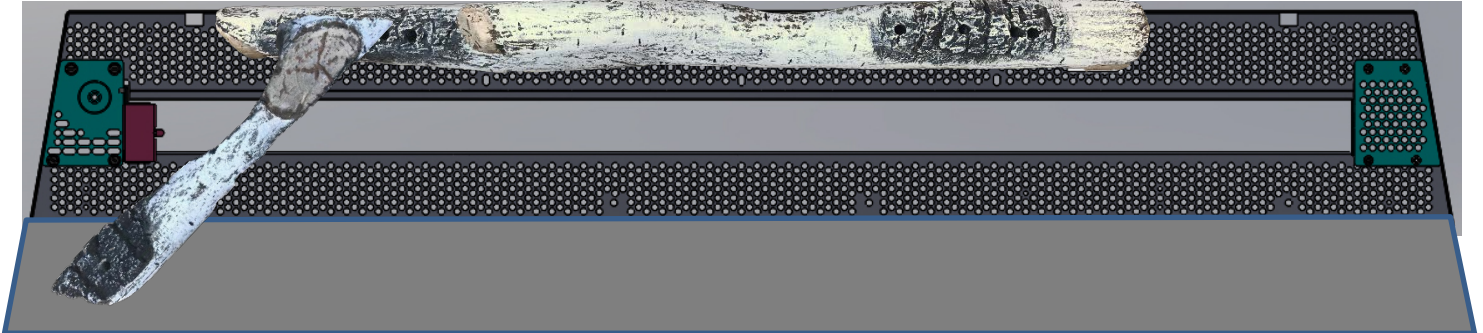- Install Log 5 as shown below. Place the hole in the bottom of Log 5 on the left log locating pin installed on Log 2 in the previous step.




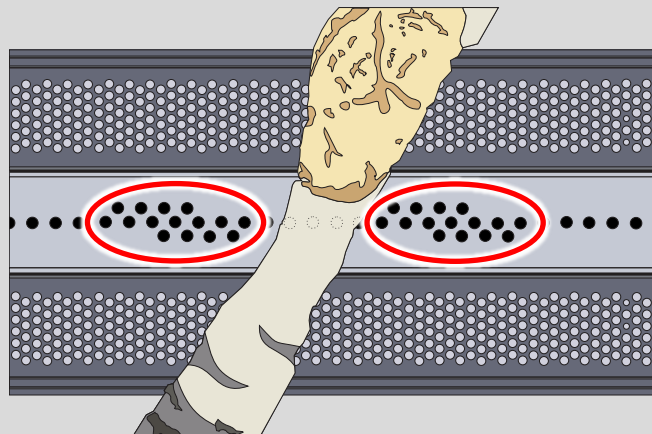NOTE: When a log placement requires the log to span the burner, make sure the part of the log above the burner is not directly above a cluster of holes (see illustration below).




42 ProBuilder - Log Installation - continued

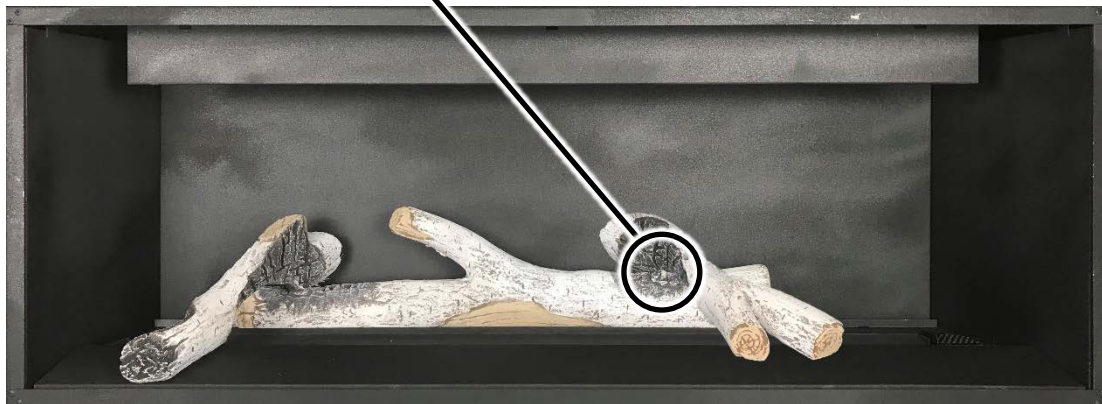- Install Log 8 as shown below. Place the hole in the bottom of Log 8 on the right log locating pin installed on Log 2 in step 2.



42 ProBuilder - Log Installation - continued

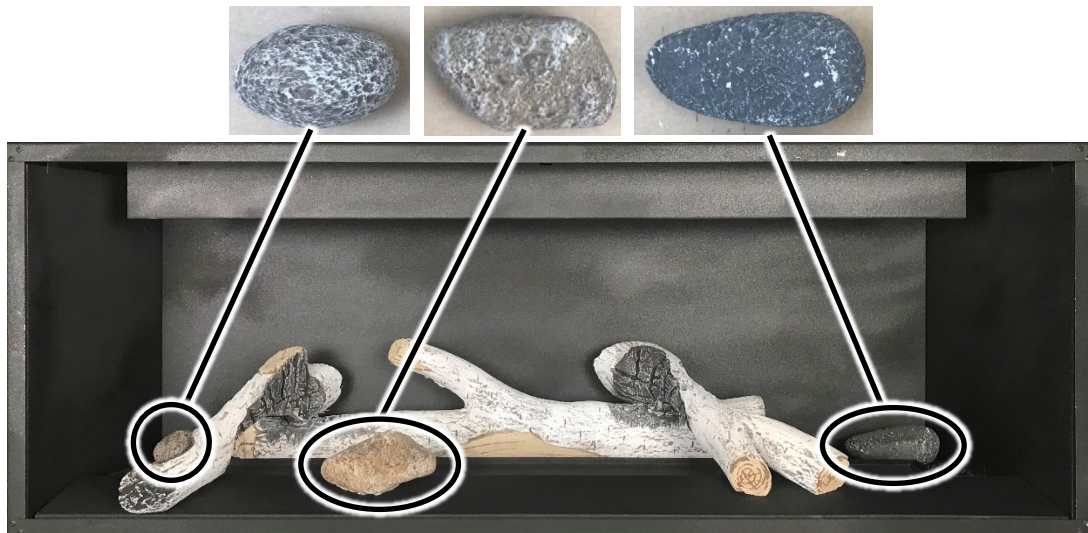- Install stones #10, #13, and #32 as shown below. Make sure the stones do not rest over the burner.



42 ProBuilder - Log Installation - continued

- Install Log #4 as shown below. The #4 log rests on the angled media tray skirt rather than the media tray. The left end of the log sits on top of the #32 stone.



42 ProBuilder - Log Installation - continued

- Install Log #9 as shown below. There are no locating pins for this log. The left end of the log rests on the #8 log and the right end rests on the media tray. Make sure the log does not cause any flame impingement.

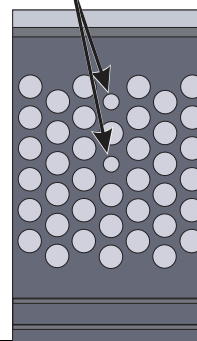


54 ProBuilder

54 ProBuilder - Preparing the Media Tray


1. Remove the glass frame assembly to gain access to the firebox (see manual for details).
2. The map below shows the location of the log and stone locating tabs in relation to the media tray.
Look in the approximate location indicated and you will notice holes that are slightly smaller than the others. The smaller holes will receive the screws that secure the log locating tabs to the media tray.

Small holes indicate
location of tabs




HINTS:

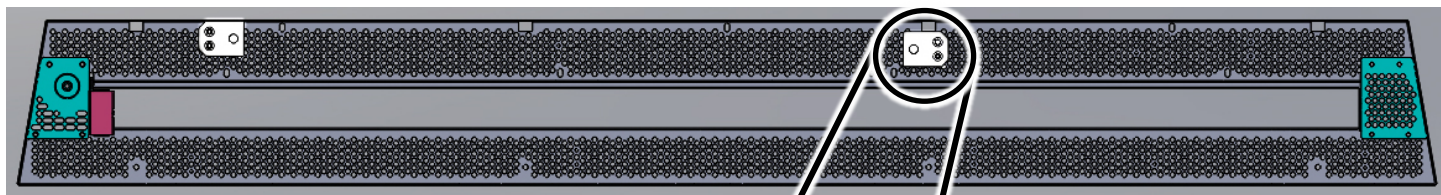- Lay all the locating brackets in their approximate location and orientation. Then go back with a flashlight and screwdriver (with screws) to locate the attachment holes and secure the brackets.
- Do not to overtighten the screws when securing the log/stone locating tabs to the media tray.



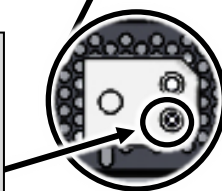NOTE: Only (1) screw is used to secure this clip to the media tray. The proper hole must be used as indicated.



54 ProBuilder - Overview:

Logs used for this installation: #1, #2, #3, #4, #5, #7, #8

Stones used for this installation: #10, #32, #35

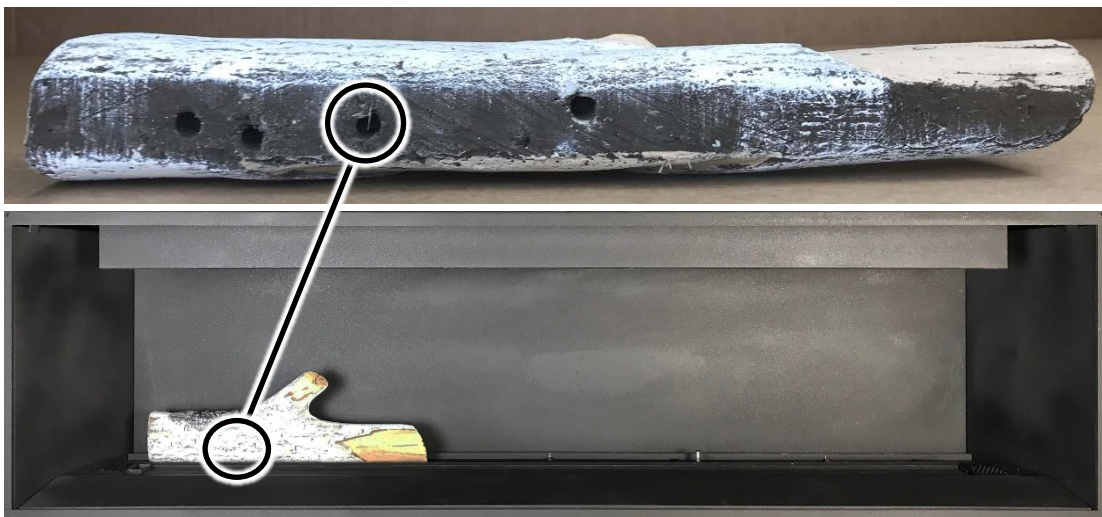
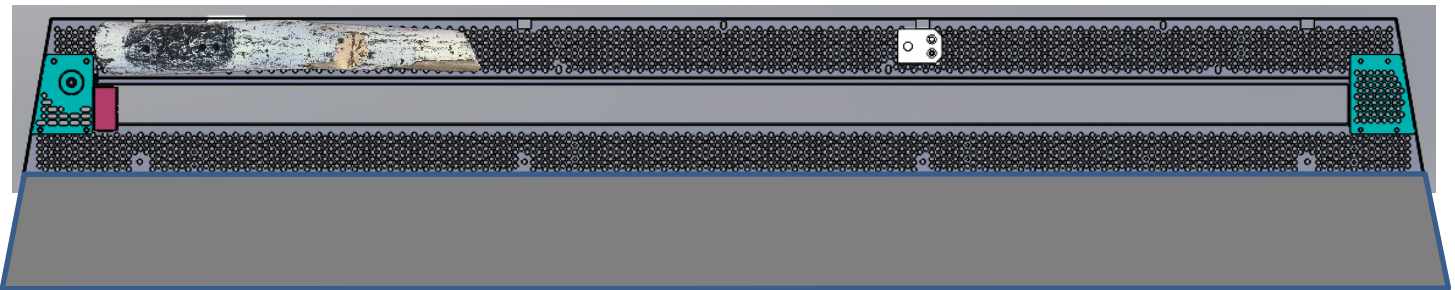


54 ProBuilder - Log Installation





The logs are fragile, especially after being exposed to heat.

- Install log #1 as shown below. The post on the left log support inserts into the third hole from the left on the bottom of the log.



54 ProBuilder - Log Installation - continued

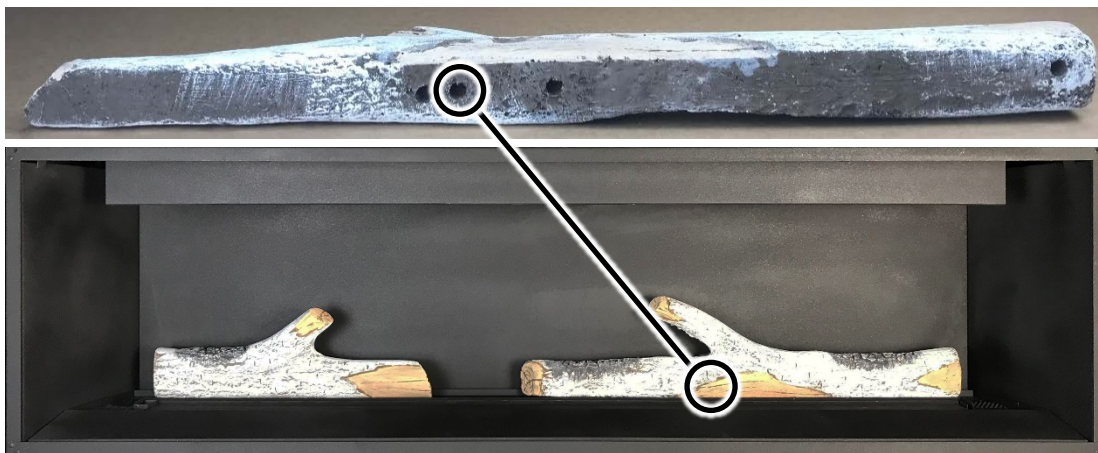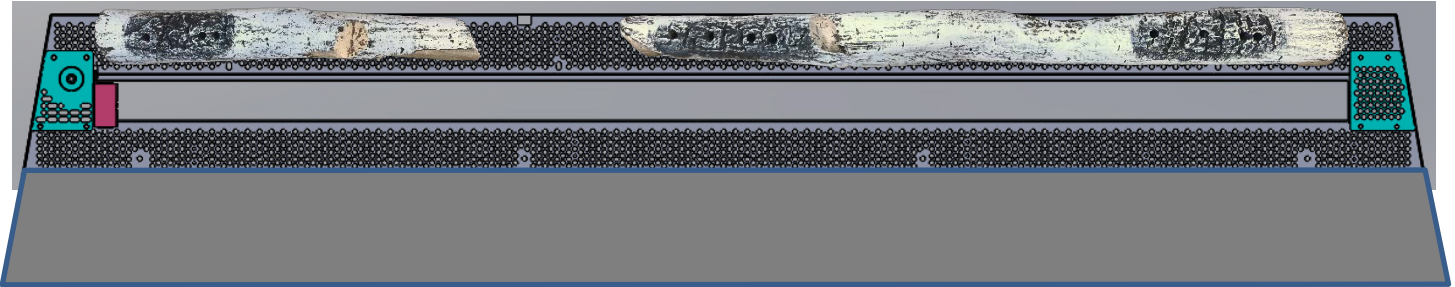- Install log #2 as shown below. The post on the right log support inserts into the third hole from the right on the bottom of the log.




- Install one of the included Log Locating Pins into the second hole from the left on the top of log #1 as shown below.




54 ProBuilder - Log Installation - continued

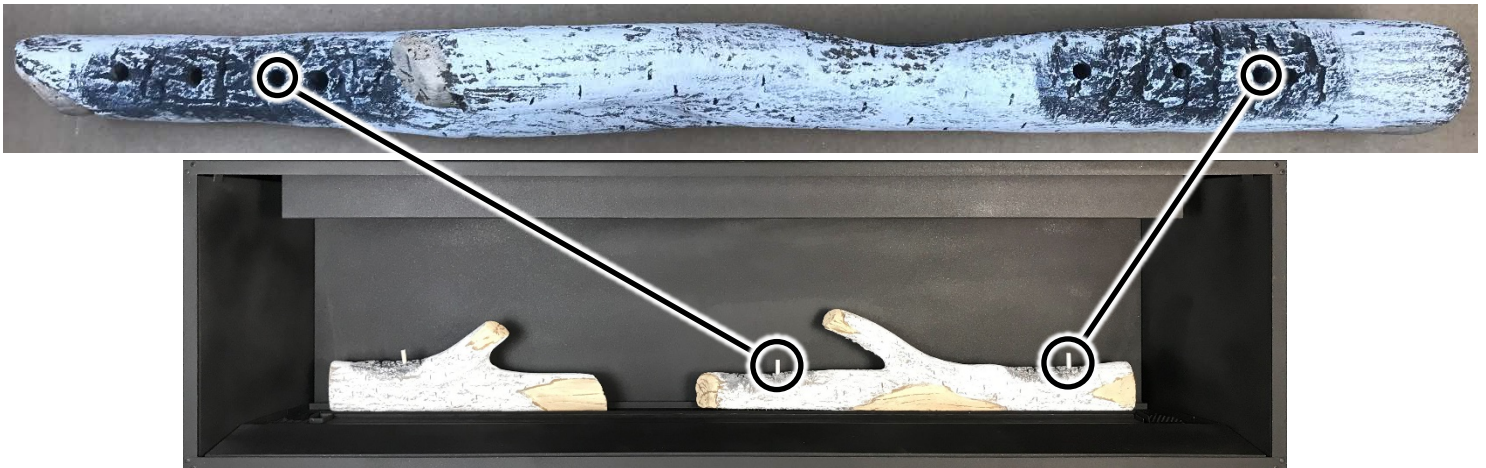
- Install one of the included Log Locating Pins into the second hole from the right on the top of log #2 as shown below. Install a second Log Locating Pin into the third hole from the left on the left of the top of log #2 as shown below.



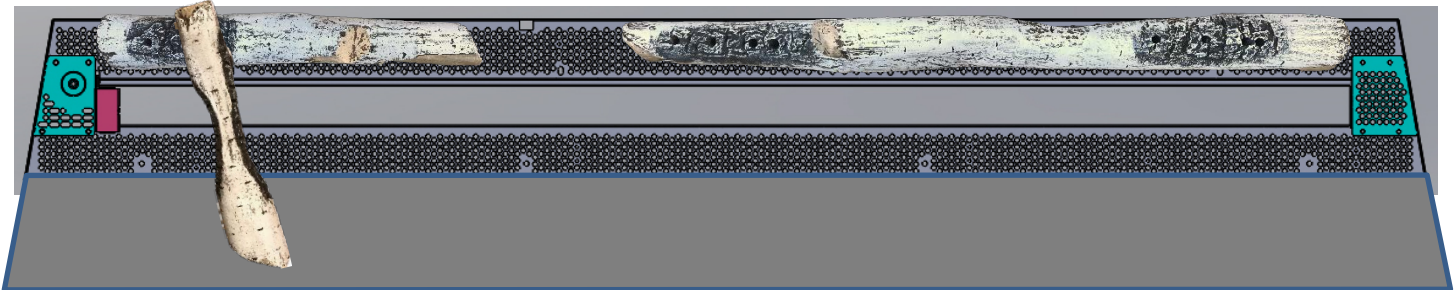- Install Log #3 as shown below. The Log Locating Pin on Log #1 insert into the holes on the bottom of log #3. Log #3 spans the burner (see note regarding placement, below)




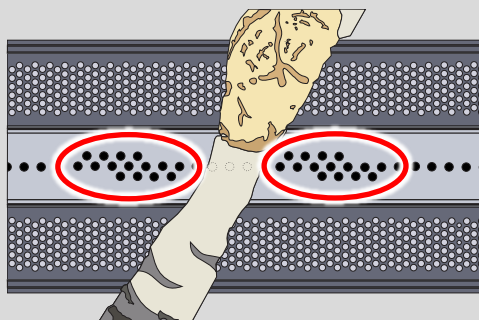NOTE: When a log placement requires the log to span the burner, make sure the part of the log above the burner is not directly above a cluster of holes (see illustration below).



54 ProBuilder - Log Installation - continued

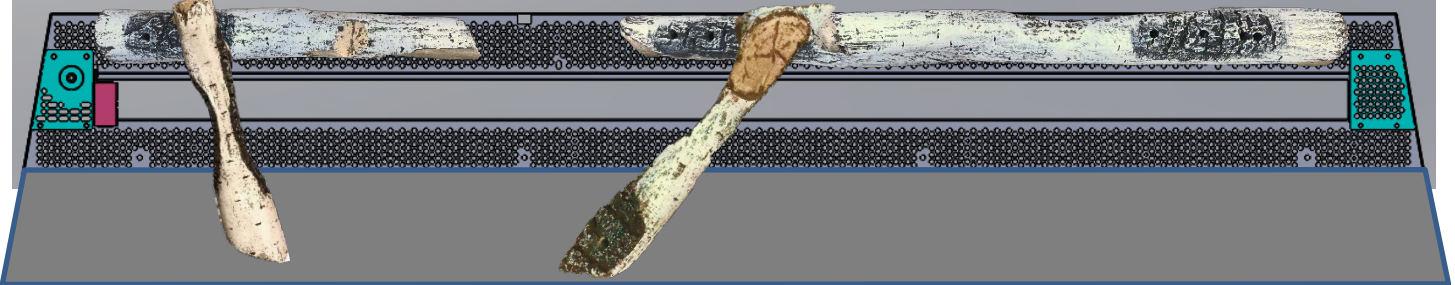- Install Log #5 as shown below. The Log Locating pin on left of Log #2 insert into the hole on the bottom of log #5. Log #5 spans the burner and the left end of the log points approximately 45° to the left. Reference the note from the previous step regarding placement of the log over the burner.



- Install one of the included Log Locating Pins into the hole on the left, top of log #5 as shown below.



54 ProBuilder - Log Installation – continued

- Install Log #7 as shown below. The Log Locating pin on the left of Log #5 insert into the holes on the bottom of log #7. Log #7 does NOT span the burner. The left end of the log rests on the front portion of the media tray.



54 ProBuilder - Log Installation - continued

- Install Log #8 as shown below. The Log Locating pin on right of Log #2 insert into the holes on the bottom of log #8.



- Install Stone #35 as shown below. The stone rests on the angled media tray skirt.

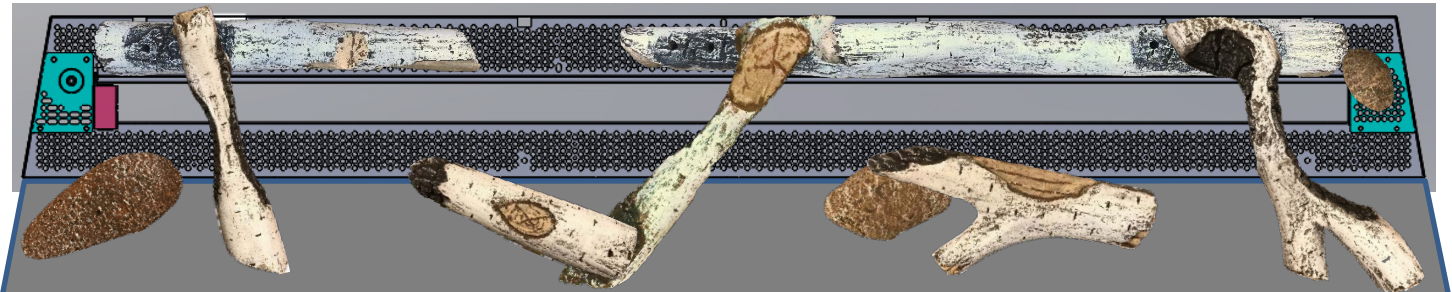


54 ProBuilder - Log Installation - continued

- Install Stone #32 as shown below. The stone rests on the angled media tray skirt.



- Install Stone #10 as shown below. The stone rests on the back corner of the media tray.



54 ProBuilder - Log Installation - continued

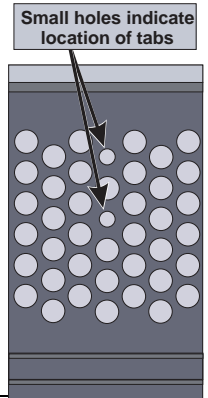
- Install log #4 as shown below. The left end of the log rests on Stone #32 and the rest of the log sits on the angled media tray.



72 ProBuilder


Preparing the Media Tray – 72 ProBuilder

1. Remove the glass frame assembly to gain access to the firebox (see manual for details).
2. The map below shows the location of the log and stone locating tabs in relation to the media tray.
Look in the approximate location indicated and you will notice holes that are slightly smaller than the others. The smaller holes will receive the screws that secure the log locating tabs to the media tray.



HINTS:

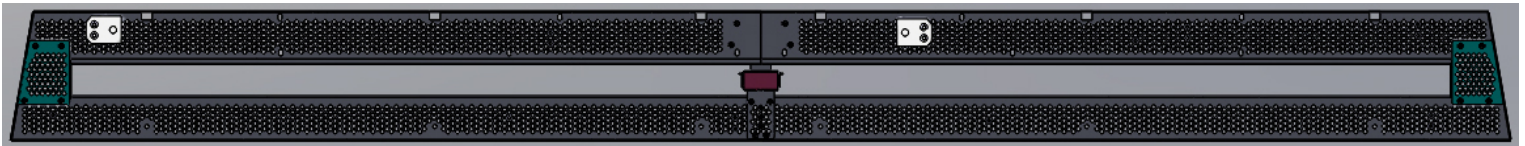- Lay all the locating brackets in their approximate location and orientation. Then go back with a flashlight and screwdriver (with screws) to locate the attachment holes and secure the brackets.
- Do not to overtighten the screws when securing the log/stone locating tabs to the media tray.



72 ProBuilder - Overview:

Logs used for this installation: #1, #2, #3, #4, #5, #6, #7, #8, #9

Stones used for this installation: #10, #10, #13, #13, #32, #35

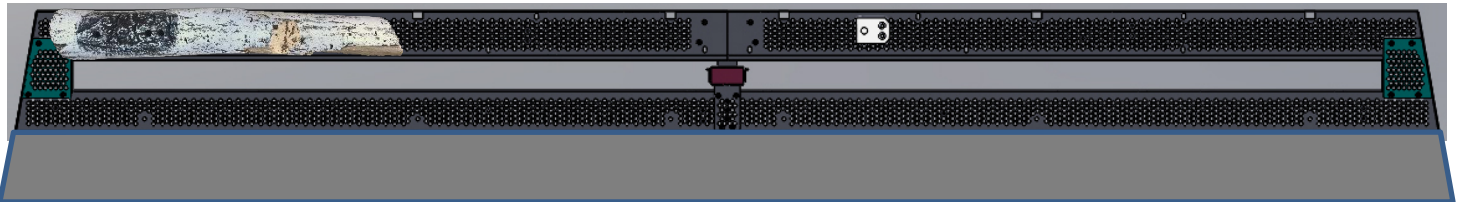


72 ProBuilder - Log Installation




The logs are fragile, especially after being exposed to heat.

- Install Log #1 as shown below. The post on the left log support inserts into the hole on the bottom of the Log #1.



72 ProBuilder - Log Installation - continued

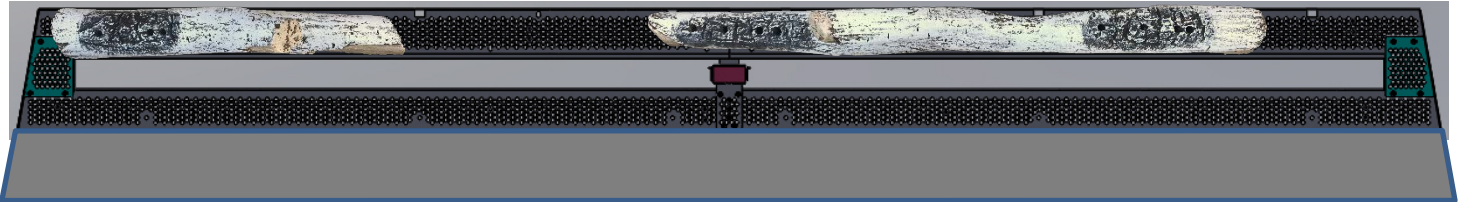- Install Log #2 as shown below. The post on the right log support inserts into the far left hole on the bottom of Log #2.



- Install one of the included Log Locating Pins into the second hole from the left on the top of log #1 as shown below.



72 ProBuilder - Log Installation - continued

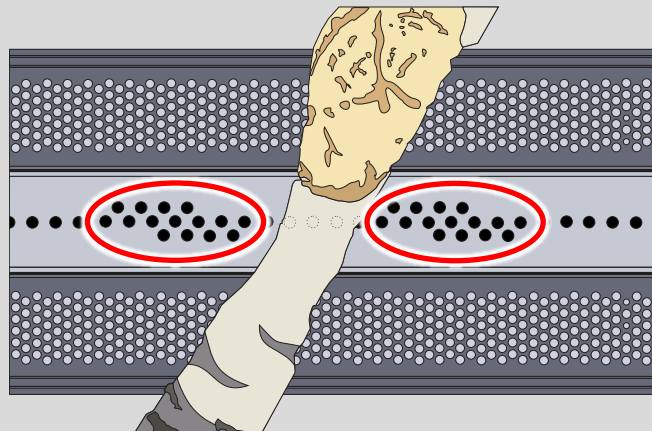
- Install one of the included Log Locating Pins into the far right hole on the top of log #2 as shown below. Install a second Log Locating Pin into the third hole from the left on the left of the top of log #2 as shown below.



- Install Log #3 as shown below. Place the hole in the bottom of Log #3 on the left Log Locating Pin installed on Log #1. Log #3 spans the burner (see note regarding placement, below)



NOTE: When a log placement requires the log to span the burner, make sure the part of the log above the burner is not directly above a cluster of holes (see illustration below).



72 ProBuilder - Log Installation - continued

- Install Log #5 as shown below. The Log Locating pin on the left of Log #1 insert into the hole on the bottom of log #5. Log #5 spans the burner and the left end of the log points approximately 45° to the left. Reference the note from the previous step regarding placement of the log over the burner.



- Install one of the included Log Locating Pins into the hole on the left, top of log #5 as shown below.



- Install Log #6 as shown below. The wide end of the log faces the front of the fireplace. The Log Locating pin on left of Log #5 inserts into the hole on the bottom of log #6. Log #6 spans the burner.

NOTE: When a log placement requires the log to span the burner, make sure the part of the log above the burner is not directly above a cluster of holes



72 ProBuilder - Log Installation - continued

- Place a #10 stone in the right, rear corner as shown below.



- Install Log #8 as shown below. The Log Locating pin on right of Log #2 insert into the hole on the bottom of log #8. Log #8 spans the burner.

NOTE: When a log placement requires the log to span the burner, make sure the part of the log above the burner is not directly above a cluster of holes.



72 ProBuilder - Log Installation - continued

- Install Log #9 as shown below. There are no locating pins for this log. This log does not span the burner. The left end of the log rests on the #8 log and the right end rests on the media tray. Make sure the log does not cause any flame impingement.



- Place the second #10 stone on the rear media tray as shown below. Exact placement is not critical; just make sure it does not create any flame impingement by being placed too close to the burner.



72 ProBuilder - Log Installation - continued

- Place a #13 stone on the angled media tray skirt as shown below.



- Place Stone #32 on the angled media tray skirt as shown below.



Linear Fireplace Birch Log Set – PB / HO

Installation Instructions (sku# 94500974)

72 ProBuilder - Log Installation - continued

- Install Log #4 as shown below. The #4 log rests on the angled media tray skirt rather than the media tray. The left end of the log sits on top of the #32 stone.



- Place Stone #35 as shown below. The stone rests on the angled media tray skirt.



72 ProBuilder - Log Installation - continued

- Install Log #7 as shown below. The charred, right end of the log rests on stone #35 and the left end of the log rests on the angled media tray skirt.



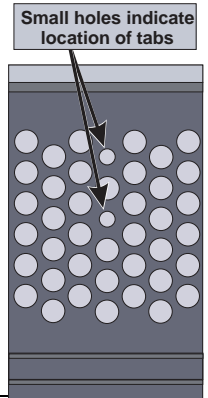
- Place the second #13 stone on the media tray skirt as shown below. Exact placement is not critical.



3615 HO


3615 HO - Preparing the Media Tray

1. Remove the glass frame assembly to gain access to the firebox (see manual for details).
2. The map below shows the location of the log and stone locating tabs in relation to the media tray.
Look in the approximate location indicated and you will notice holes that are slightly smaller than the others. The smaller holes will receive the screws that secure the log locating tabs to the media tray.



HINTS:

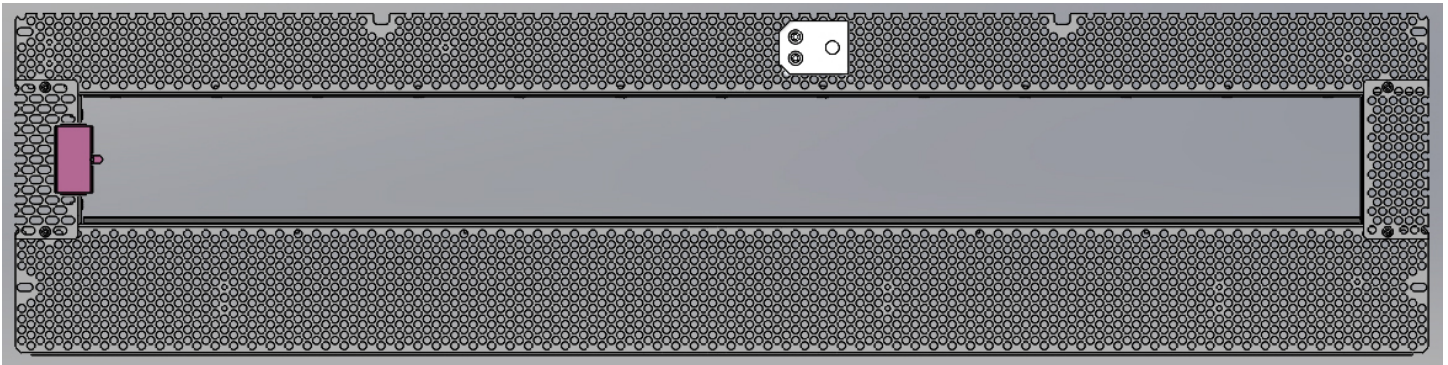- Lay all the locating brackets in their approximate location and orientation. Then go back with a flashlight and screwdriver (with screws) to locate the attachment holes and secure the brackets.
- Do not to overtighten the screws when securing the log/stone locating tabs to the media tray.



3615 HO - Overview:

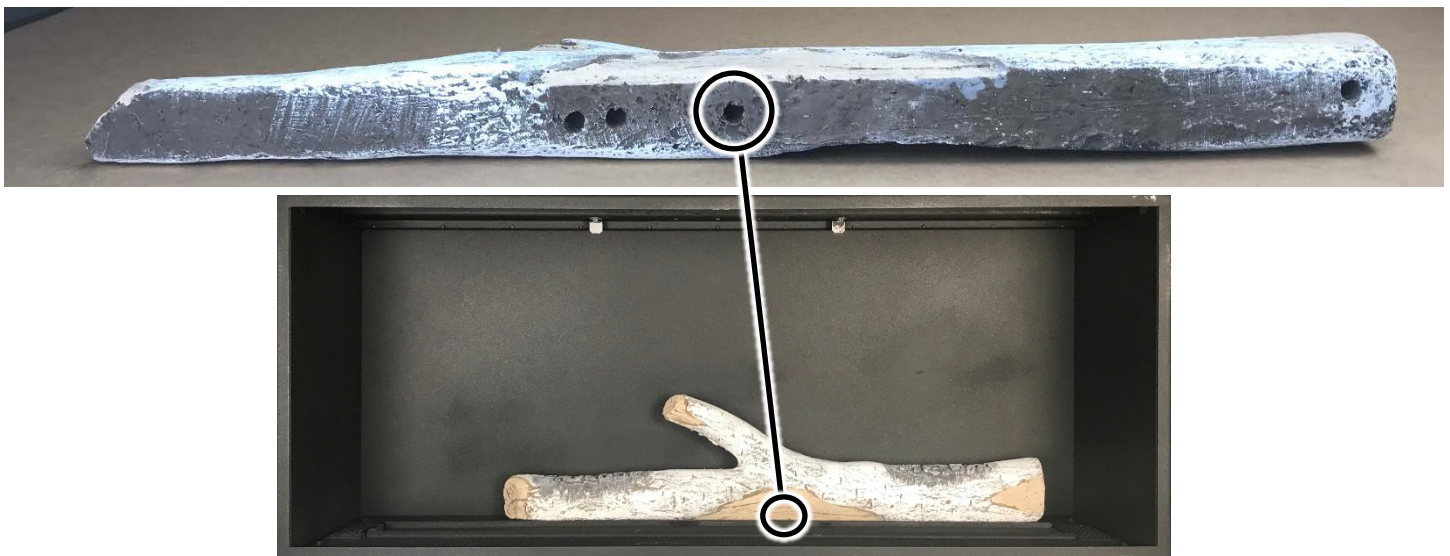
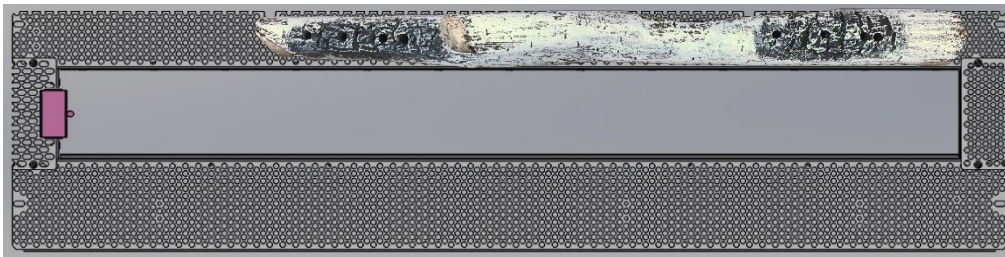
Logs used for this installation: #2, #3, #5, #6, #9

Stones used for this installation: #10, #13, #32




3615 HO - Log Installation

- ⚠ The logs are fragile, especially after being exposed to heat.**
- Install Log #2 as shown below. The post on the left log support inserts into the hole on the bottom of the Log #1.



3615 HO - Log Installation - continued

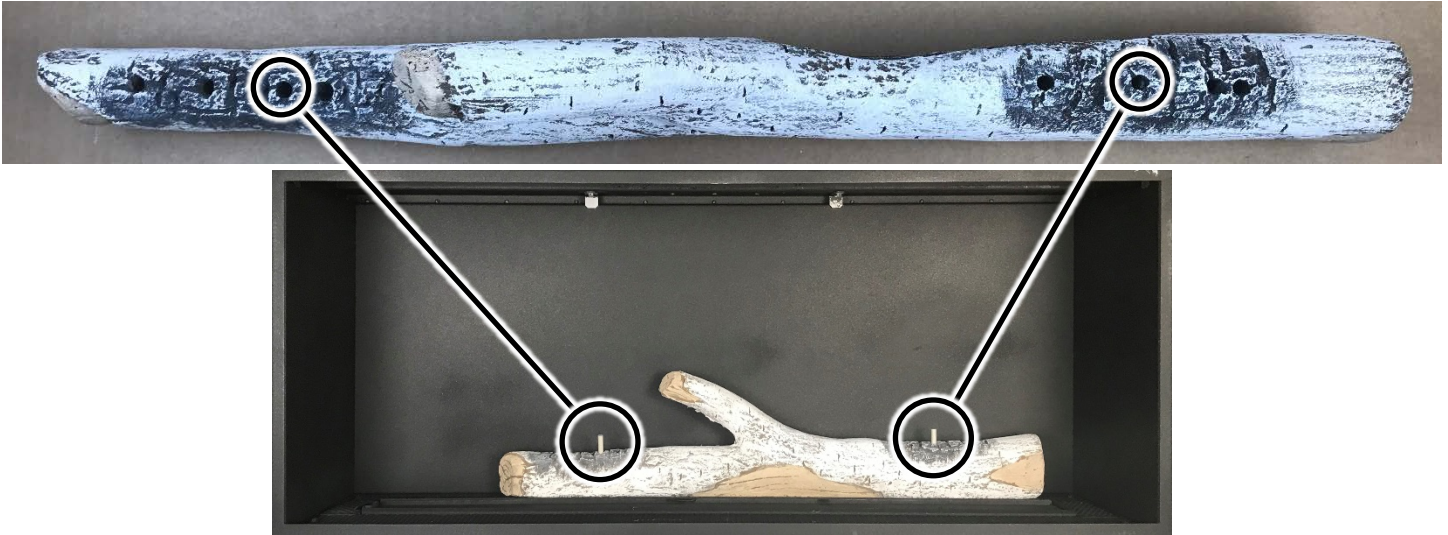- Install (2) log locating pins in the appropriate holes on the top of Log #2. For this application, install the left pin in the third hole from the left. Install the right pin in the third hole from the right.





Linear Fireplace Birch Log Set – PB / HO


Installation Instructions (sku# 94500974)

3615 HO - Log Installation - continued

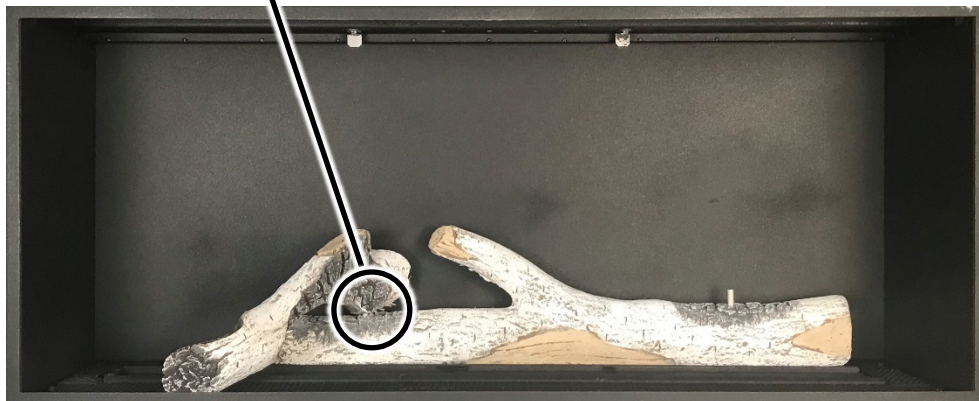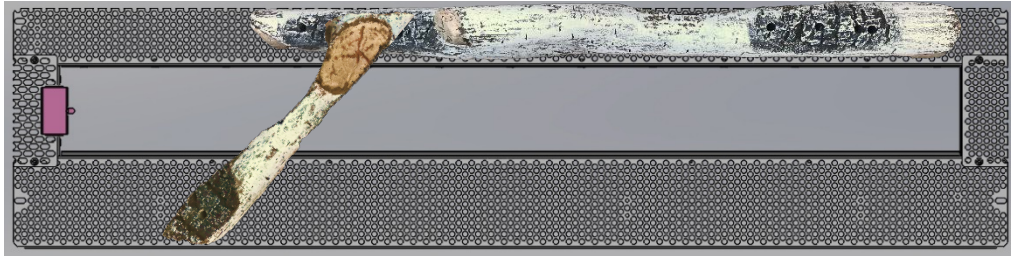- Install Log #5 as shown below. Place the hole in the bottom of Log #5 on the left log locating pin installed on Log #2 in the previous step.



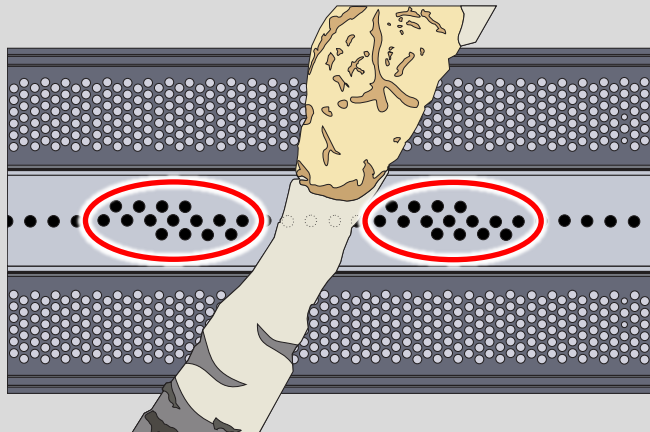NOTE: When a log placement requires the log to span the burner, make sure the part of the log above the burner is not directly above a cluster of holes (see illustration below).




3615 HO - Log Installation - continued

- Install one of the included Log Locating Pins into the hole on the left, top of log #5 as shown below.



- Install Log #6 as shown below. The wide end of the log faces the front of the fireplace. The Log Locating pin on left of Log #5 insert into the hole on the bottom of log #6. Log #6 spans the burner.

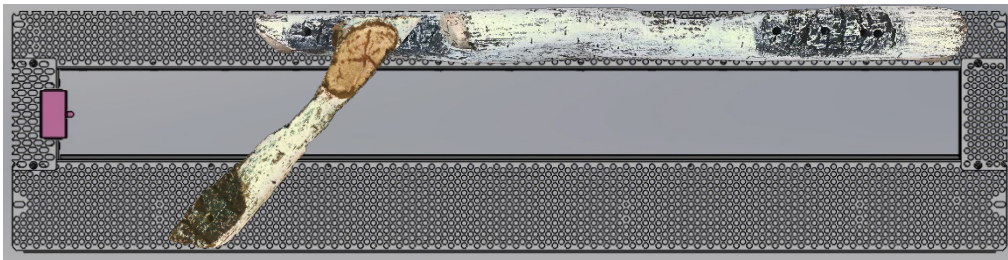
NOTE: When a log placement requires the log to span the burner, make sure the part of the log above the burner is not directly above a cluster of holes




3615 HO - Log Installation - continued

- Install Log #3 as shown below. Place the hole in the bottom of Log #3 on the right Log Locating Pin installed on Log #2. Log #3 spans the burner.

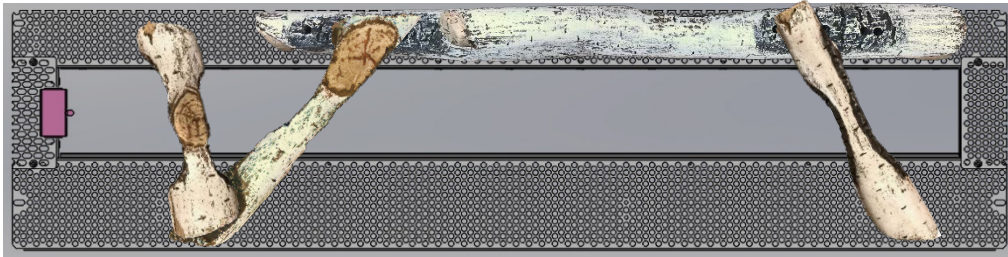NOTE: When a log placement requires the log to span the burner, make sure the part of the log above the burner is not directly above a cluster of holes





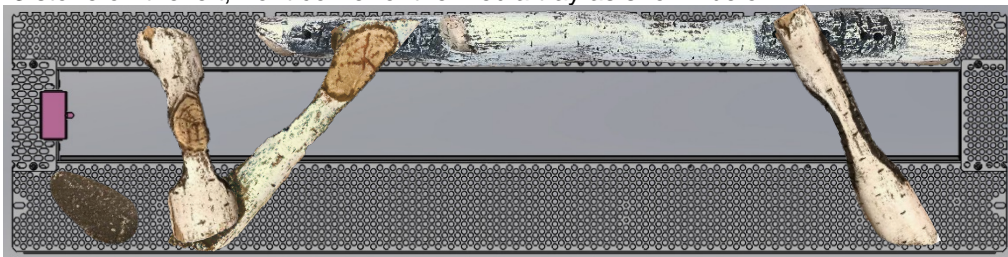- Place a #13 stone on the left, front corner of the media tray as shown below.





3615 HO - Log Installation - continued

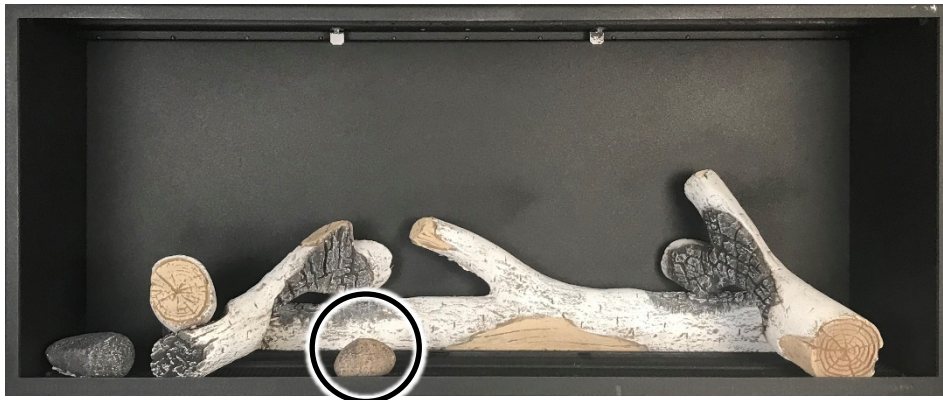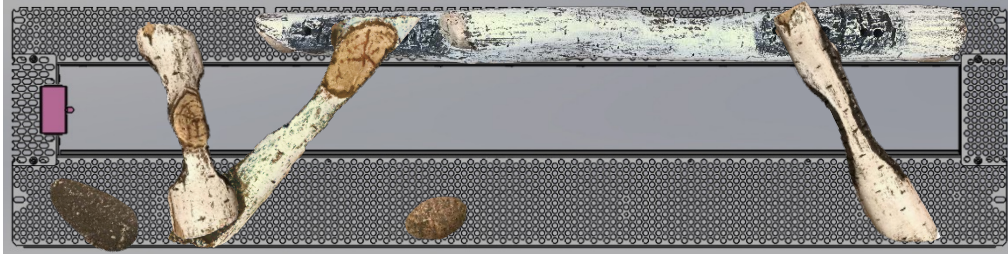- Install Stone #10 on the media tray as shown below. Make sure the stone does not cause any flame impingement.



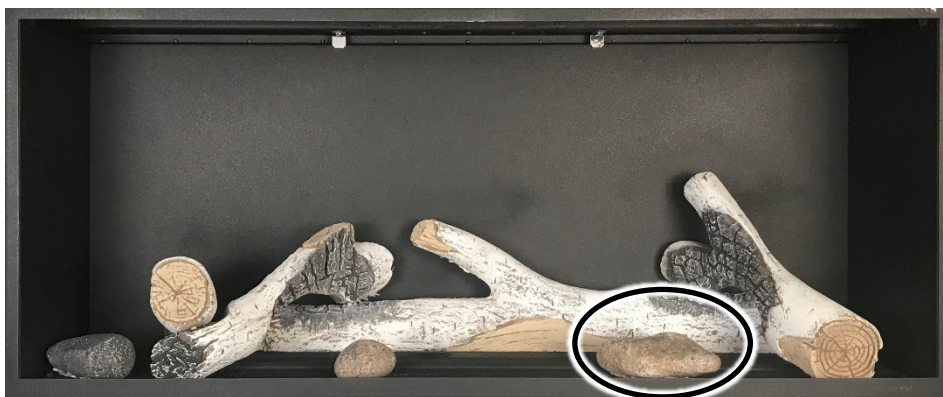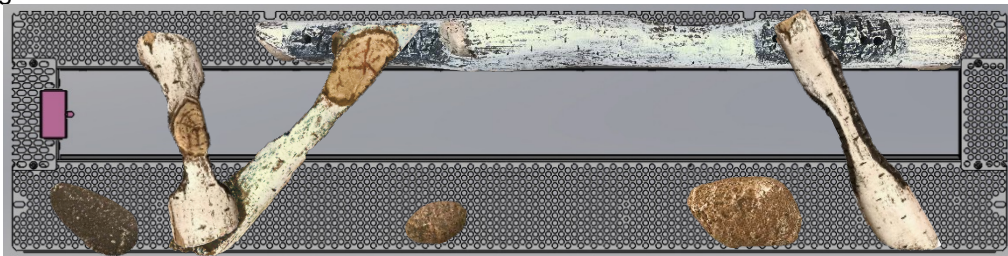- Install Stone #32 on the media tray as shown below. Make sure the stone does not cause any flame impingement.





Linear Fireplace Birch Log Set – PB / HO

Installation Instructions (sku# 94500974)

3615 HO - Log Installation - continued

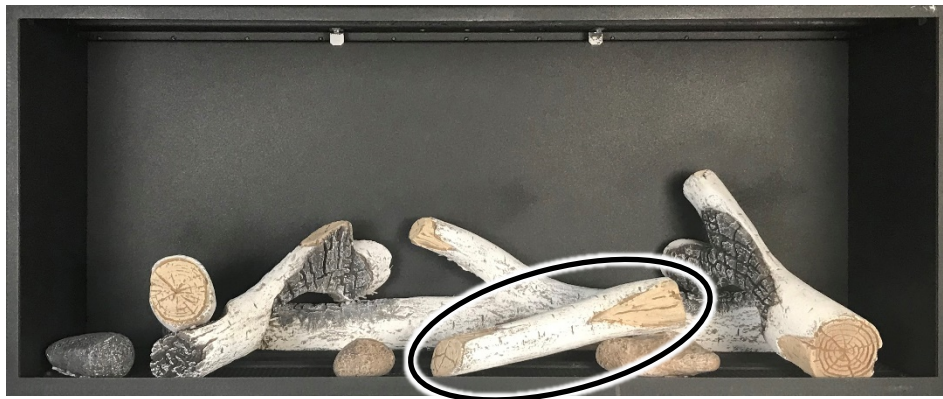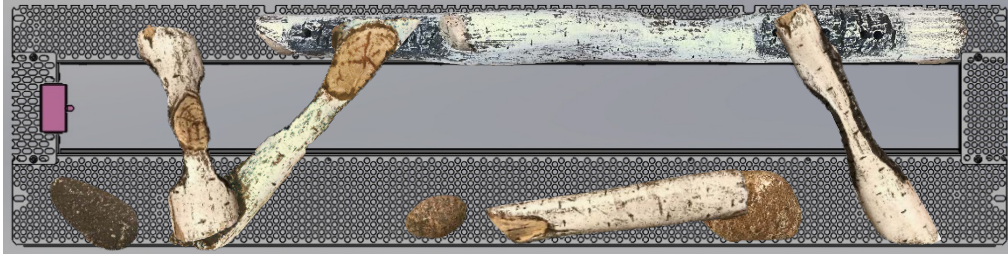
- Install Log #9 as shown below. The right end of the log rests on Stone # 32 and the left end rests on the front portion of the media tray. This log does NOT span the burner. Make sure the stone does not cause any flame impingement.



4415 HO


4415 HO - Preparing the Media Tray

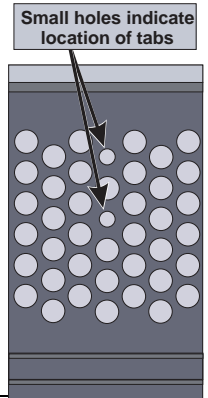1. Remove the glass frame assembly to gain access to the firebox (see manual for details).
2. The map below shows the location of the log and stone locating tabs in relation to the media tray.
Look in the approximate location indicated and you will notice holes that are slightly smaller than the others. The smaller holes will receive the screws that secure the log locating tabs to the media tray.



HINTS:

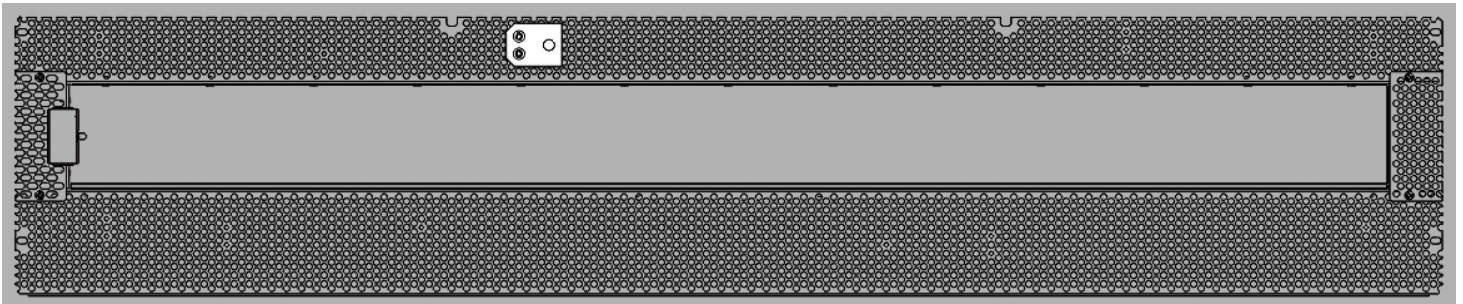- Lay all the locating brackets in their approximate location and orientation. Then go back with a flashlight and screwdriver (with screws) to locate the attachment holes and secure the brackets.
- Do not to overtighten the screws when securing the log/stone locating tabs to the media tray.



4415 HO - Overview:

Logs used for this installation: #2, #5, #6, #7, #8, #9

Stones used for this installation: #10, #10, #32, #35

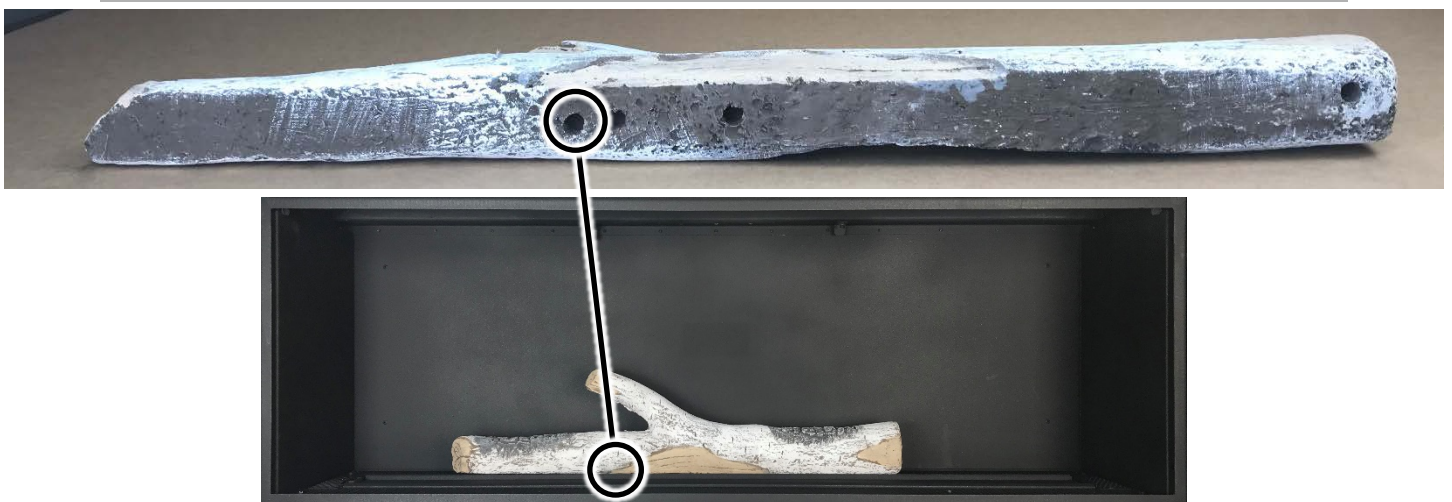
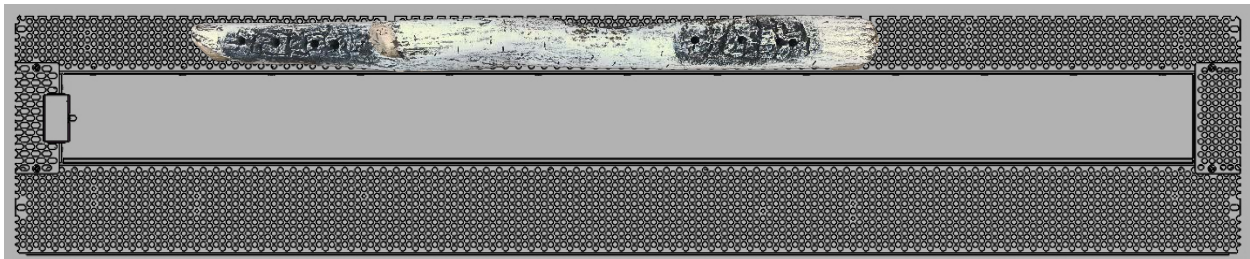


4415 HO - Log Install




The logs are fragile, especially after being exposed to heat.

- Install log #2 as shown below. The post on the log support inserts into the far left hole on the bottom of the log.



4415 HO - Log Installation - continued

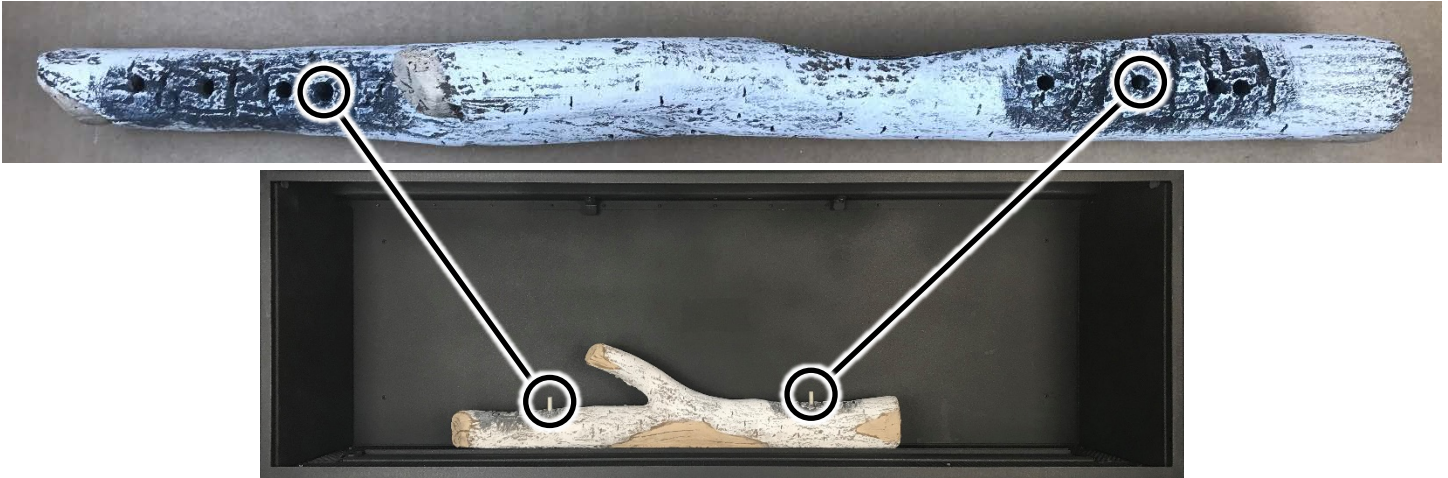- Install (2) log locating pins in the appropriate holes on the top of Log #2. For this application, install the left pin in the fourth hole from the left. Install the right pin in the third hole from the right.




Linear Fireplace Birch Log Set – PB / HO


Installation Instructions (sku# 94500974)

4415 HO - Log Installation - continued

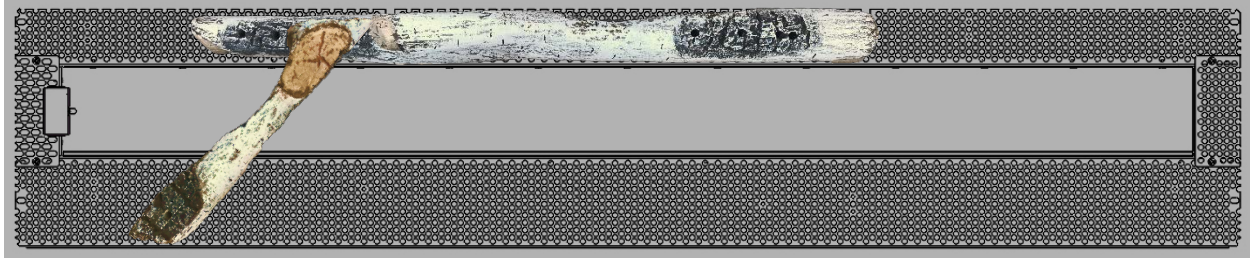- Install Log #5 as shown below. The Log Locating pin on left of Log #2 inserts into the hole on the bottom of log #5. Log #5 spans the burner and the left end of the log points approximately 45° to the left.



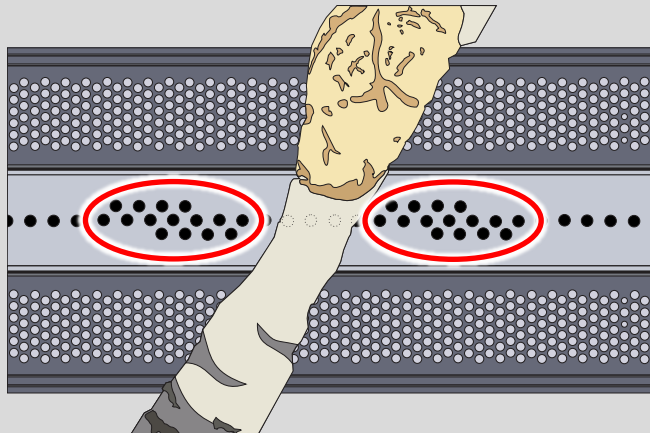NOTE: When a log placement requires the log to span the burner, make sure the part of the log above the burner is not directly above a cluster of holes (see illustration below).



Linear Fireplace Birch Log Set – PB / HO

Installation Instructions (sku# 94500974)

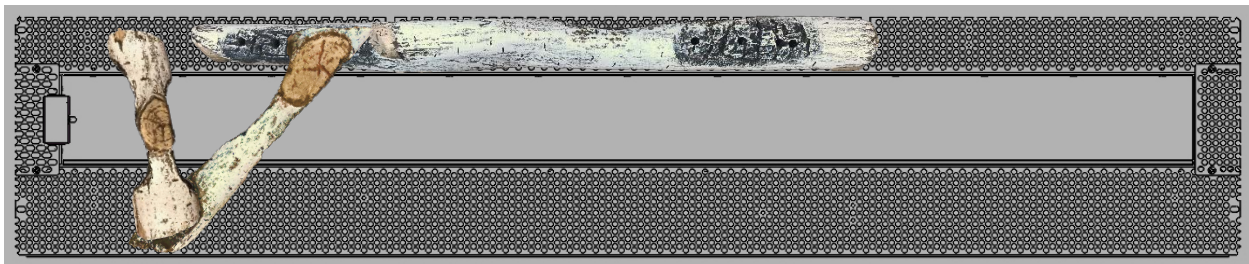
4415 HO - Log Installation - continued

- Install one of the included Log Locating Pins into the hole on the left, top of log #5 as shown below.



- Install Log #6 as shown below. The wide end of the log faces the front of the fireplace. The Log Locating pin on left of Log #5 insert into the hole on the bottom of log #6. Log #6 spans the burner.


NOTE: When a log placement requires the log to span the burner, make sure the part of the log above the burner is not directly above a cluster of holes




4415 HO - Log Installation - continued

- Install Log #8 as shown below. The Log Locating pin on right of Log #2 insert into the hole on the bottom of log #8. Log #8 spans the burner.

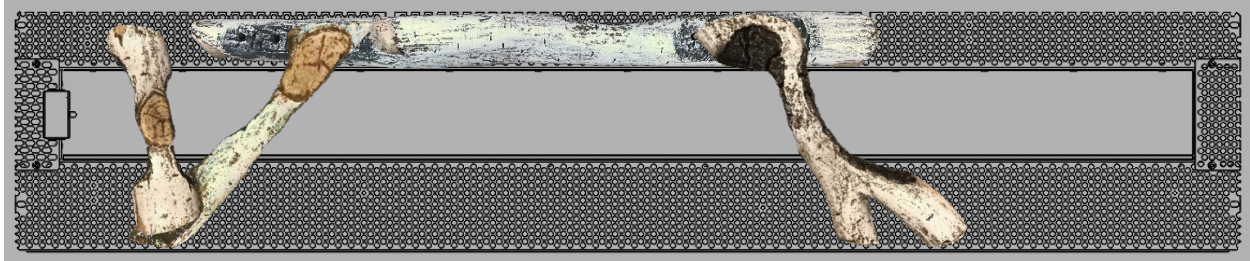NOTE: When a log placement requires the log to span the burner, make sure the part of the log above the burner is not directly above a cluster of holes




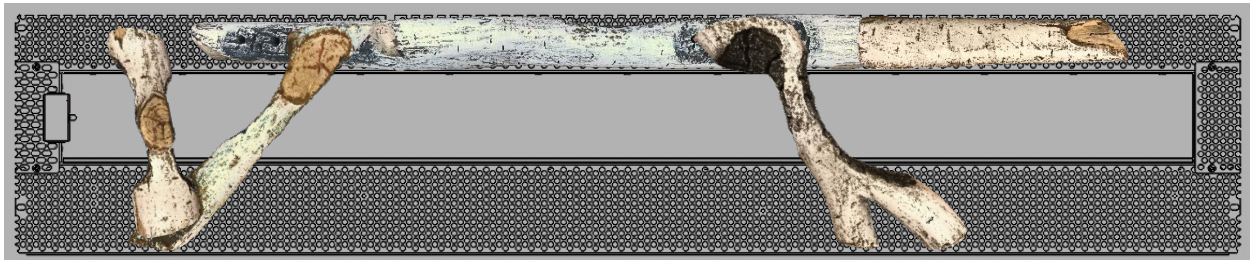- Install Log #9 as shown below. There are no locating pins for this log. This log does not span the burner. The left end of the log rests on the right end of Log #2 and the right end rests on the rear portion of the media tray. Make sure the log does not cause any flame impingement.




4415 HO - Log Installation - continued

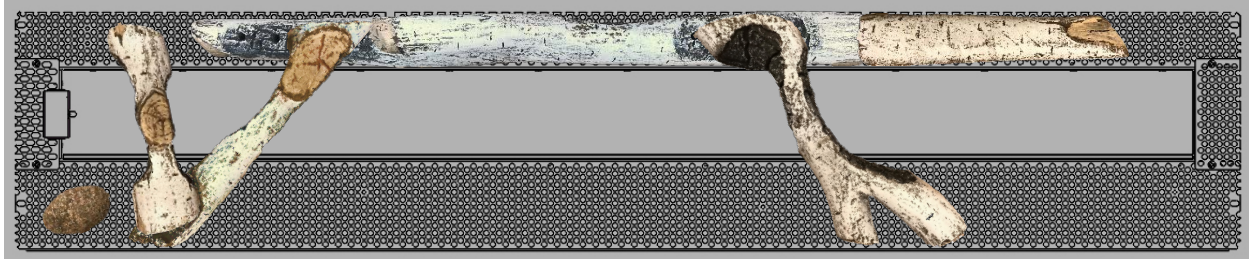- Place a #10 stone in the right, rear corner as shown below.




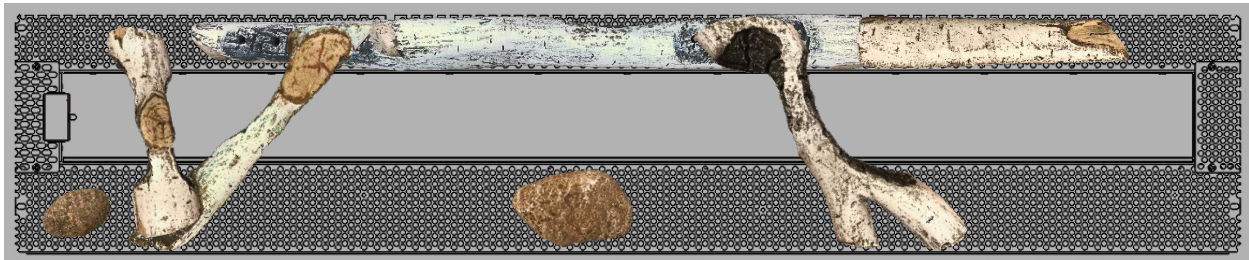- Place Stone #32 on the front, middle of the media tray as shown below.




4415 HO - Log Installation - continued

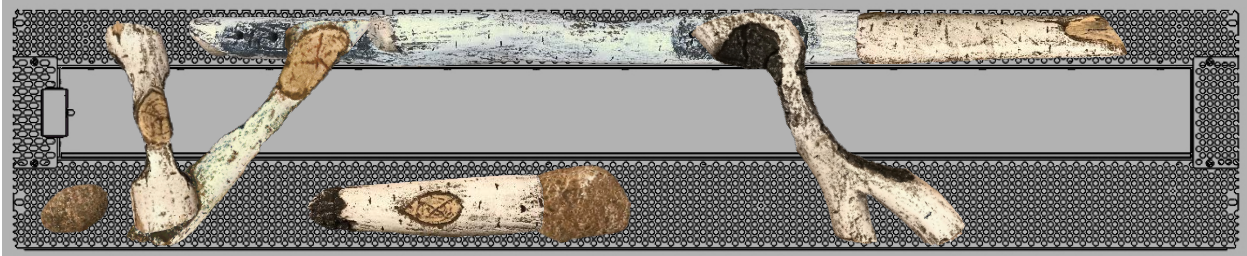- Install Log #7 as shown below. There are no locating pins for this log. This log does not span the burner. The left (charred) end of the log rests on the front portion of the media tray and the right end rests on Stone #32. Make sure the log does not cause any flame impingement.




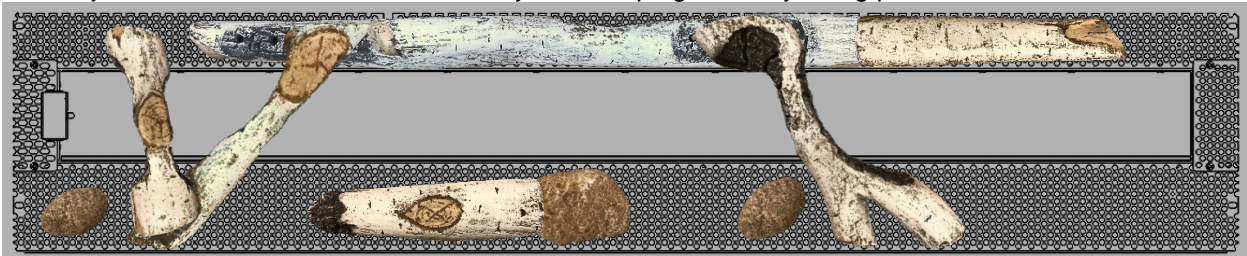- Place the second #10 stone on the front portion of the media tray as shown below. Exact placement is not critical, just make sure it does not create any flame impingement by being placed too close to the burner.



4415 HO - Log Installation - continued

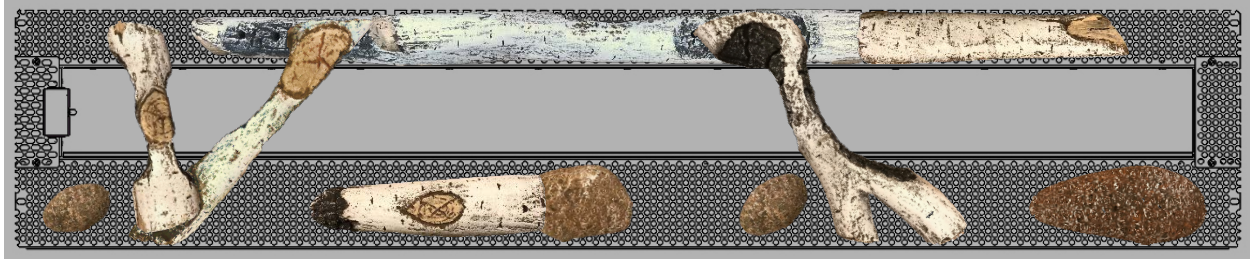
- Install Stone #35 as shown below. The stone rests on the front portion of the media tray.



6015 HO

6015 HO - Preparing the Media Tray

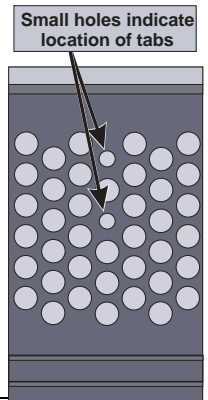1. Remove the glass frame assembly to gain access to the firebox (see manual for details).
2. The map below shows the location of the log and stone locating tabs in relation to the media tray.
Look in the approximate location indicated and you will notice holes that are slightly smaller than the others. The smaller holes will receive the screws that secure the log locating tabs to the media tray.



HINTS:

- Lay all the locating brackets in their approximate location and orientation. Then go back with a flashlight and screwdriver (with screws) to locate the attachment holes and secure the brackets.
- Do not to overtighten the screws when securing the log/stone locating tabs to the media tray.



6015 HO - Overview:

Logs used for this installation: #1, #2, #3, #5, #6, #7, #8, #9

Stones used for this installation: #10, #10, #13, #13, #35

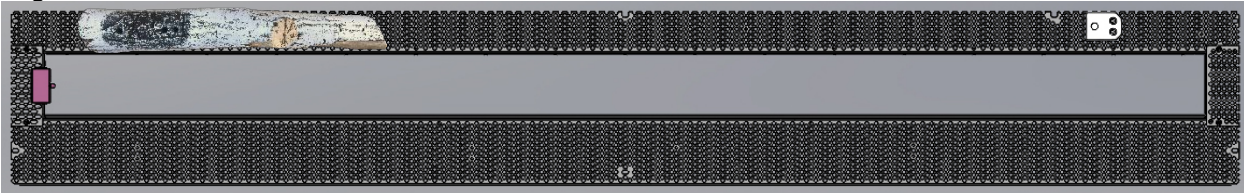


6015 HO - Log Installation



The logs are fragile, especially after being exposed to heat.

- Install Log #1 as shown below. The post on the left log support inserts into the far left hole on the bottom of the Log #1.



6015 HO - Log Installation - continued

- Install one of the included Log Locating Pins into the far right hole on the top of log #1 as shown below.

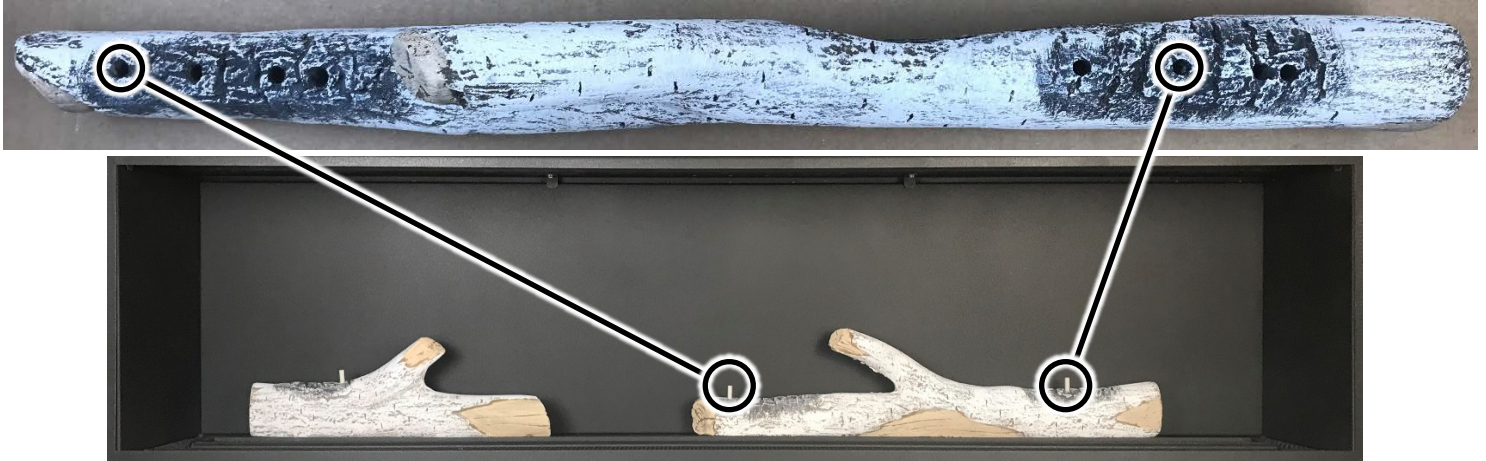


- Install Log #2 as shown below. The post on the right log support inserts into the far right hole on the bottom of Log #2.




6015 HO - Log Installation - continued

- Install one of the included Log Locating Pins into the far left hole on the top of log #2 as shown below. Install a second Log Locating Pin into the third hole from the right on the top of log #2 as shown below.




6015 HO - Log Installation - continued

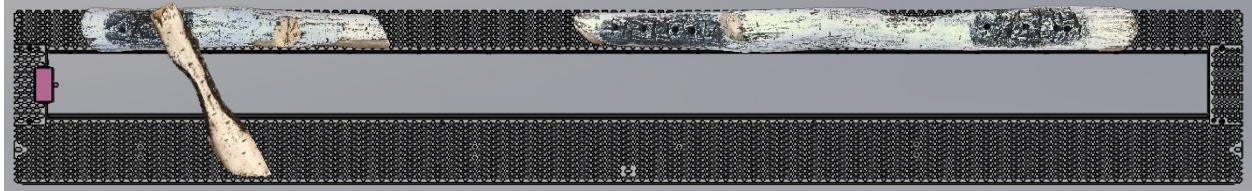- Install Log #3 as shown below. Place the hole in the bottom of Log #3 on the Log Locating Pin installed on Log #1. Log #3 spans the burner (see note regarding placement, below)




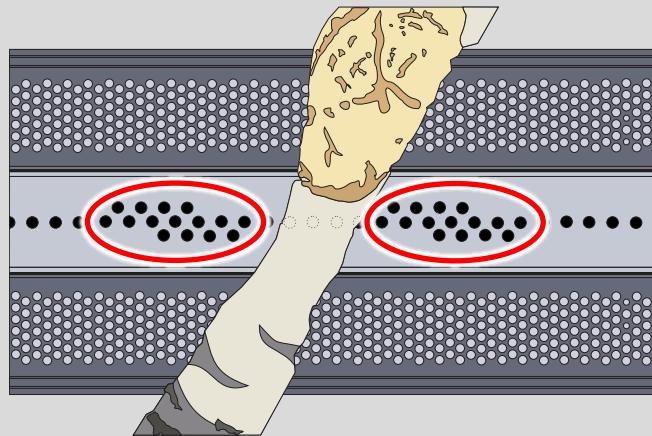NOTE: When a log placement requires the log to span the burner, make sure the part of the log above the burner is not directly above a cluster of holes (see illustration below).



6015 HO - Log Installation - continued

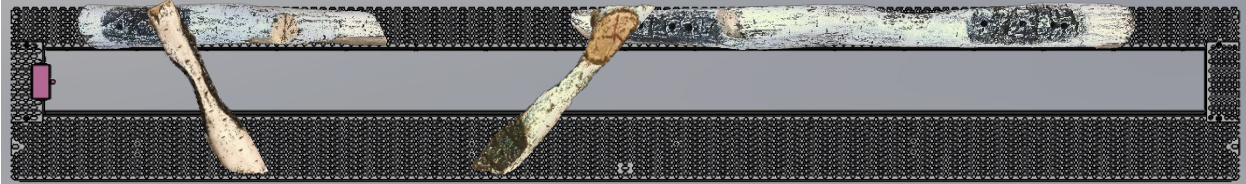- Install Log #5 as shown below. The Log Locating pin on left of Log #2 insert into the hole on the bottom of log #5. Log #5 spans the burner and the left end of the log points approximately 45° to the left. Reference the note from the previous step regarding placement of the log over the burner.




- Install one of the included Log Locating Pins into the hole on the left, top of log #5 as shown below.



6015 HO - Log Installation - continued


- Install Log #6 as shown below. The wide end of the log faces the front of the fireplace. The Log Locating pin on left of Log #5 insert into the hole on the bottom of log #6. Log #6 spans the burner.

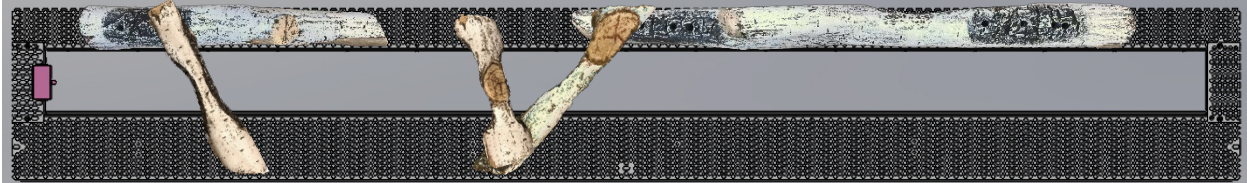NOTE: When a log placement requires the log to span the burner, make sure the part of the log above the burner is not directly above a cluster of holes




- Install Log #8 as shown below. The Log Locating pin on right of Log #2 inserts into the hole on the bottom of log #8. Log #8 spans the burner.

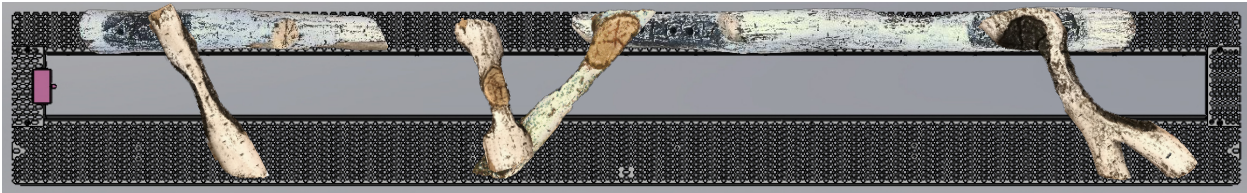NOTE: When a log placement requires the log to span the burner, make sure the part of the log above the burner is not directly above a cluster of holes.




6015 HO - Log Installation - continued

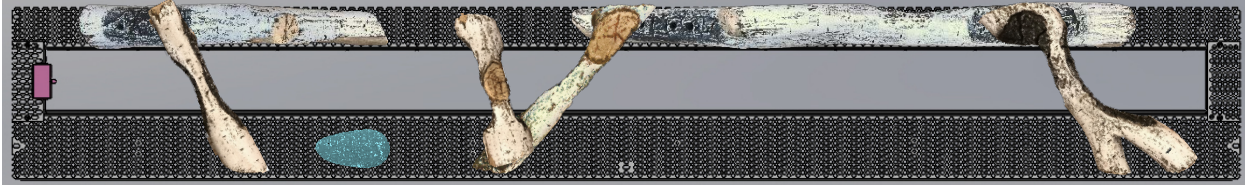- Place one of the #13 stones on the front media tray as shown below. Exact placement is not critical; just make sure it does not create any flame impingement by being placed too close to the burner.




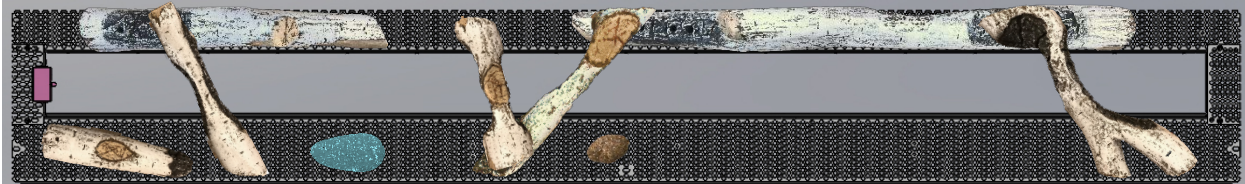- Install Log #7 as shown below. The Log rests on the front portion of the media tray. The charred end of the log points to the right.




6015 HO - Log Installation - continued

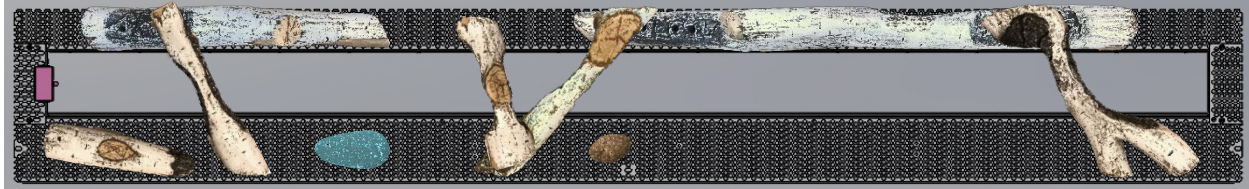- Place one of the #10 stones on the front media tray as shown below. Exact placement is not critical; just make sure it does not create any flame impingement by being placed too close to the burner.



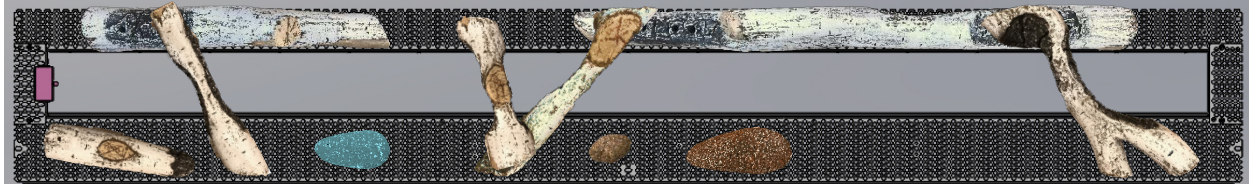- Place Stone #35 as shown below. The stone rests on the front portion of the media tray.




Linear Fireplace Birch Log Set – PB / HO


Installation Instructions (sku# 94500974)

6015 HO - Log Installation - continued

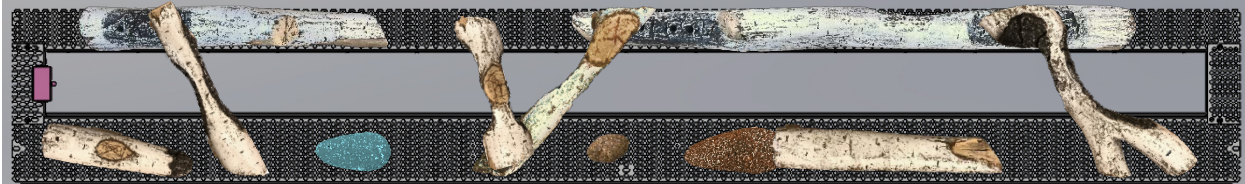- Install Log #9 as shown below. There are no locating pins for this log. This log does not span the burner. The left end of the log rests on Stone #35 and the right end rests on the front portion of the media tray. Make sure the log does not cause any flame impingement.




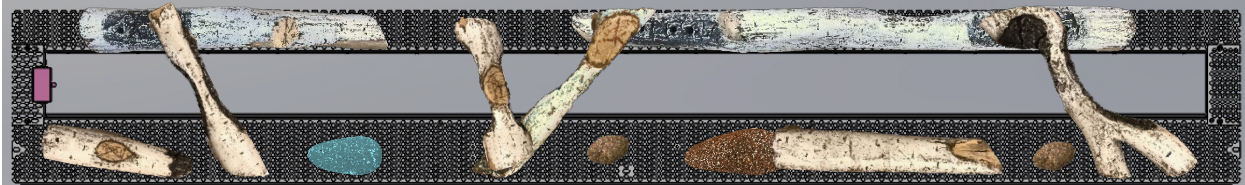- Place Stone #10 on the front portion of the media tray as shown below.



6015 HO - Log Installation - continued

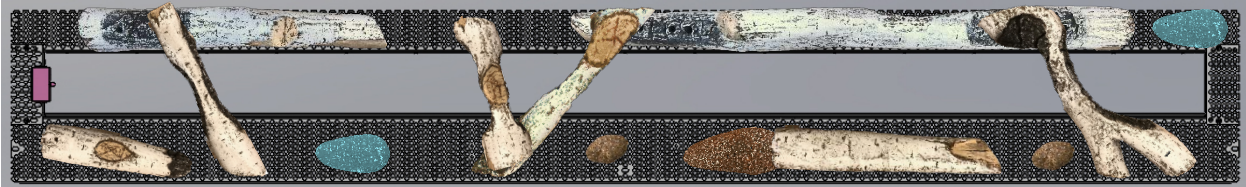
- Install Stone #13 as shown below. Stone #13 rests on the rear portion of the media tray.



4415 HO ST


4415 HO ST - Preparing the Media Tray

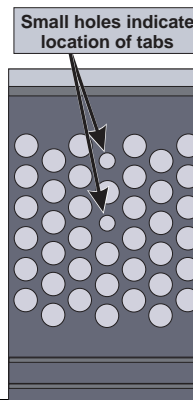3. Remove the glass frame assembly to gain access to the firebox (see manual for details).
4. The map below shows the location of the log and stone locating tabs in relation to the media tray. Look in the approximate location indicated and you will notice holes that are slightly smaller than the others. The smaller holes will receive the screws that secure the log locating tabs to the media tray.




HINTS:

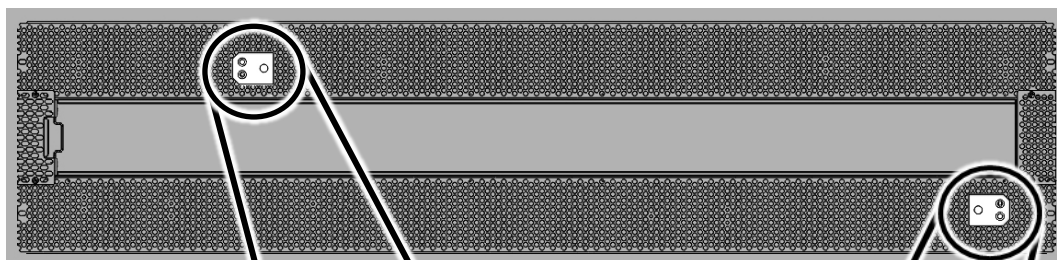- Lay all the locating brackets in their approximate location and orientation. Then go back with a flashlight and screwdriver (with screws) to locate the attachment holes and secure the brackets.
- Do not to overtighten the screws when securing the log/stone locating tabs to the media tray.



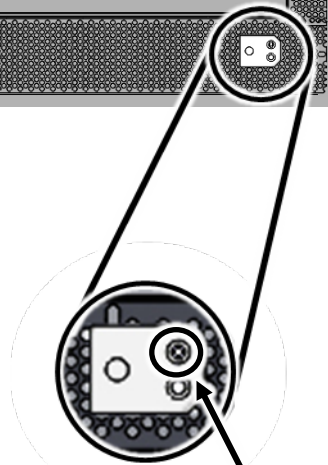NOTE: Only (1) screw is used to secure this clip to the media tray. The proper hole must be used as indicated.



NOTE: Only (1) screw is used to secure this clip to the media tray. The proper hole must be used as indicated.

4415 HO ST - Overview:

Logs used for this installation: #1, #2, #3, #5, #8, #9

Stones used for this installation: #10, #10, #13, #32

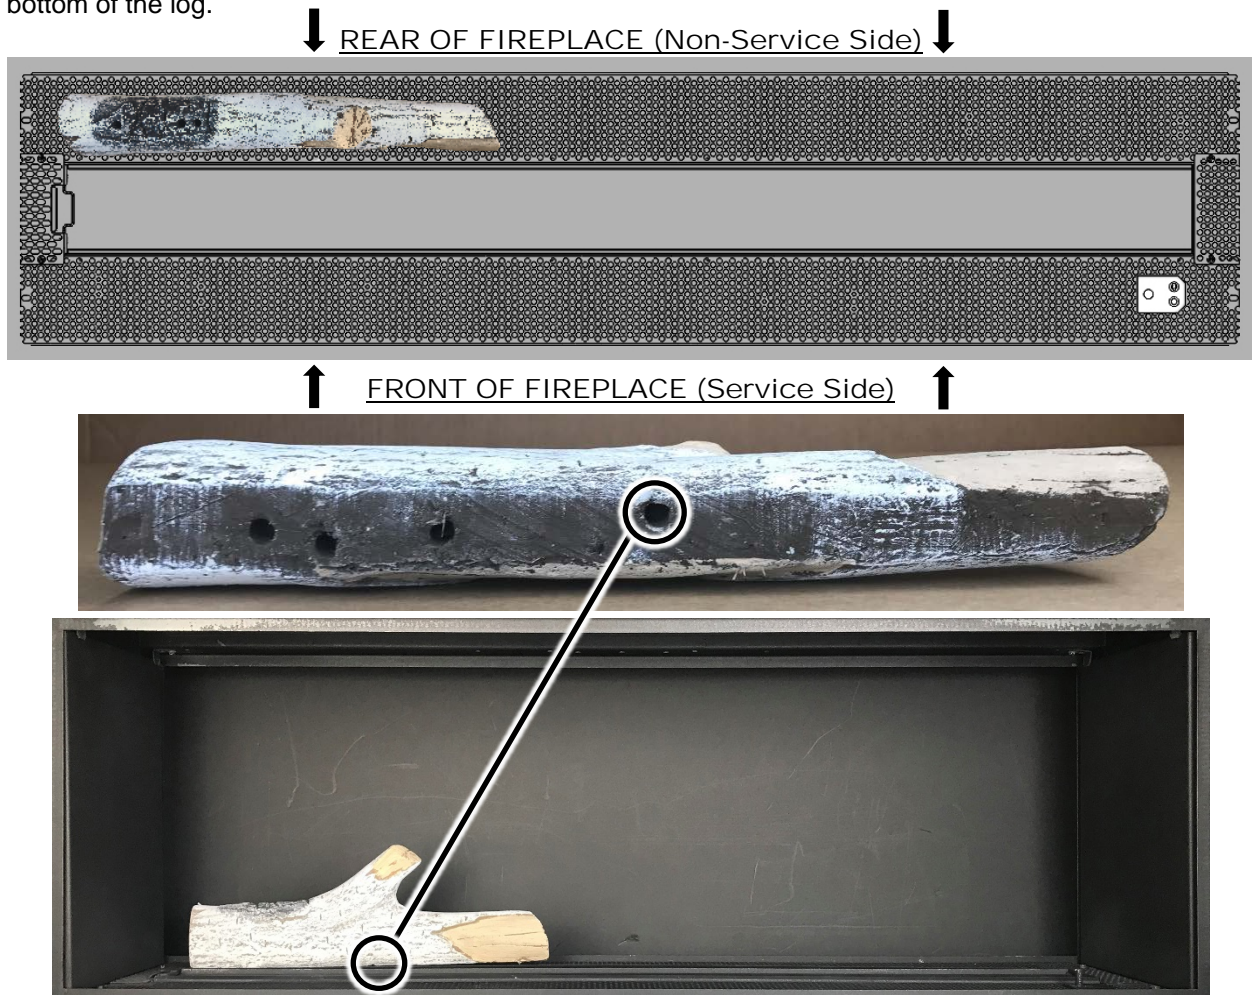


4415 HO ST - Log Installation

⚠ The logs are fragile, especially after being exposed to heat.

NOTE: Unless otherwise indicated, all of the log set up pictures were taken from the “Service Side” of the fireplace.

- Install log #1 as shown below. The post on the left log support inserts into the third hole from the left on the bottom of the log.




4415 HO ST - Log Installation - continued

- Install one of the included Log Locating Pins into the second hole from the left on the top of log #1 as shown below.




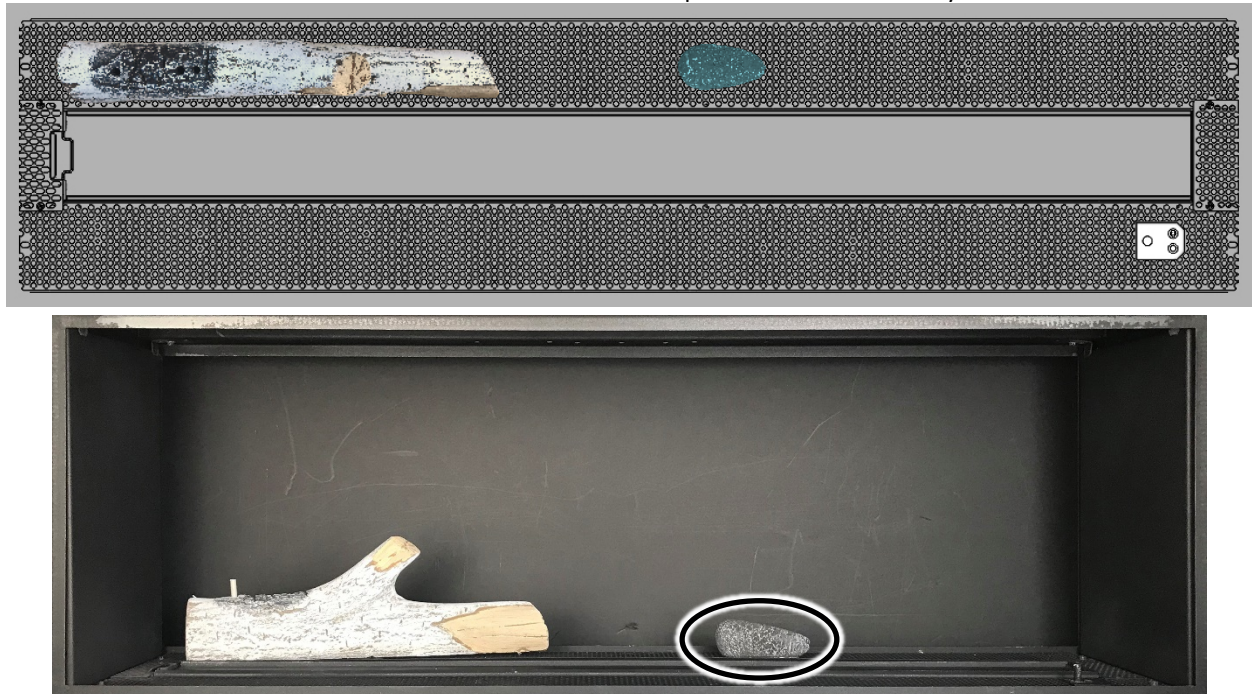- Install Stone #13 as shown below. Stone #13 rests on the rear portion of the media tray.




4415 HO ST - Log Installation - continued

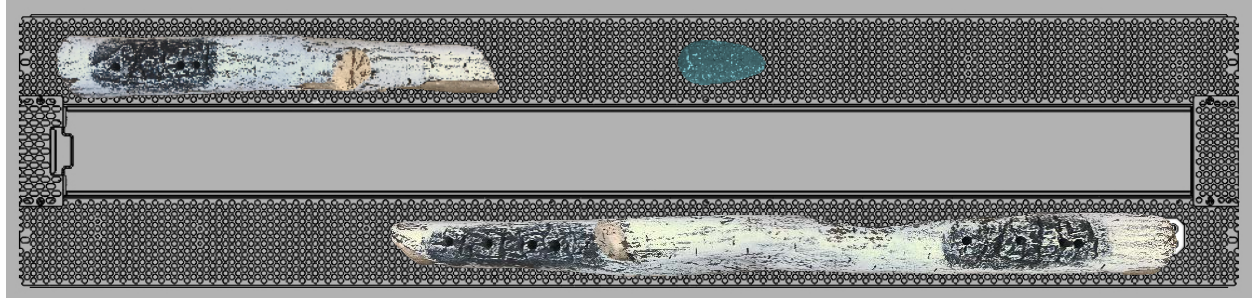- Install Log #2 as shown below. The log sits on the front portion of the media tray. The post on the right log support inserts into the far right hole on the bottom of Log #2.



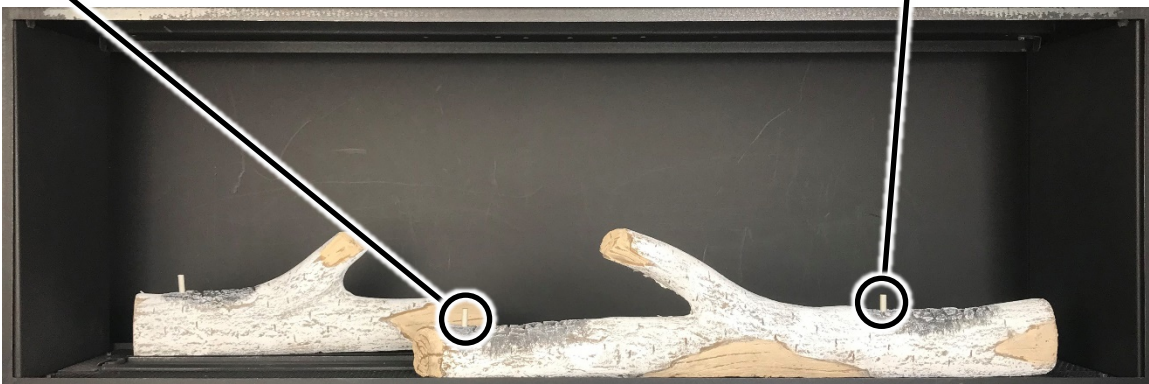- Install one of the included Log Locating Pins into the far left hole on the top of log #2 as shown below. Install a second Log Locating Pin into the fourth hole from the right on the top of log #2 as shown below.




Linear Fireplace Birch Log Set – PB / HO


Installation Instructions (sku# 94500974)

4415 HO ST - Log Installation - continued

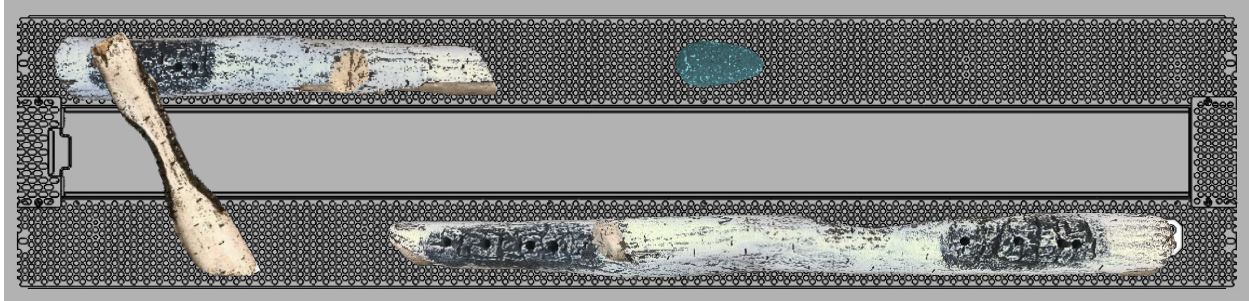- Install Log #3 as shown below. Place the hole in the bottom of Log #3 on the Log Locating Pin installed on Log #1. Log #3 spans the burner (see note regarding placement, below).



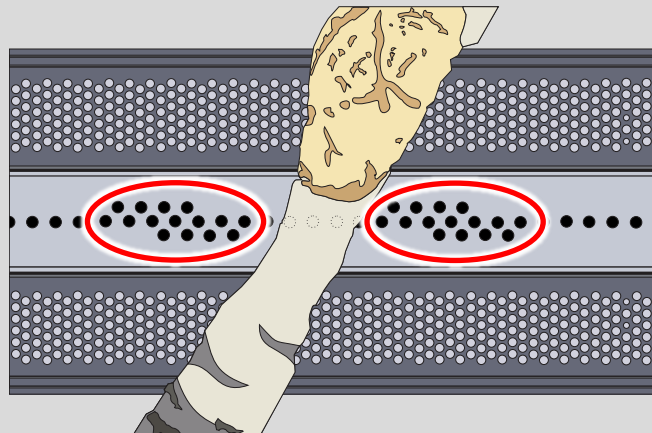NOTE: When a log placement requires the log to span the burner, make sure the part of the log above the burner is not directly above a cluster of holes (see illustration below).




Linear Fireplace Birch Log Set – PB / HO

Installation Instructions (sku# 94500974)

4415 HO ST - Log Installation - continued

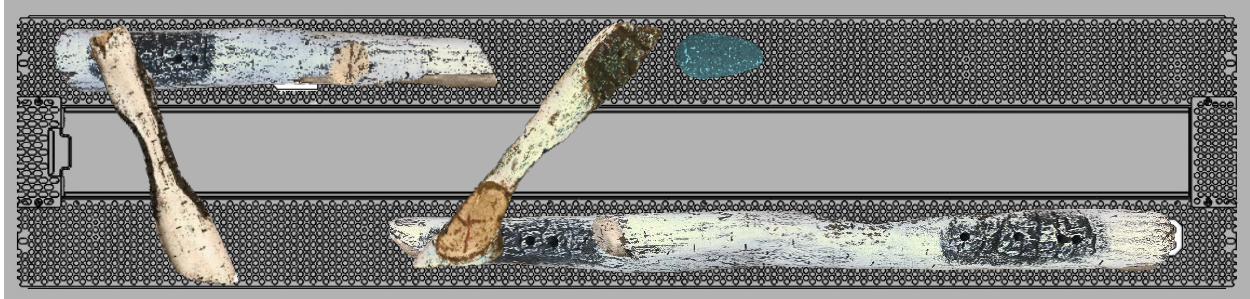- Install Log #5 as shown below. The Log Locating pin on the left of Log #2 insert into the hole on the bottom of log #5. Log #5 spans the burner. Reference the note from the previous step regarding placement of the log over the burner.



View from the “Non-Service Side”



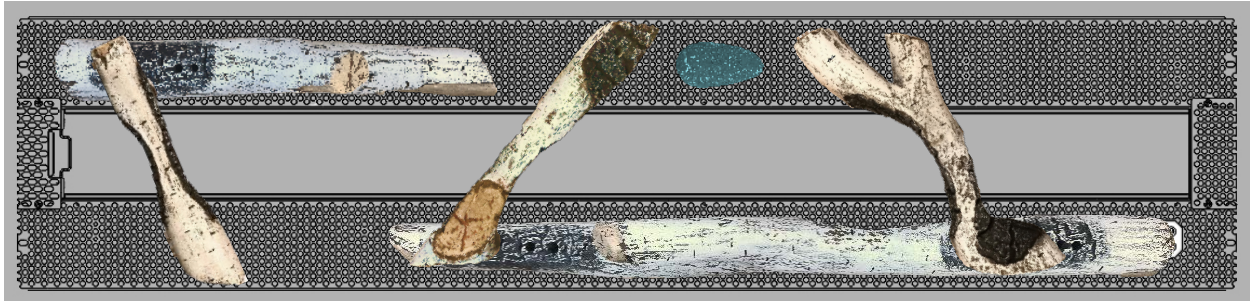
Linear Fireplace Birch Log Set – PB / HO

Installation Instructions (sku# 94500974)

4415 HO ST - Log Installation - continued

- Install Log #8 as shown below. The Log Locating pin on right of Log #2 insert into the hole on the bottom of log #8. Log #8 points backwards and spans the burner.

NOTE: When a log placement requires the log to span the burner, make sure the part of the log above the burner is not directly above a cluster of holes.



View from the “Non-Service Side”

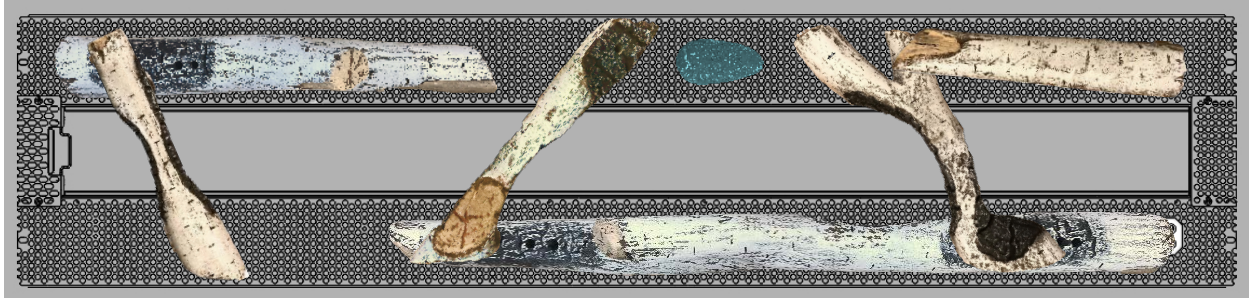


Linear Fireplace Birch Log Set – PB / HO

Installation Instructions (sku# 94500974)

4415 HO ST - Log Installation - continued

- Install Log #9 as shown below. There are no locating pins for this log. This log does not span the burner. The left end of the log rests on Log #8 and the right end rests on the rear portion of the media tray. Make sure the log does not cause any flame impingement.




View from the “Non-Service Side”




4415 HO ST - Log Installation - continued

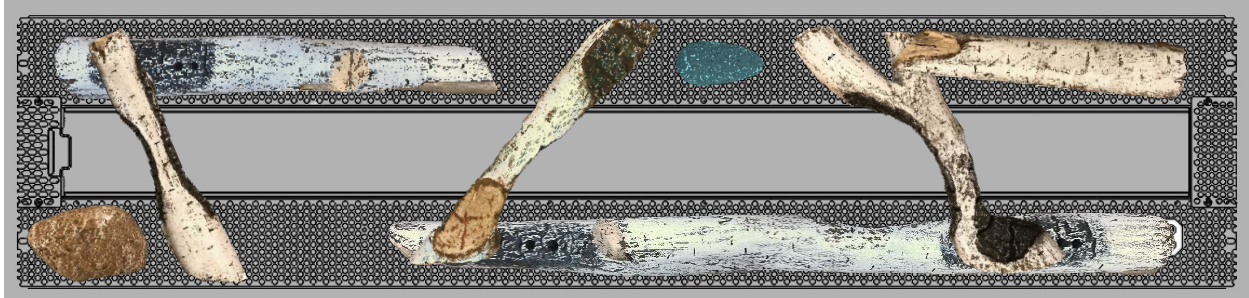- Place Stone #32 on the left, front of the media tray as shown below. Make sure the stone does not cause any flame impingement.




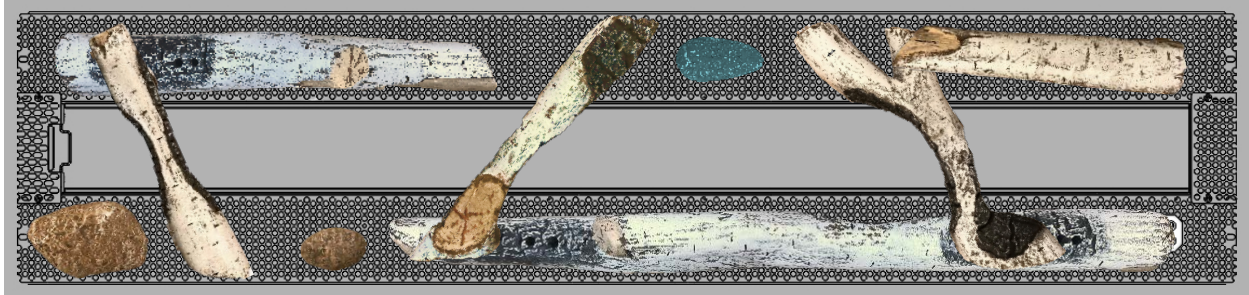- Place a #10 stone on the front portion of the media tray as shown below.



4415 HO ST - Log Installation - continued

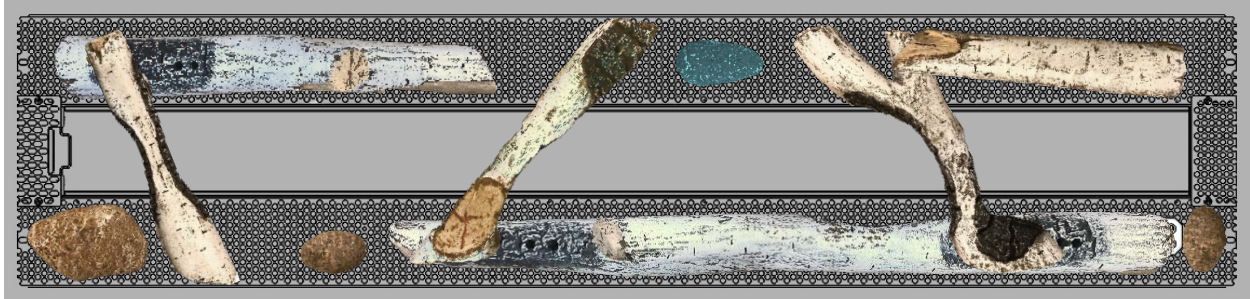- Place the second #10 stone on the front. Right corner of the media tray as shown below.



Crushed Glass Installation (see manual for additional details).




Do not allow the crushed glass to block the air slots or to become too thick (maximum 1 layer deep on the burner). Failure to properly install glass may lead to sooting and improper burning.

Quantity of Crushed Glass	3615HO	4415HO	6015HO	4415HO ST
	4.5 lbs. (2 Kg)	4 lbs. (1.8 Kg)	7 lbs. (3.1 Kg)	4 lbs. (1.8 Kg)
	42 ProBuilder	54 ProBuilder	72 ProBuilder	
	3 lbs. (1.4Kg)	4 lbs. (1.8Kg)	6.5 lbs. (2.9Kg)	

HO Units - Before installing the crushed glass, make sure the pilot guard is in place. The pilot guard is zip-tied to the glass tray – remove and discard the zip-tie. After installing the glass, remove the pilot guard. Make sure no glass covers the pilot opening.

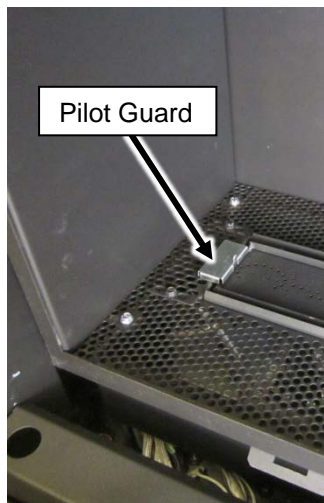ProBuilder Units – There is no Pilot Guard. When placing the crushed glass, make sure no glass is placed in the pilot area.



Disperse the crushed glass evenly along the glass tray.

Make sure the two air channels are free of crushed glass. Use the glass frame tool (or screwdriver) to clear this area.

Make sure the glass is only 1 layer deep on the burner.





Linear Fireplace Birch Log Set – PB / HO

Installation Instructions (sku# 94500974)

Replacement Part Numbers

Log Replacement Part Numbers		
Log #1	250-05386	
Log #2	250-05387	
Log #3	250-05388	
Log #4	250-05389	
Log #5	250-05390	
Log #6	250-05400	
Log #7	250-05401	
Log #8	250-05402	
Log #9	250-05403	

Stone Replacement Part Numbers		
(#10) Stone	250-03903	
#13 Stone	250-04289	
#32 Stone	250-04324	
#35 Stone	250-04333	