


Packing List

- Set of 16 Fyre-Stone stones (includes 2 each of stones numbered 2, 8, and 11)
- Rear Stone Grid
- Left Stone Tab
- Pilot Stone Tab
- Right Stone Tab
- (2) Elevated tabs
- (2) 8-32 x 3/8" Screws
- (3) Bags of glass (1 lb. each)

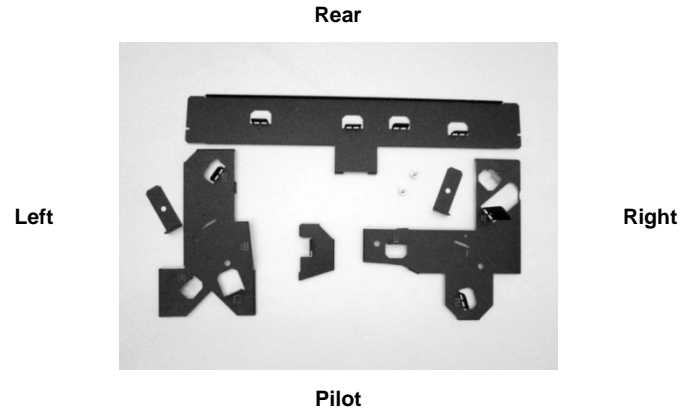

Compatibility

- 31 DVI



Installation Tips




Install the stones after the firebacks are in place.

Stone Grid Installation


1. Bend the tab on the right stone grid as shown below.

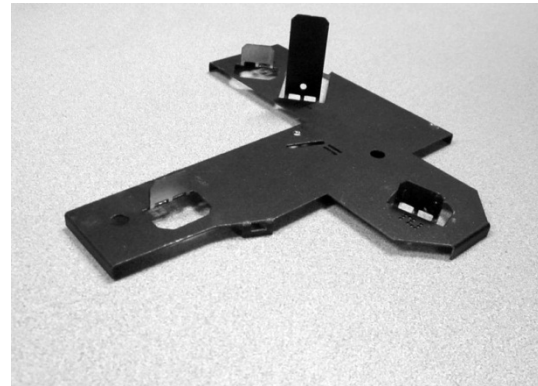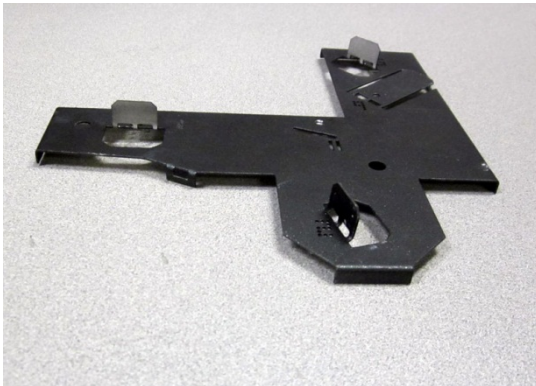



2. Insert one of the elevated tabs **from below** through the slot on the right stone grid as shown below. Secure the tab by inserting one of the included screws from below.

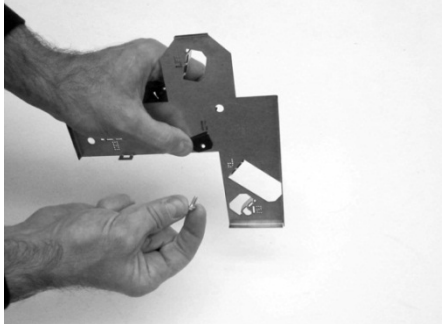


The right stone grid should now look like the photo at right.

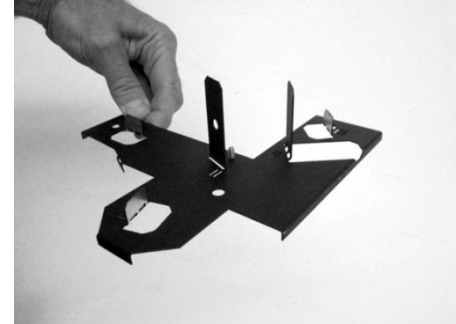

3. Insert the remaining elevated tab **from below** through the slot on the left stone grid as shown below. Secure the tab by inserting one of the included screws from below.

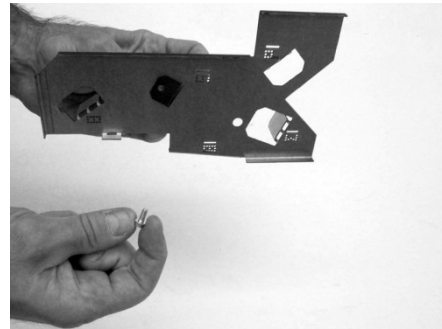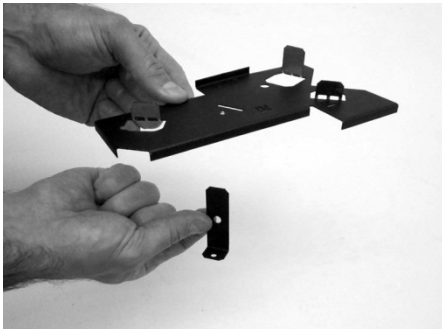


The left stone grid should now look like the photo below.

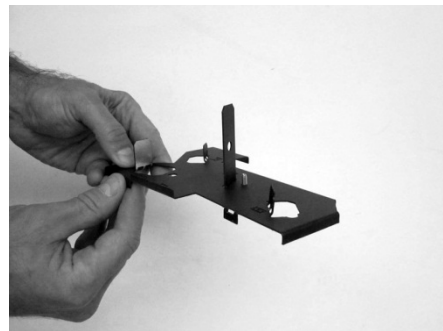



4. Place the right stone grid on the burner as shown below.





5. Place the left stone grid on the burner as shown below.

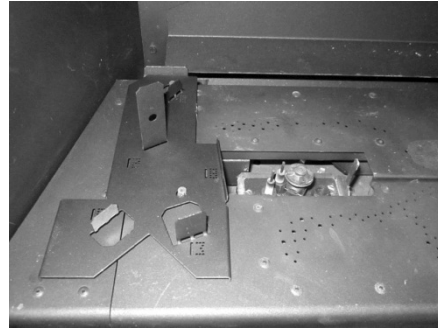

6. Place the rear stone grid on the burner as shown below.

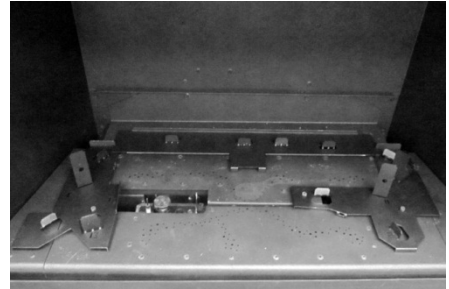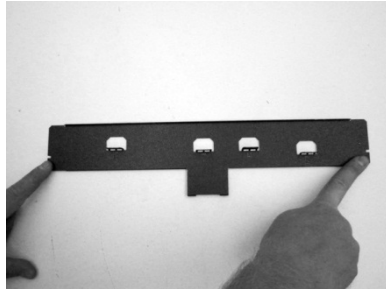

7. Place the pilot stone tab on the pilot bracket as shown below.

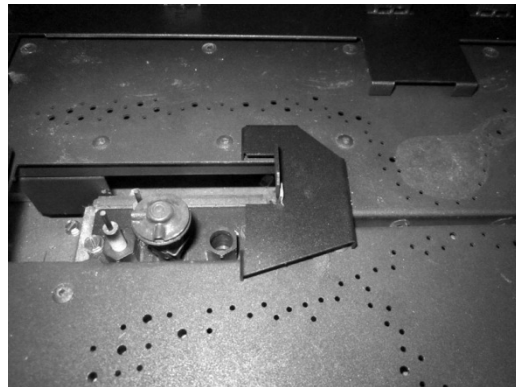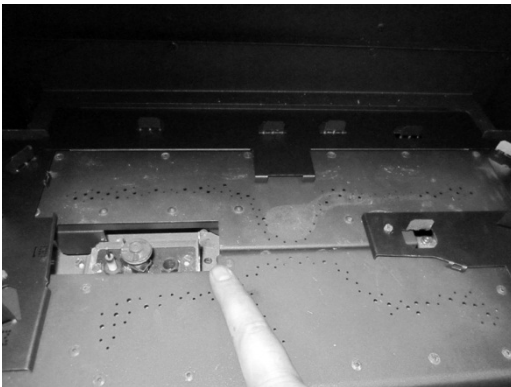

Placing the Stones and Glass



Each stone has a slot and a number etched into it. Place the stones onto the stone grid, matching the number on the stone to the number on the grid. EXAMPLE: Stone marked "5" is inserted over the tab marked "5" on the stone grid.







NOTE: Numbers on the stones should always face the rear of the firebox.



NOTE: There are (2) each of stones numbered 2, 8, and 11.

1. Starting with stone number 1, place the stones around the stone grid, paying close attention to the notch/tab alignment and making sure the numbers face the rear of the firebox. The stone placement sequence is shown below.

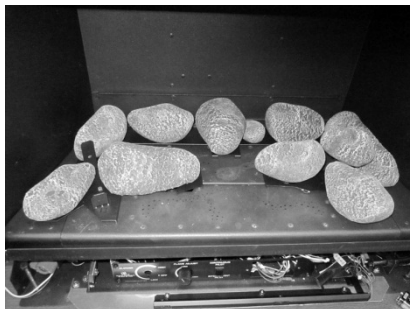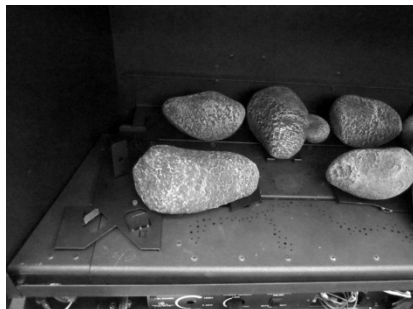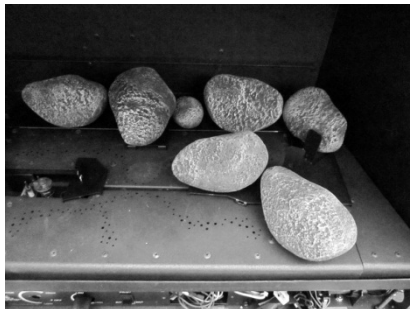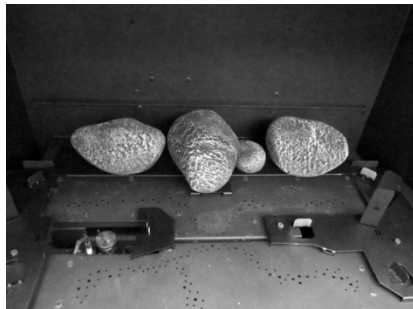




NOTE: Stone number 16 has no slot. It is placed near the front of the burner, as shown below.



NOTE: Stone number 11 is placed between the burner ports at the front edge of the burner.

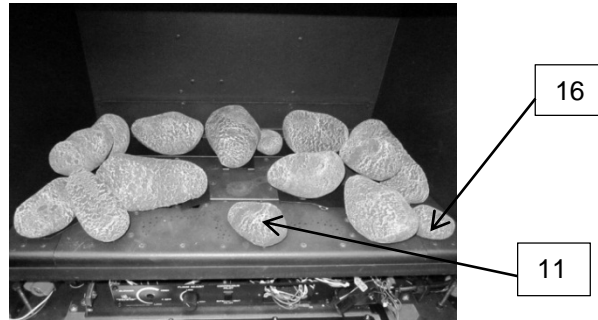

- Carefully pour the glass around the floor of the firebox, as shown below. Now we are working with your inner artist. Here you must pay attention to create the best possible look. For hard to reach areas, you can use a teaspoon to ensure all the black surfaces are covered.



The pilot area must be kept clear of glass to provide quick burner ignition.



The glass needs to be 1 layer thick on LP and no more than 2 layers on NG.

The completed installation should look like the photos below.

