



Pre-Assembled Owner's Manual (Aust)

⚠ WARNING:

If the information in these instructions is not followed exactly, a fire or explosion may result causing property damage, personal injury or loss of life.

- Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.
- **WHAT TO DO IF YOU SMELL GAS**
 - Do not try to light any appliance.
 - Do not touch any electrical switch; do not use any phone in your building.
 - Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
 - If you cannot reach your gas supplier, call the fire department.
- Installation and service must be performed by a qualified installer, service agency or the gas supplier.



Listed by



GMK 10386

AS 4558-2011

Dragon Wholesaling Pty. Ltd.
Unit 4/16 Lexington Drive
Bella Vista NSW
Australia 2153

This appliance may be installed in an aftermarket, permanently located, manufactured home (USA only) or mobile home, where not prohibited by local codes.

This appliance is only for use with the type of gas indicated on the rating plate. This appliance is not convertible for use with other gases, unless a certified kit is used.

INSTALLER: Leave this manual with the appliance.

CONSUMER: Retain this manual for future reference.

Overview

This manual details the DaVinci category 1 fireplace.

Dealer Information

Please record your dealer information here for future reference:

Dealer Name: _____

Dealer Address: _____

Dealer E-Mail: _____

Dealer Phone #: _____



☐ DaVinci Propane (Au)

☐ DaVinci N.G. (Au)

Decorative Gas Fireplace



Tested to the combustion performance and construction requirements of AS 4558-2011 Decorative gas log and other fuel effect Appliances. This appliance must be installed in accordance with all local codes.

This DaVinci decorative gas fireplace heater is equipped at the factory for use with gas fuel marked above. No conversion is allowed.

This appliance may be installed in an aftermarket, permanently located, manufactured (mobile) home where not prohibited by local codes.

This decorative gas fireplace is not for use with air filters. This appliance must be properly connected to a venting system in accordance with the manufacturer's installation instructions. Use only approved B-vent systems to vent this appliance to the exterior. See owner's manual for approved brands of venting.

Certified for use with 10" B-Vent flue cowl.

WARNING: Improper installation, adjustment, alteration, service or maintenance can cause injury or property damage. Refer to the owner's information manual provided with this appliance. For assistance or additional information consult a qualified installer, service agency or the gas supplier.

PRIMARILY A DECORATIVE APPLIANCE NOT CERTIFIED AS A HEATER. Not for use with Solid Fuel.

Young children should be carefully supervised at all times when they are in the same room as the appliance.

Minimum Clearances to Combustibles

Fireplace to Adjacent Wall	26mm	Top to Enclosure	140mm
Wood Floor Beneath Fireplace	0mm	Sides to Enclosure	0mm
Back to Enclosure	0mm	Base of Fireplace to a Mantel	See Owner's Manual

Electrical Rating: 240V., 2.5 Amps, 50 Hz., 600 Watts

DANGER! Risk of Electric Shock. Disconnect power before servicing unit.

	PROP.	N.G.		PROP.	N.G.
Input Rate on "HI" (MJ/h)			Minimum Inlet Pressure (kPa)	2.74	1.13
			Maximum Inlet Pressure (kPa)	3.24	1.74
Orifice Sizes - (DMS)	#56	#49	Manifold Pressure on "HI" (kPa)	2.49	0.87

This appliance is equipped for installation 0-610 m. For altitudes above 600m, the vent configuration, orifice, or combination of both may need to be changed. See owner's manual for information on making these changes.

MANUFACTURE DATE:

☐ 2016 ☐ Jan. ☐ Apr. ☐ Jul. ☐ Oct.
☐ 2017 ☐ Feb. ☐ May ☐ Aug. ☐ Nov.
☐ 2018 ☐ Mar. ☐ Jun. ☐ Sep. ☐ Dec.

Manufactured by:

TRAVIS INDUSTRIES
HOUSE OF FIRE
 4800 Harbour Pointe Blvd. SW
 Mukilteo, WA 98275

Certificate Holder:

Dragon Wholesaling Pty. Ltd.
 Unit 4, 16 Lexington Drive
 Bella Vista NSW 2153
 Australia

www.lopi.com.au

Overview	2	Intake Damper Wire Splitter – Used For Installations Using Multiple External Dampers	39
Installation Options	7	Connecting the CAT5 Harness to the Fireplace	40
MegaJoule Specifications	7	Installing the TouchSmart Controller	41
Master Module vs. Secondary Module	7	TouchSmart Mounting Box	42
Gas and Electrical Hookup	7	Air Intake Requirements	44
Air Intakes	7	Air Intake Ducts	44
Power Vent	7	Intake Dampers	45
Decimal Conversions	7	Air intakes in Warm Environments	45
Dimensions – Single Sided or See Through Configurations	8	Air Intake Duct Quantity and Location	46
Horizontal Dimensions & Specifications	8	Single Sided / See Through / Side / Pier	46
Dimensions – Pier Configuration	9	Bay / Island	46
Horizontal Dimensions & Specifications	9	Air Intake Installation – Hood Versions (includes external dampers)	47
Dimensions – Island Configuration	10	Part Numbers	47
Horizontal Dimensions & Specifications	10	Installation Diagram (intake with damper)	47
Dimensions – Full Bay Configuration	11	Installation	47
Horizontal Dimensions & Specifications	11	Air Intake Dampers (for Hori. or Vert. Termination)	48
Dimensions – Right Side Configuration	12	Louvered Termination (used for intake(s) or exhaust vent)	49
Horizontal Dimensions & Specifications	12	Dimensions	49
Dimensions – Left Side Configuration	13	Painting the Louvered Termination and Flange(s)	49
Horizontal Dimensions & Specifications	13	Installation Considerations	49
Packing List	14	Louvered Termination Adapter Plates	50
Recommended Installation Procedure	15	Attaching the Adapter to the Louvered Termination	50
Recommended Specialty Tools	15	Vent Requirements	51
Alignment Track Installation	16	Vent Clearances	51
Secure the Fireplace to the Alignment Track	17	Altitude Considerations	51
Fireplace Placement Requirements	17	Approved Vent	51
Clearances	17	Vent Installation	51
Raised Fireplaces	17	Approved Vent Configurations	52
Typical Framing Dims. – One Sided Configuration	18	Rheostat Adjustment	53
Minimum Framing Dimensions	18	Restrictor Adjustment	53
Typical Framing Dims. – See Through Configuration	19	Termination Requirements	54
Minimum Framing Dimensions	19	Power Vent – Dimensions, Framing, Mounting	55
Typical Framing Dims. – Pier Configuration	20	Exterior Power Vent Dimensions – Low Volume (RS12) 94400903	55
Minimum Framing Dimensions	20	RS-12 / 16 Rain Cap	55
Typical Framing Dims. – Island Configuration	21	Exterior Power Vent Dimensions – High Volume (RS16) 94400904	56
Minimum Framing Dimensions	21	Framing - Exterior Power Vent (94400903 & 94400904 only)	57
Typical Framing Dims. – Full Bay Configuration	22	Mounting - Exterior Power Vent (94400903 & 94400904 only)	58
Minimum Framing Dimensions	22	Interior Power Vent – Dimensions and Mounting	59
Typical Framing Dims. – Right-Sided Corner	23	Interior Power Vent Dimensions – (Lo 160) 94400905	59
Minimum Framing Dimensions	23	Interior Power Vent - Typical Installation Arrangements	59
Typical Framing Dims. – Left-Sided Corner	24	Interior Power Vent - Minimum Vent Pre and Post Blower	60
Minimum Framing Dimensions	24	Interior Power Vent – Mounting	60
Nailing Brackets	25	Interior Power Vent Enclosure	61
Accessing Internal Components	26	Interior Power Vent - Attaching Vent to the Blower Assembly	61
Internal Shut Off Valve Access	26	Interior Power Vent - Components	61
Burner Removal	27	Interior Power Vent - Termination	61
Gas Line Requirements	29	Hearth Requirements	62
Fuel	29	Facing Requirements	62
Gas Line Connection	29	Do Not Drill or Screw Zone	63
Gas Inlet Pressure	29	Mantel Requirements	63
Directions for Connecting a Gas Pressure Test Gauge	29	Fireback Installation	64
Gas Inlet Location	30	Fireback Quantity Needed – Category 1 Fireplaces	64
Electrical Junction Box	31	Fireback Installation Order	64
Junction Box Configuration – Steel Side (Single, Double-Sided, Pier, etc.)	31	Identifying the Firebacks	65
Junction Box Configuration – Glass Side (Island, Full Bay, etc.)	31	Installing the 12" Firebacks	66
Junction Box Configuration – Glass Side Through-Base Configuration	32	Installing the Bay Firebacks	66
Electrical Input Connection	33	Installing the Divider and End Firebacks	67
Connecting the Power Vent Lead to the Fireplace	34	Glass Pane Installation and Removal	68
Connecting the Exhaust Damper Harness to the Fireplace	35	Suction Cups	68
Wiring the Power Vent	36		
Wiring the Power Vent (continued)	37		
Connecting the Intake Damper Harness to the Fireplace	38		
Wiring the Intake Damper	39		

When to Install the Glass Panes.....	68
Overview of Glass Panes – Category 1 Fireplaces	68
Attaching the Suction Cups to the Glass Panes	69
Installing the Glass Panes Into the Fireplace.....	70
Steps for Finalizing the Installation	71
Air Shutter Adjustment	71
Crushed Glass Installation	72
Placing Crushed Glass on the Burner and Center Media Trays	72
Placing Crushed Glass in the Intake Channel (Between Panels of Glass) - OPTIONAL	73
Wiring Diagram	74
Before You Begin.....	75
Starting the Heater for the First Time	75
Location of Controls	76
LED Intensity Slider	76
LED Color Slider	76
Flame On/Off	76
Power On/Off	76
Sleep Timer Slider (fireplaces without heat exchangers only)	76
Heat Exchanger Blower Slider (fireplaces with optional heat exchanger only)	76
Yearly Service Procedure	77
Glass Cleaning.....	77
Replacement Parts	77
CONDITIONS & EXCLUSIONS.....	78
IF WARRANTY SERVICE IS NEEDED:	78

Safety Warnings:

- Failure to follow all of the requirements may result in property damage, bodily injury, or even death.

Young children should be carefully supervised when they are in the same room as the appliance. Toddlers, young children and others may be susceptible to accidental contact burns. A physical barrier is recommended if there are at-risk individuals in the house. To restrict access to a fireplace or stove, install an adjustable safety gate to keep toddlers, young children and other at-risk individuals out of the room and away from hot surfaces.

Children and adults should be alerted to the hazards of high surface temperature and should stay away to avoid burns or clothing ignition. Do not touch the hot surfaces of the heater. Educate all children of the danger of a high-temperature heater.

Due to the high temperature, the heater should be located out of traffic and away from furniture and draperies.

- This unit must be installed by a qualified installer to prevent the possibility of an explosion.
- This appliance must be installed in accordance with all local codes, if any; if not, in U.S.A. follow ANSI Z223.1 and NFPA 54(88), in Canada follow CSA B149.1. In Australia follow AS/NZS 5601.1.
- A manufactured home (USA only) or mobile home OEM installation must conform with the Manufactured Home Construction and Safety Standard, Title 24 CFR, Part 3280, or, when such a standard is not applicable, the Standard for Manufactured Home Installations, ANSI/NCSBCS A225.1, or Standard for Gas Equipped Recreational Vehicles and Mobile Housing, CSA Z240.4. This appliance may be installed in Manufactured Housing only after the home is site located.
- All exhaust gases must be vented outside the structure of the living-area. Combustion air is drawn from outside the living-area structure. The venting must not be connected to a chimney flue serving a separate solid-fuel burning appliance.
- Notify your insurance company before hooking up this fireplace.
- The instructions in this manual must be strictly adhered to. Do not use makeshift methods or compromise in the installation. Improper installation will void the warranty and safety listing.
- This heater is approved for use with natural gas (NG) or propane (LP). Burning the incorrect fuel will void the warranty and safety listing and may cause an extreme safety hazard. Direct questions about the type of fuel used to your dealer.
- Contact your local building officials to obtain a permit and information on any installation restrictions or inspection requirements in your area.
- If the flame becomes sooty, dark orange in color, or extremely tall, do not operate the heater. Call your dealer and arrange for proper servicing.
- It is imperative that control compartments, screens, or circulating air passageways of the heater be kept clean and free of obstructions. These areas provide the air necessary for safe operation.
- Do not operate the heater if it is not operating properly in any fashion or if you are uncertain. Call your dealer for a full explanation of your heater and what to expect.
- Do not store or use gasoline or other flammable liquids in the vicinity of this heater.
- Do not operate if any portion of the heater was submerged in water or if any corrosion occurs. Immediately call a qualified service technician to inspect the appliance and to replace any part of the control system and any gas control which has been under water.
- Because this heater can be controlled by a thermostat there is a possibility of the heater turning on and igniting any items placed on or near the appliance.
- Light the heater using the built-in igniter. Do not use matches or any other external device to light your heater.

Safety Warnings (continued)

- Never remove, replace, modify or substitute any part of the heater unless instructions are given in this manual. All other work must be done by a trained technician. Don't modify or replace orifices.
- The viewing glass should be opened only for conducting service.
- Allow the heater to cool before carrying out any maintenance or cleaning.
- Operate the heater according to the instructions included in this manual.
- If the main burners do not start correctly turn the gas off and call your dealer for service.
- This unit is not for use with solid fuel.
- Do not place anything inside the firebox (except the optional artwork).
- **Warning:** Do not operate appliance with the glass front removed, cracked or broken. Replacement of the glass should be done by a licensed or qualified service person.
- Do not throw this manual away. This manual has important operating and maintenance instructions that you will need at a later time. Always follow the instructions in this manual.
- Instruct everyone in the house how to shut gas off to the appliance and at the gas main shutoff valve. The gas main shutoff valve is usually next to the gas meter or propane tank and requires a wrench to shut off.
- Clothing or other flammable material should not be placed on or near the appliance.
- Any safety screen, guard, or barrier removed for servicing an appliance must be replaced prior to operating the appliance.
- Installation and repair should be done by a qualified service person. The appliance should be inspected before use and at least annually by a professional service person. More frequent cleaning might be required due to excessive lint from carpeting, bedding material, et cetera. It is imperative that control compartments, burners, and circulating air passageways of the appliance be kept clean.
- **Travis Industries, Inc. grants no warranty, implied or stated, for the installation or maintenance of your heater, and assumes no responsibility of any consequential damage(s).**

SAFETY WARNINGS:

- **DO NOT PLACE ARTICLES ON OR AGAINST THIS APPLIANCE.**
- **DO NOT USE OR STORE FLAMMABLE MATERIALS NEAR THIS APPLIANCE.**
- **DO NOT SPRAY AEROSOLS IN THE VICINITY OF THIS APPLIANCE WHILE IT IS IN OPERATION.**
- **DO NOT MODIFY THIS APPLIANCE.**
- **THIS INSTALLATION MUST CONFORM WITH THE FOLLOWING:**
 - Manufacturer's Installation instructions
 - Local Gas Fitting Regulations
 - Municipal Building Codes,
 - Refer to AS/NZS 5601.1 for Gas Installations.
 - S.A.A. Wiring Code
 - Local Electrical Regulations
 - Any other statutory regulations
- **NOT SUITABLE FOR MARINE USE.**
- **NOT INTENDED FOR FIREPLACE INSERT.**
- **APPLIANCES INCORPORATING A LIVE FUEL EFFECT, AND DESIGNED TO OPERATE WITH LUMINOUS FLAMES, MAY EXHIBIT SLIGHT CARBON DEPOSITION.**
- **THE GUARD IS FITTED TO THIS APPLIANCE TO REDUCE THE RISK OF FIRE OR INJURY FROM BURNS AND NO PART OF IT SHOULD BE PERMANENTLY REMOVED.**

PRIMARILY A DECORATIVE APPLIANCE – NOT CERTIFIED AS A SPACE HEATER.

Installation Options

- Residential or Commercial Installations
- Raised or Floor Placement
- Internal or External Chase
- Horizontal or Vertical Vent
- Bedroom Approved

MegaJoule Specifications

	Natural Gas	Propane
3' Burner – MegaJoules Per Hour	45.9	45.9
4' Burner - MegaJoules Per Hour	61.2	61.2
5' Burner - MegaJoules Per Hour	72	72
6' Burner – MegaJoules Per Hour	91.8	91.8
7' Burner – MegaJoules Per Hour	107.1	107.1

Master Module vs. Secondary Module

When ordering a 6' or longer DaVinci Custom Fireplace™ you will need to specify whether the master module is on the left or right. **When ordering the fireplace it is critical you specify which side the master module is located and communicate this with all involved with the installation. The orientation of the master module affects several installation parameters.** The secondary module(s) connect to the master module with a flexible gas line, electrical jumper, and LED connections.

Gas and Electrical Hookup

The master module has the gas inlet and electrical connections.

Air Intakes


Both the master and secondary modules have air intakes. Air intake location and quantity vary depending upon fireplace length (see "Air Intake Duct Location" on page 46 for details).

Power Vent

The power vent is centered on the master module (the vent is not centered on the fireplace, it is centered on the module – see the "Dimensions" on the following pages for details). If it is 7' to 10' long, you will need to use the high-volume power vent. For shorter fireplaces, use the low-volume power vent. .

Decimal Conversions

0.125"	0.25"	0.375"	0.5"	0.625"	0.75"	0.875"
1/8"	1/4"	3/8"	1/2"	5/8"	3/4"	7/8"

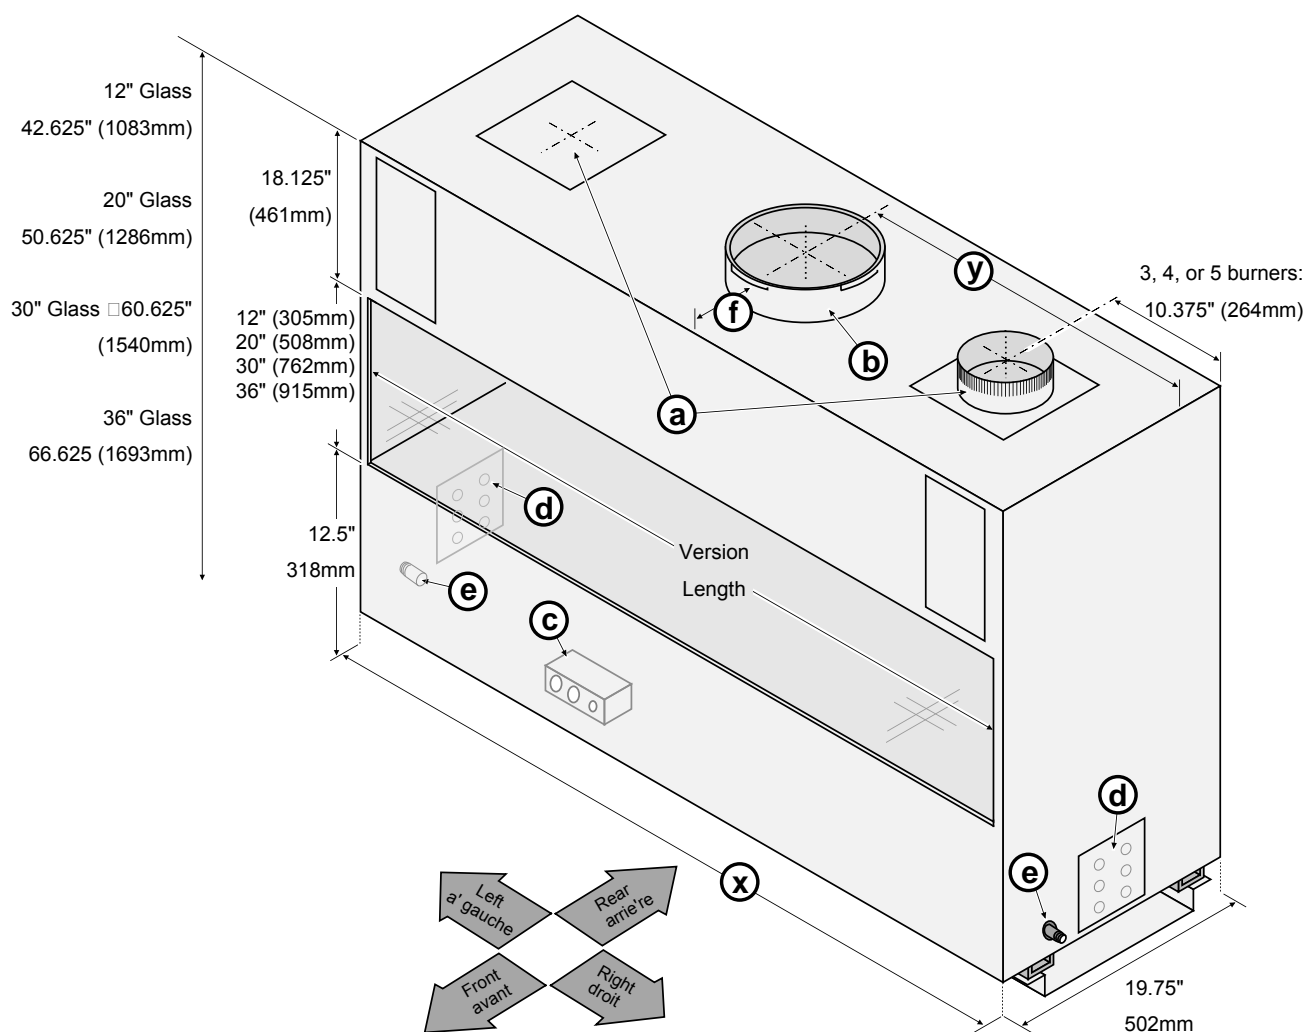Dimensions – Single Sided or See Through Configurations

- (a) **Air Intake** – See table below for quantity - Location determined by fireplace length (see “Air Intake Duct Location” on page 46).
 (b) **Vent Collar** – Uses 10” or 8” Diameter B-Vent (determined by power vent type). Centered on fireplace.
 (c) **Gas Control Valve** – Located to the front of the master module (front of fireplace is determined by gas control valve location).
 (d) **Electrical Junction Box** – On both sides (location determined at time of order – can be relocated), includes electrical input, exhaust vent power/harness, on-off LED harness.
 (e) **Gas Inlet** – Location is determined at time of order (can be relocated)
 (f) **Vent Collar Distance to Front/Back** – Approx. 4.375” (112mm) for 10” B-Vent, 5.375” (137mm) for 8” B-Vent

NOTE: When using a 2-sided fireplace, the front is determined by the gas control valve (it is to the front).




Important Notes Regarding Framing

We strongly suggest framing around the fireplace after it is in place. If you do frame before fireplace placement, add 6” to each side (12” total) to allow for fireplace assembly.

Horizontal Dimensions & Specifications

Version	Burners	Width (x)	Vent Loc. (y)	MJ / Hr	Intakes	Min. Weight
36” 1 Sided / See Through	3	38” (966mm)	19” (483mm)	45.9	1	700 lbs. 312 Kg
48” 1 Sided / See Through	4	50” (1270mm)	25” (635mm)	61.2	1	750 lbs. 334 Kg
60” 1 Sided / See Through	5	62” (1575mm)	31” (788mm)	72	1	900 lbs. 401 Kg
72” 1 Sided / See Through	6	74” (1880mm)	31” (788mm)	91.8	2	1100 lbs. 490 Kg
84” 1 Sided / See Through	7	86” (2185mm)	25” (635mm)	107.1	2	1200 lbs. 534 Kg

Dimensions – Pier Configuration

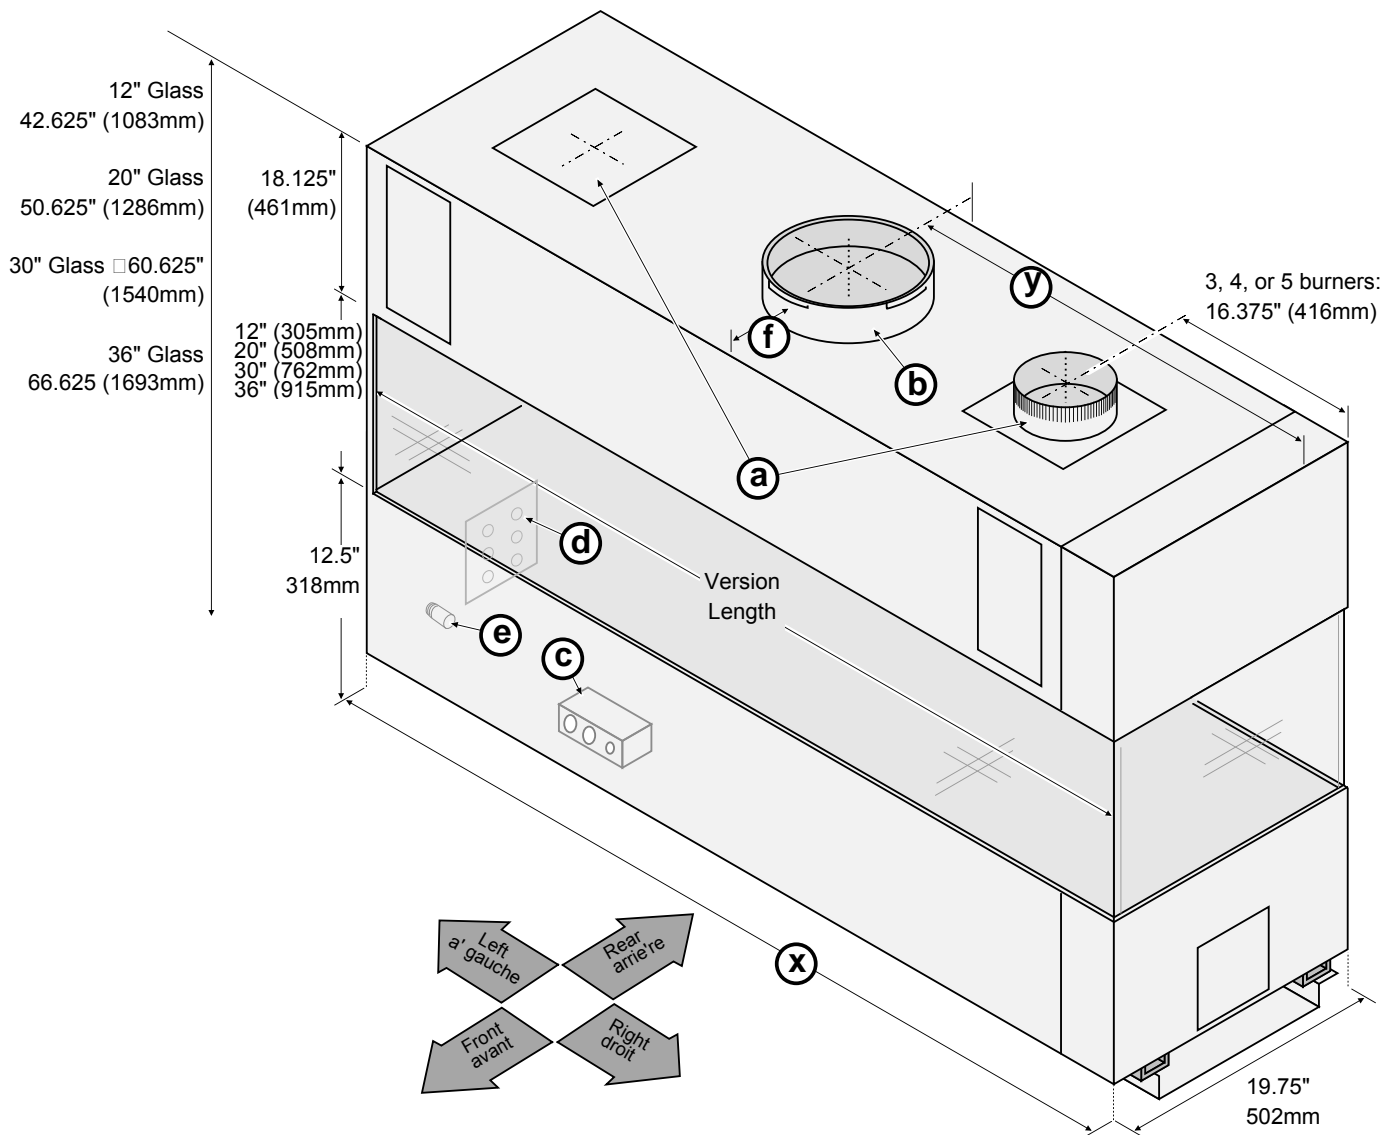


- (a) **Air intake** – See table below for quantity - Location determined by fireplace length (see “Air Intake Duct Location” on page 46).
- (b) **Vent Collar** – Uses 10" or 8" Diameter B-Vent (determined by power vent type). Centered on fireplace.
- (c) **Gas Control Valve** – Located to the front of the master module (front of fireplace is determined by gas control valve location).
- (d) **Electrical Junction Box** – On both sides (location determined at time of order – can be relocated), includes electrical input, exhaust vent power/harness, on-off LED harness.
- (e) **Gas Inlet** – Location is determined at time of order (can be relocated)
- (f) **Vent Collar Distance to Front/Back** – Approx. 4.375" (112mm) for 10" B-Vent, 5.375" (137mm) for 8" B-Vent

NOTE: The front is determined by the gas control valve (it is to the front).

Horizontal Dimensions & Specifications

Version	Burners	Overall Width (x)	Vent Loc. (y)	MJ / Hr	Intakes	Min. Weight
42" Pier	3	43" (1093mm)	24" (610mm)	45.9	1	700 lbs. 312 Kg
54" Pier	4	55" (1397mm)	30" (762mm)	61.2	1	750 lbs. 334 Kg
66" Pier	5	67" (1702mm)	36" (915mm)	72	1	900 lbs. 401 Kg
78" Pier	6	79" (2007mm)	24" (610mm)	91.8	2	1100 lbs. 490 Kg

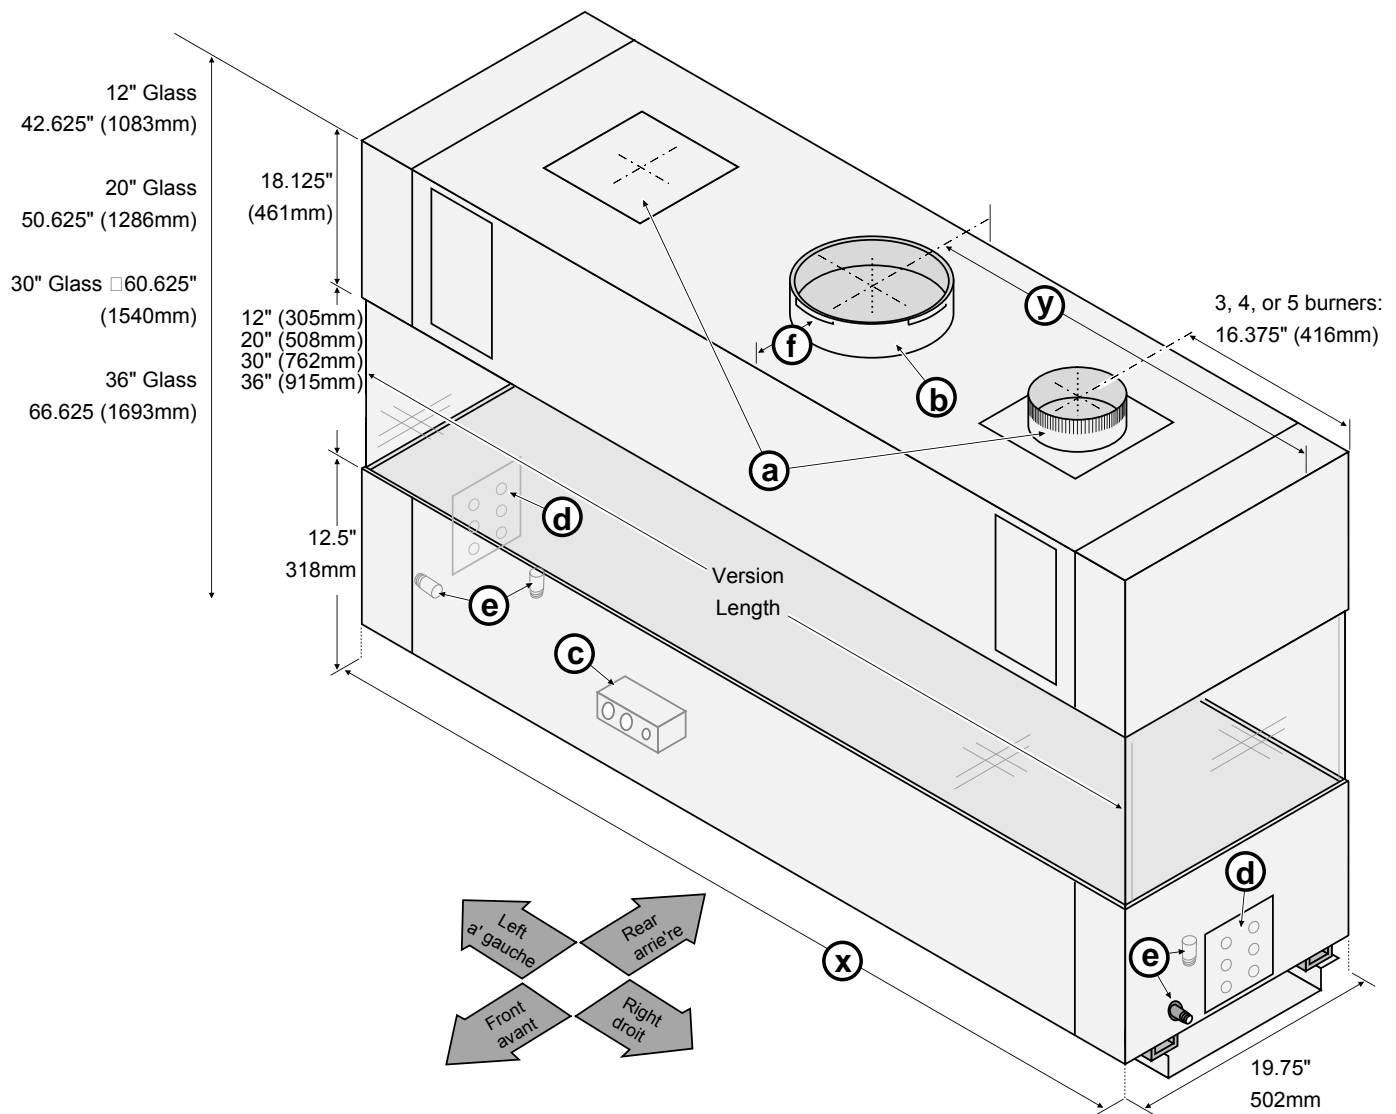Dimensions – Island Configuration

- (a) **Air Intake** – See table below for quantity - Location determined by fireplace length (see “Air Intake Duct Location” on page 46).
 (b) **Vent Collar** – Uses 10” or 8” Diameter B-Vent (determined by power vent type). Centered on fireplace.
 (c) **Gas Control Valve** – Located to the front of the master module (front of fireplace is determined by gas control valve location).
 (d) **Electrical Junction Box** – On both sides (location determined at time of order – can be relocated), includes electrical input, exhaust vent power/harness, on-off LED harness.
 (e) **Gas Inlet** – Location is determined at time of order (can be relocated)
 (f) **Vent Collar Distance to Front/Back** – Approx. 4.375” (112mm) for 10” B-Vent, 5.375” (137mm) for 8” B-Vent


NOTE: When using an island fireplace, the harnesses will need to be long (typically 50’ to 150’)

NOTE: The front is determined by the gas control valve (it is to the front).

Horizontal Dimensions & Specifications

Version	Burners	Overall Width (x)	Vent Loc. (y)	MJ / Hr	Intakes	Min. Weight
48” Island	3	48.125” (1223mm)	24” (610mm)	45.9	1	700 lbs. 312 Kg
60” Island	4	60.125” (1528mm)	30” (762mm)	61.2	1	750 lbs. 334 Kg
72” Island	5	72.125” (1832mm)	36” (915mm)	72	1	900 lbs. 401 Kg
84” Island	6	84.125” (2137mm)	24” (610mm)	91.8	2	1100 lbs. 490 Kg


Dimensions – Full Bay Configuration

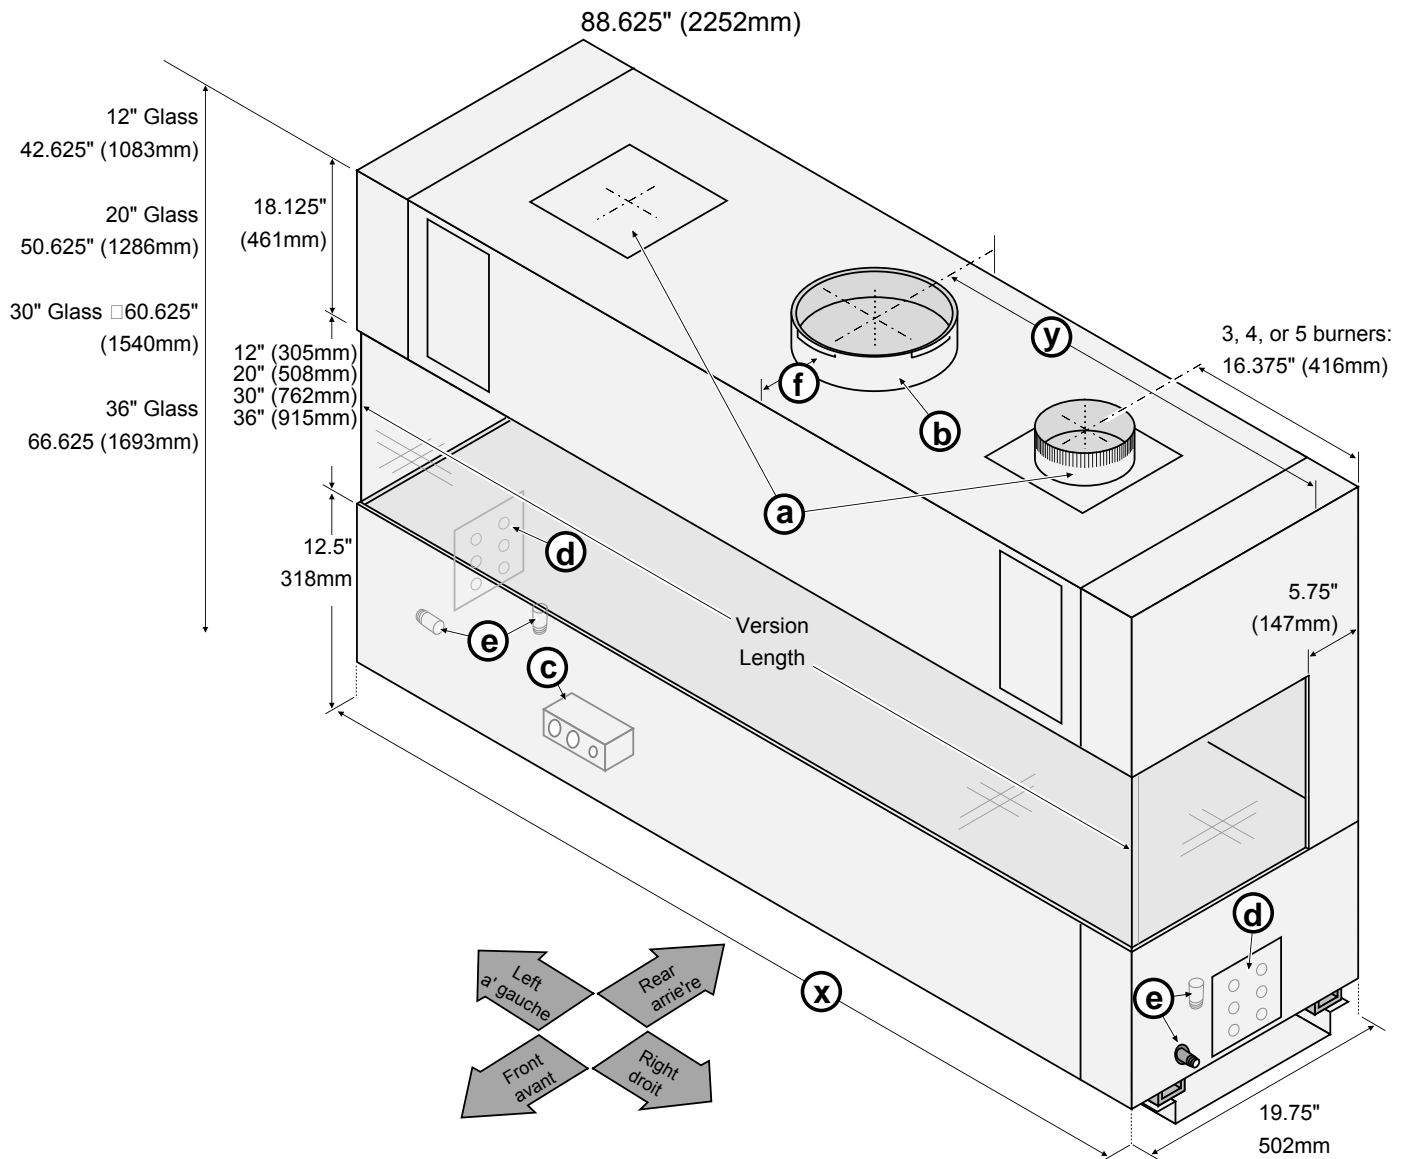

- (a) **Air intake** – See table below for quantity - Location determined by fireplace length (see "Air Intake Duct Location" on page 46).
- (b) **Vent Collar** – Uses 10" or 8" Diameter B-Vent (determined by power vent type). Centered on fireplace.
- (c) **Gas Control Valve** – Located to the front of the master module (front of fireplace is determined by gas control valve location).
- (d) **Electrical Junction Box** – On both sides (location determined at time of order – can be relocated), includes electrical input, exhaust vent power/harness, on-off LED harness.
- (e) **Gas Inlet** – Location is determined at time of order (can be relocated)
- (f) **Vent Collar Distance to Front/Back** – Approx. 4.375" (112mm) for 10" B-Vent, 5.375" (137mm) for 8" B-Vent

Horizontal Dimensions & Specifications

Version	Burners	Overall Width (x)	Vent Location (y)	MJ / Hr	Intakes	Min. Weight
48" Full Bay	3	48.125" (1223mm)	24" (610mm)	45.9	1	700 lbs. 312 Kg
60" Full Bay	4	60.125" (1528mm)	30" (762mm)	61.2	1	750 lbs. 334 Kg
72" Full Bay	5	72.125" (1832mm)	36" (915mm)	72	1	900 lbs. 401 Kg
84" Full Bay	6	84.125" (2137mm)	24" (610mm)	91.8	2	1100 lbs. 490 Kg

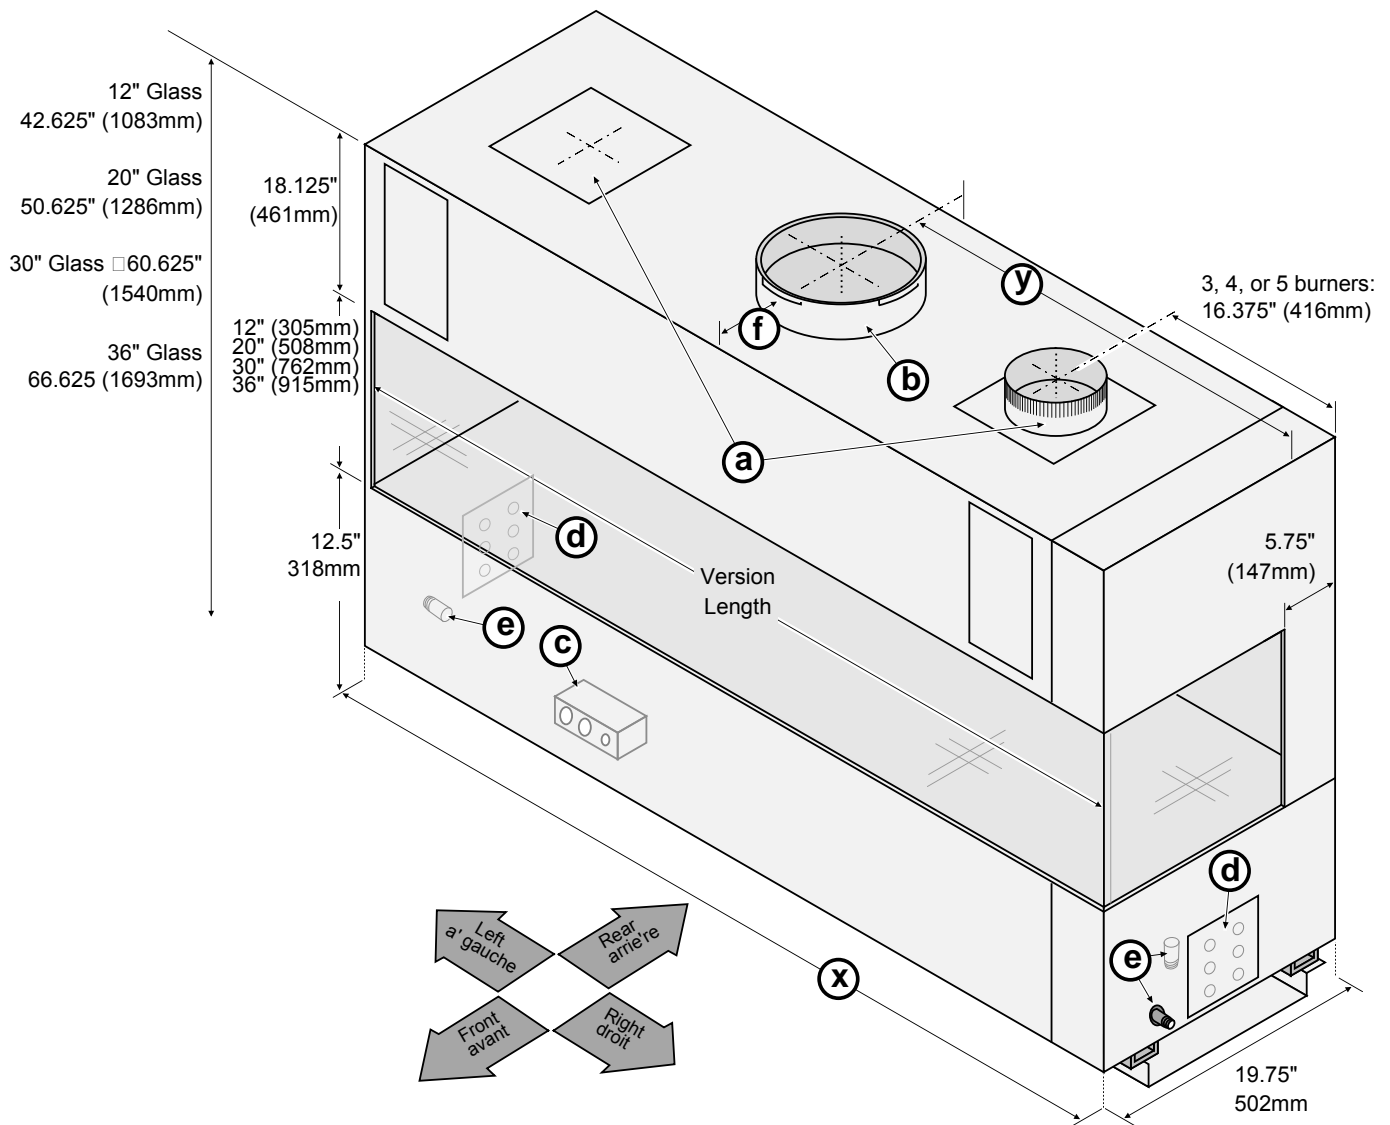
Dimensions – Right Side Configuration

- (a) **Air intake** – See table below for quantity - Location determined by fireplace length (see “Air Intake Duct Location” on page 46).
- (b) **Vent Collar** – Uses 10" or 8" Diameter B-Vent (determined by power vent type). Centered on fireplace.
- (c) **Gas Control Valve** – Located to the front of the master module (front of fireplace is determined by gas control valve location).
- (d) **Electrical Junction Box** – On both sides (location determined at time of order – can be relocated), includes electrical input, exhaust vent power/harness, on-off LED harness.
- (e) **Gas Inlet** – Location is determined at time of order (can be relocated)
- (f) **Vent Collar Distance to Front/Back** – Approx. 4.375" (112mm) for 10" B-Vent, 5.375" (137mm) for 8" B-Vent

Horizontal Dimensions & Specifications

Version	Burners	Overall Width (x)	Vent Loc (y)	MJ / Hr	Intakes	Min. Weight
42" Right Side	3	43" (1093mm)	24" (610mm)	45.9	1	700 lbs. 312 Kg
54" Right Side	4	55" (1397mm)	30" (762mm)	61.2	1	750 lbs. 334 Kg
66" Right Side	5	67" (1702mm)	36" (915mm)	72	1	900 lbs. 401 Kg
78" Right Side	6	79" (2007mm)	24" (610mm)	91.8	2	1100 lbs. 490 Kg

Dimensions – Left Side Configuration

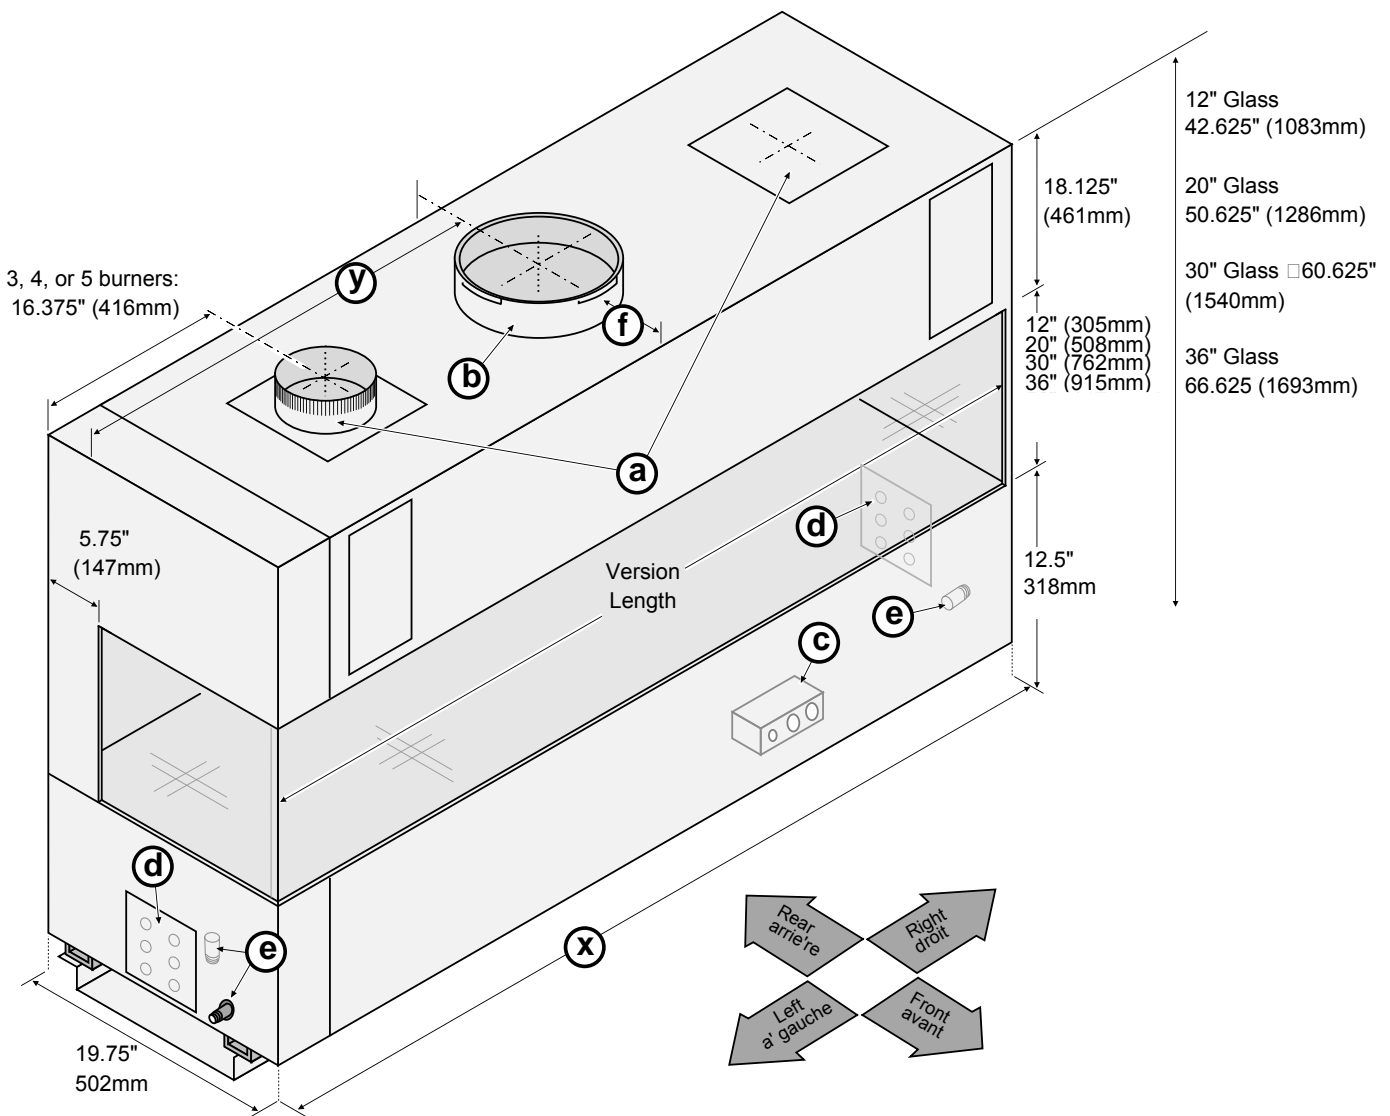

- (a) **Air Intake** – See table below for quantity - Location determined by fireplace length (see “Air Intake Duct Location” on page 46).
- (b) **Vent Collar** – Uses 10" or 8" Diameter B-Vent (determined by power vent type). Centered on fireplace.
- (c) **Gas Control Valve** – Located to the front of the master module (front of fireplace is determined by gas control valve location).
- (d) **Electrical Junction Box** – On both sides (location determined at time of order – can be relocated), includes electrical input, exhaust vent power/harness, on-off LED harness.
- (e) **Gas Inlet** – Location is determined at time of order (can be relocated)
- (f) **Vent Collar Distance to Front/Back** – Approx. 4.375" (112mm) for 10" B-Vent, 5.375" (137mm) for 8" B-Vent

Horizontal Dimensions & Specifications

Version	Burner s	Overall Width (x)	Vent Loc. (y)	MJ / Hr	Intakes	Min. Weight
42" Left Side	3	43" (1093mm)	24" (610mm)	45.9	1	700 lbs. 312 Kg
54" Left Side	4	55" (1397mm)	30" (762mm)	61.2	1	750 lbs. 334 Kg
66" Left Side	5	67" (1702mm)	36" (915mm)	72	1	900 lbs. 401 Kg
78" Left Side	6	79" (2007mm)	24" (610mm)	91.8	2	1100 lbs. 490 Kg

Packing List**Included Hardware (for Set & Vent)**

ITEM	Qty	Location	Notes
Manual	1	You're looking at it baby!	
CAT5 cable	1	Hardware Box	25ft, 50ft or 100ft Length
TouchSmart Mounting Plate	1	Hardware Box	
Mounting Plate Box – New Construction	1	Hardware Box	
Mounting Plate Backplate - Retrofit	1	Hardware Box	
TouchSmart controller	1	Hardware Box	
TouchSmart Hardware pk.	1	Hardware Box	- (6) Lock Ties (for wiring) - (3) Round magnets w/ felt pads - (2) #8 Self-Drilling Screws - (2) 8-32 x 1.5" Screws (for Mtg Plate)
Exhaust Blower Assembly (B)	1	On its own pallet	Low Volume 94400903A(B) High Volume 94400904A(B) Inline 94400905A

Additional Equipment Required (for Set & Vent)

ITEM	REQUIRED	WHERE SHIPPED	SKU
Suction Cups For Glass	Yes	Ordered separately	94400914 (includes 2 suction cups)
Fireback Liners (see "Firebacks" on page 64 for qty.)	Yes	In its own box	Gloss Black Enamel Silver Painted Matte Black Painted
Exhaust Damper Wiring Harness	Yes	Hardware Box	50 Foot 94700887 150 Foot 94700888 250 Foot 94700889
10" B-Vent	Yes	In its own box(s)	36" Section 98900060 18" Section 98900061 90° Elbow 98900062 45° Elbow 98900063 12" Adjustable Section 98900064 Wall Strap 98900065 Fire Stop 98900066
Recommended Intake Damper(s)	(A)	Hardware Box	Hori w Term 6" (98900093) Hori w Term 8" (98900094) Inline Dmpr 6" (98900078) Inline Dmpr 8" (98900079)
Air Intakes (6" or 8" Dia.)	(A)		
Intake Wiring Harness	(A)	Hardware Box	25' Length (Black and White Wire)

(A) Category 1 Fireplaces have 1 intake. Category 2 Fireplaces have up to 3 intakes. Refer to the configuration of your appliance to determine the number of intakes required.

(B) Category 1 Fireplaces use the smaller exhaust blower.
Category 2 Fireplaces use the larger exhaust blower.

Finalization Hardware (install after fireplace is in place – you may hold at dealership)

ITEM	Location	Notes
Crushed Glass	Hardware Box	Center Channel uses 1.5 Lbs. (cups) per foot Outer Channel uses 1 Lbs. (cups) per foot
Glass Panes	In its own Crate/Pallet	Pallet is strapped to fireplace

Recommended Installation Procedure

Important Notes Regarding Framing

We strongly suggest framing around the fireplace after it is in place. Because this fireplace can be very large, and difficult to position, you will need to make accommodations with the framing to allow for placement. For one-sided, see-through, bay, or side configurations, you may wish to leave one or both sides of the framing open to allow for fireplace placement and hookup. If framing the opening prior to fireplace placement, you will also wish to make the framing 6" (150mm) wider on each framed side (12" / 300mm wider for singled sided/see through configurations). This allows for fireplace access and will be covered with drywall (or other material) after the fireplace is assembled.

The header above the fireplace is best installed after the fireplace is in position and the vent attached. The fireplace must be lifted onto the alignment track, so additional space above the fireplace is required for lifting and placement.

1. Prepare the installation location. If placing the fireplace on a platform, build the platform, making sure to accommodate the weight of the fireplace and venting. Verify the platform is level and plumb.
2. Install the alignment track (if used - see page 16).
NOTE: The alignment track is optional. We recommend using the track because it helps solidify the base of the fireplace and it allows the fireplace to be anchored at the base.
3. Place the fireplace on the alignment track and verify it is level and aligned correctly.
4. Install the periphery components:
 - a) Install the vent (and power vent blower assembly).
 - b) Install the air intake(s).
 - c) Install the gas line.
 - d) Install the electrical line and TouchSmart controller.
5. Test operation of the fireplace before attaching facing or drywall (this can be done with no crushed glass and the outer glass pane(s) removed). This allows the installer to verify all connections and diagnose issues with the fireplace exterior accessible.
 - a) Adjust the air shutters (if needed)
 - b) Adjust the exhaust blower (if needed)
 - c) Shut the fireplace off. Install the outer the glass pane(s).
 - d) Re-start the fireplace and test glass pane temperature (allow fireplace to burn 2 hours)
6. Frame the area around the fireplace.
7. Install the drywall and/or facing.
8. Install the hearth (if applicable). Install the mantel (if applicable).
9. Finalize the installation (see page 71).

Recommended Specialty Tools

- Suction Cups (94400914)
- Large Level (or Laser Level)

Alignment Track Installation



The alignment track is optional. We recommend using the track because it helps solidify the base of the fireplace and it allows the fireplace to be anchored at the base.


The alignment track is secured to the platform (or sub-floor). The fireplace is then placed on top of it. Before attaching the alignment track, make sure the platform (or sub-floor) is level and capable of supporting the fireplace and vent. Use minimum $\frac{3}{4}$ " plywood for the platform.

Fireplaces Up to 5 Burners

These fireplaces use a 1-piece alignment track (skip steps "a" and "b" below). Secure the track to the platform (see "c" below). Make sure to align the track to the platform and framing (the front edge of the track is 3.375" (86mm) from the front edge of the fireplace and platform).

6 & 7 Burner Fireplaces

For 6 & 7 burner fireplaces, assemble the alignment track using the included #8 screws (see "a" and "b" below). Once assembled, it may be secured to the platform (see "c" below). Make sure to align the track to the platform and framing (the front edge of the track is 3.375" (86mm) from the front edge of the fireplace and platform).

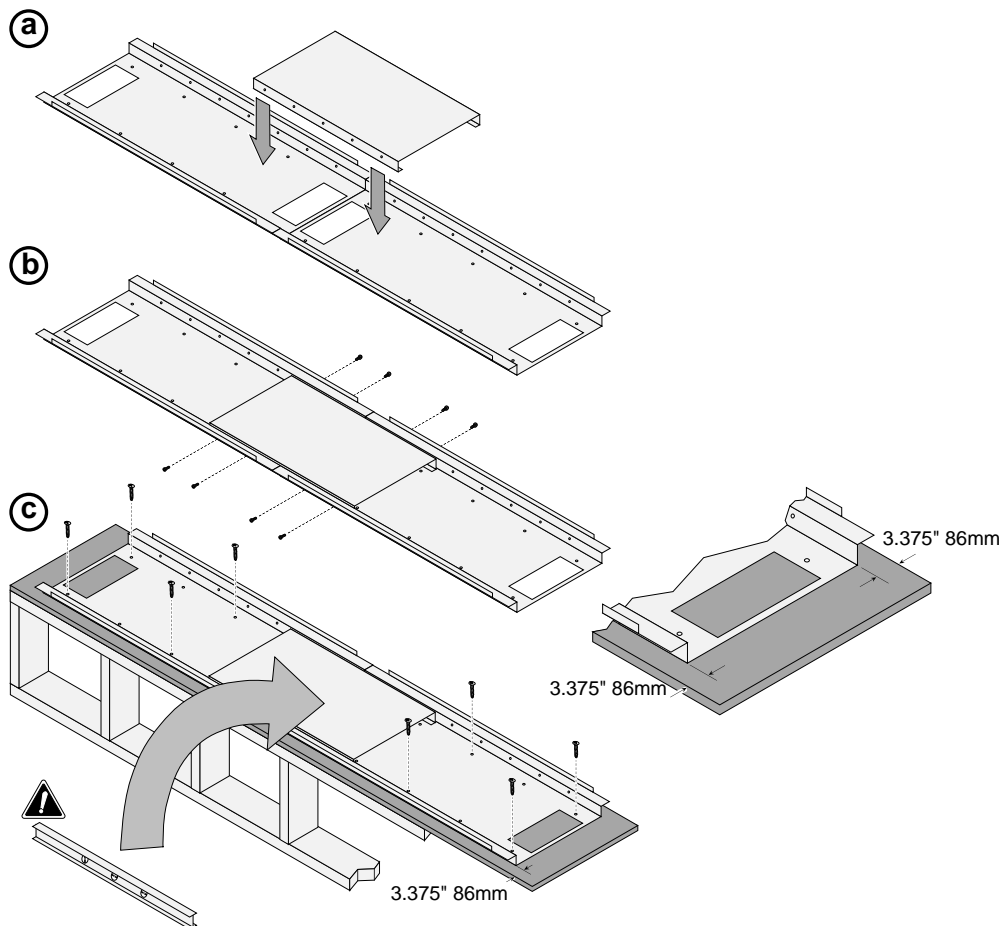


Verify the Alignment Track is Level Before Proceeding

Use a level to verify the alignment track is level (check several spots across the entire length). Use shims (or washers/spacers) under the track, if necessary, to make sure the track is level.

Secure the Fireplace to the Alignment Track

The alignment track has horizontal holes that allow for the fireplace to be secured to the track. Make sure the fireplace is correctly positioned left to right, then use #8 zip screws to secure the fireplace to the track.

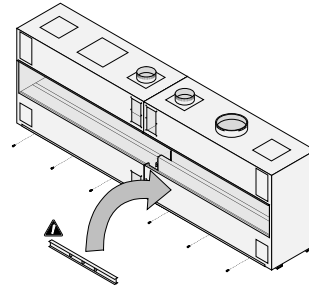


Fireplace Placement Requirements

- This appliance may be installed into a residential or commercial/public space.
- Fireplace must be installed on a level surface capable of supporting the fireplace and vent
- Fireplace must be placed directly on wood or non-combustible surface (not on linoleum or carpet)
- Fireplace should be located out of traffic and away from furniture and draperies.
- Fireplace may be placed in a bedroom.

Clearances

- (a) Clearance to Sides of Fireplace: 0"
- (b) Clearance to Back of Fireplace: 0"
- (c) Clearance to Front of Fireplace: 0"
- NOTE: do not cover the glass opening with any material.
- NOTE: Side walls may be placed directly to the side of the fireplace.
- (d) Clearance to Top of Fireplace: 0"
- (e) Clearance to Bottom of Fireplace: 0" (may be placed directly on subfloor).
- (f) Clearance to Vent 1" (25mm)

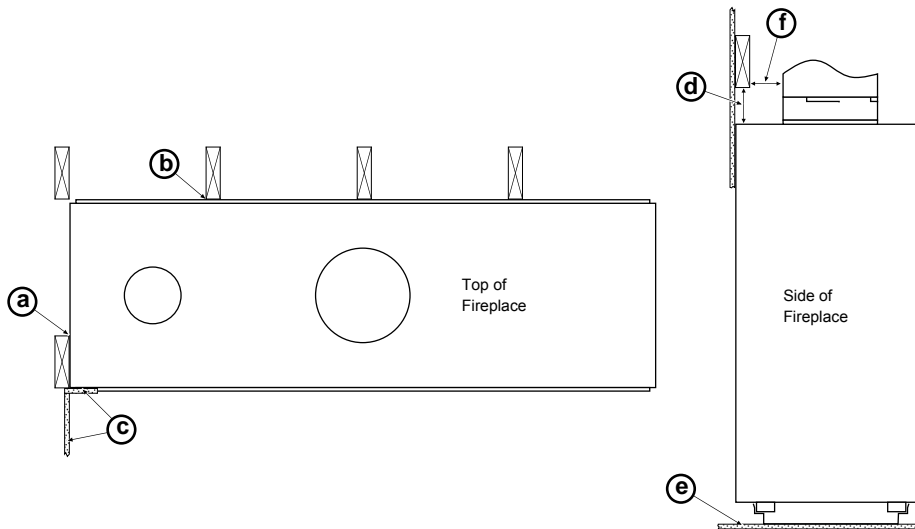


Raised Fireplaces

- The fireplace (and hearth, if desired) may be placed on a platform designed to support the fireplace and vent.
- The base of the platform must be a minimum 3/4" plywood (or equivalent). This provides the necessary support for the fireplace runners.

HINT: We typically have displayed this fireplace on a 24" to 36" raised platform. Keep in mind that the firebox opening (base of the flames) is 12" above the base. Desired position may vary depending upon room size, typical viewing angle, and aesthetic intent.

Typical Framing Dims. – One Sided Configuration**Important Notes Regarding Framing**

We strongly suggest framing around the fireplace after it is in place. If you do frame before fireplace placement, add 6" to each side to allow for fireplace access.

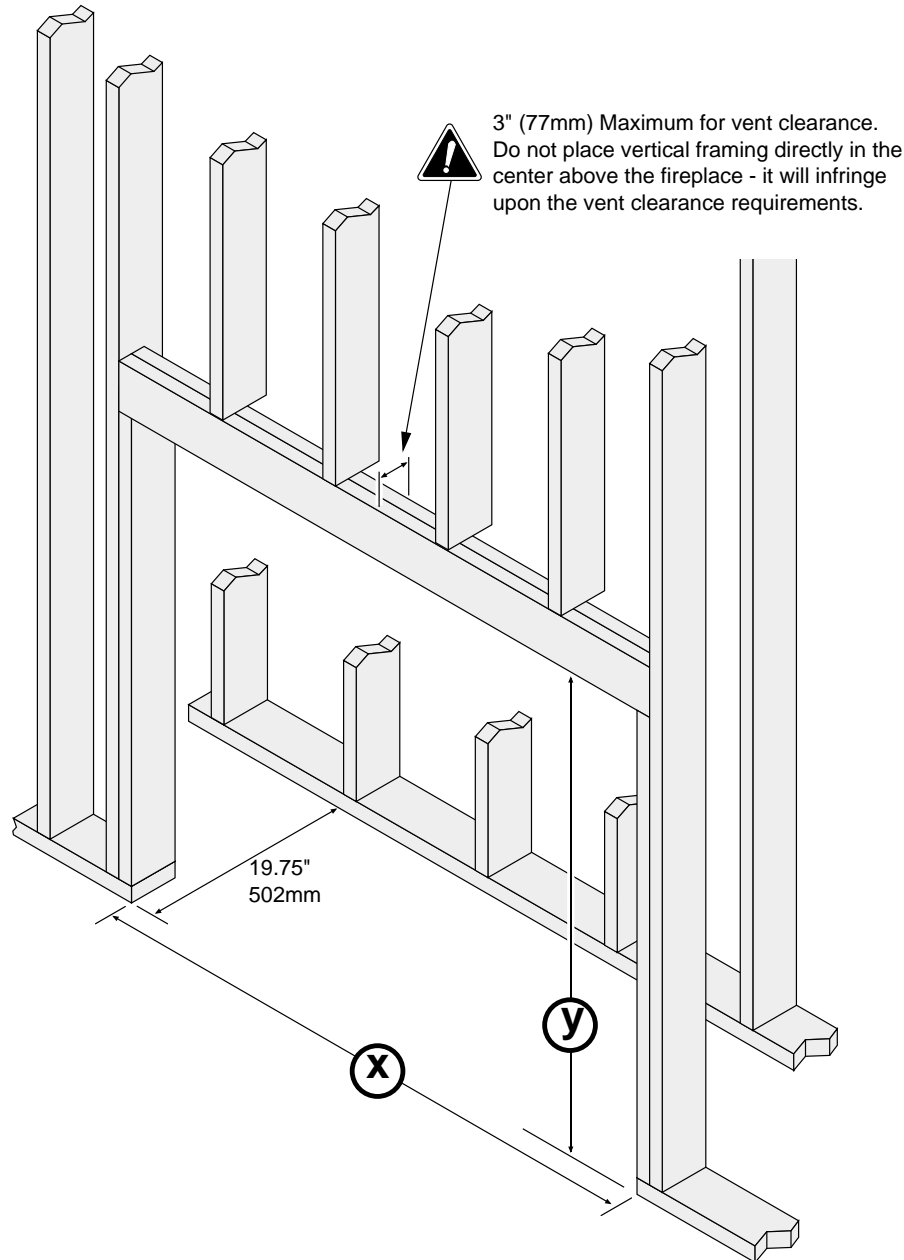**Minimum Framing Dimensions**


Version	Width (x)	Height (y) – 12" Glass	Height (y) – 20" Glass	Height (y) – 30" Glass	Height (y) – 36" Glass
36" Single Sided	38.5" (978mm)	50.625" (1286mm)	58.625" (1490mm)	68.625" (1744mm)	74.625" (1896mm)
48" Single Sided	50.5" (1283mm)				
60" Single Sided	62.5" (1588mm)				
72" Single Sided	74.5" (1893mm)				
84" Single Sided	86.5" (2198mm)				

Typical Framing Dims. – See Through Configuration




Important Notes Regarding Framing

We strongly suggest framing around the fireplace after it is in place. If you do frame before fireplace placement, add 6" to each side to allow for fireplace access.

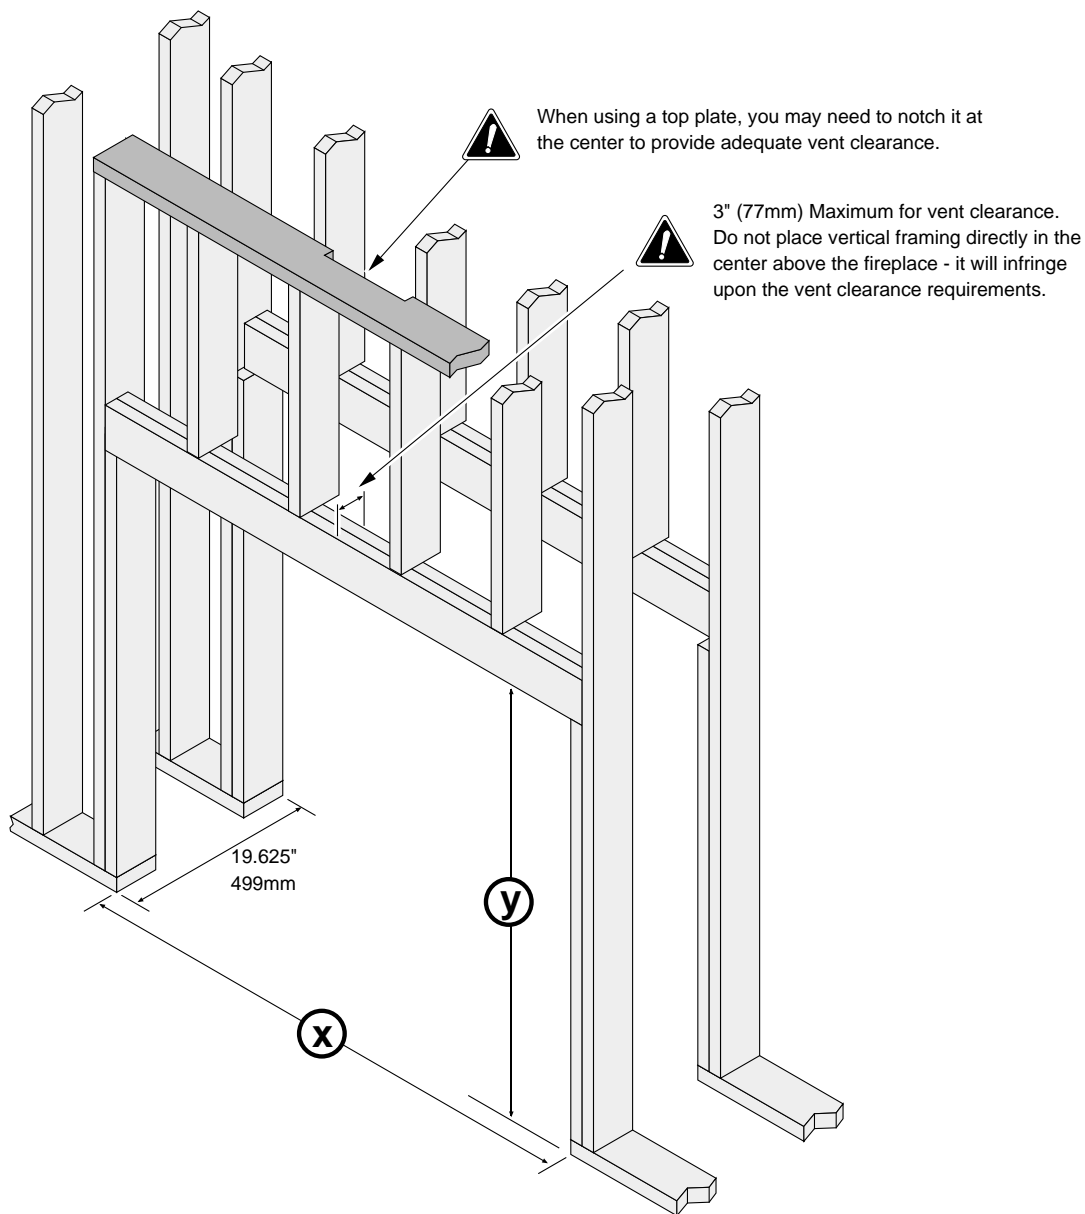


Minimum Framing Dimensions

Version	Width (x)	Height (y) – 12" Glass	Height (y) – 20" Glass	Height (y) – 30" Glass	Height (y) – 36" Glass
36" See Through	38.5" (978mm)	50.625" (1286mm)	58.625" (1490mm)	68.625" (1744mm)	74.625" (1896mm)
48" See Through	50.5" (1283mm)				
60" See Through	62.5" (1588mm)				
72" See Through	74.5" (1893mm)				
84" See Through	86.5" (2198mm)				

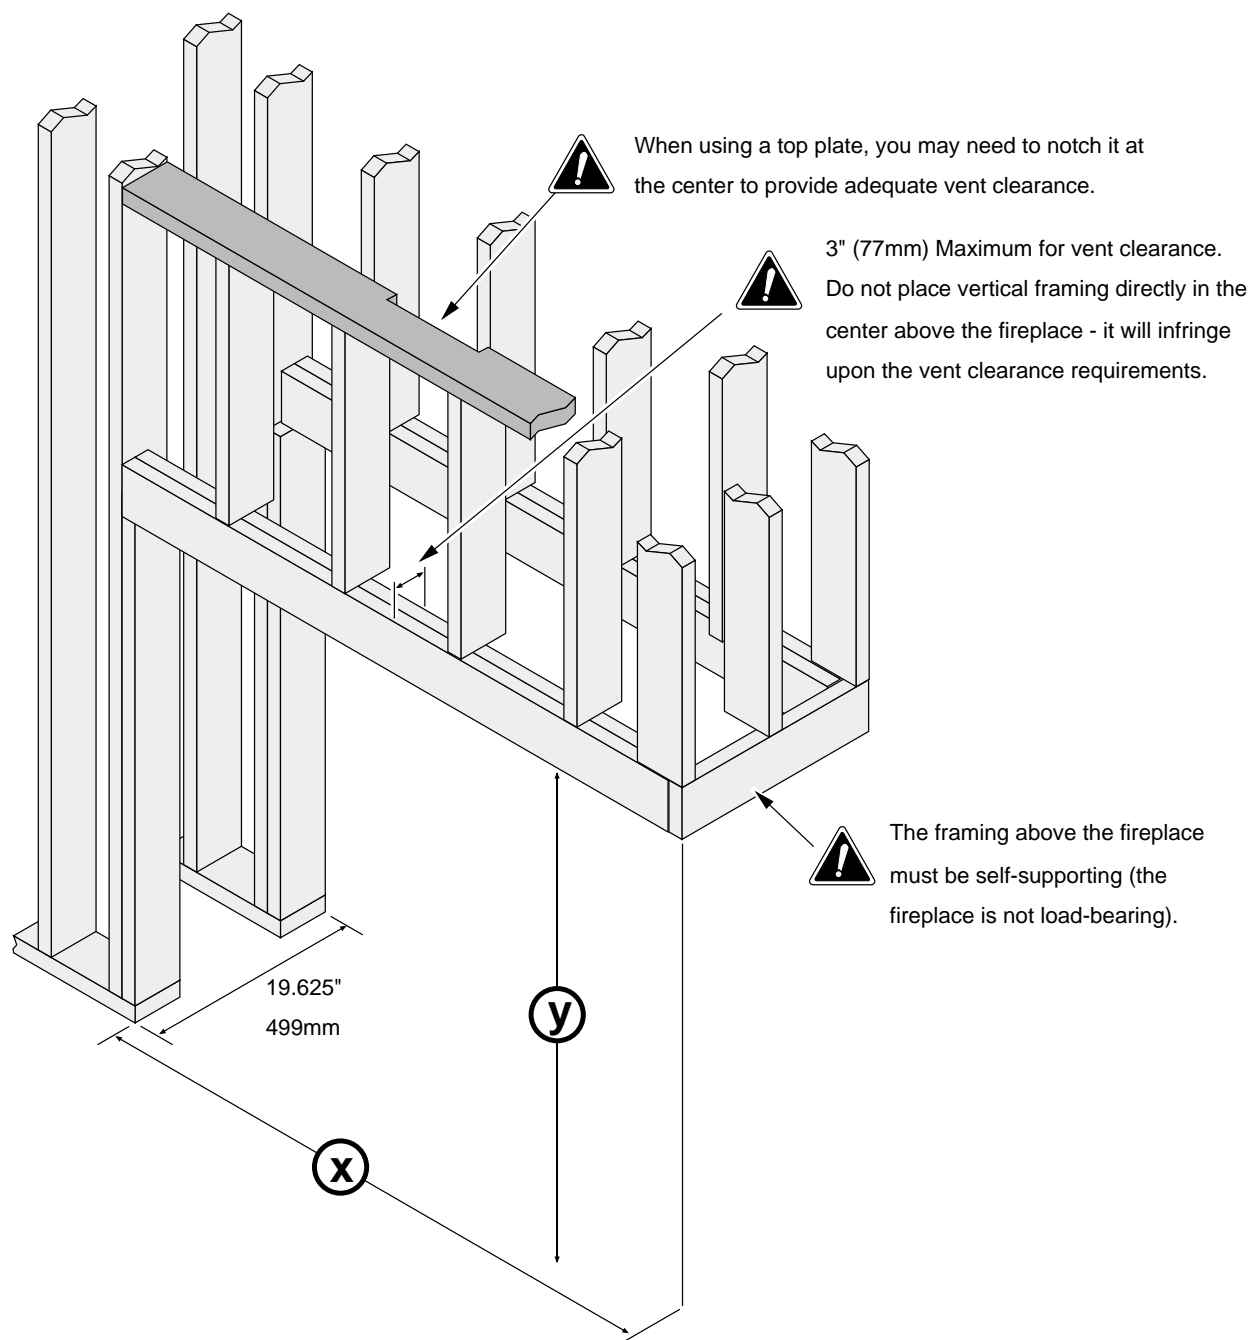Typical Framing Dims. – Pier Configuration**Minimum Framing Dimensions**


Version	Width (x)	Height (y) – 12" Glass	Height (y) – 20" Glass	Height (y) – 30" Glass	Height (y) – 36" Glass
42" Pier	43.5" (1105mm)	50.625" (1286mm)	58.625" (1490mm)	68.625" (1744mm)	74.625" (1896mm)
54" Pier	55.5" (1410mm)				
66" Pier	67.5" (1715mm)				
78" Pier	79.5" (2020mm)				

Typical Framing Dims. – Island Configuration

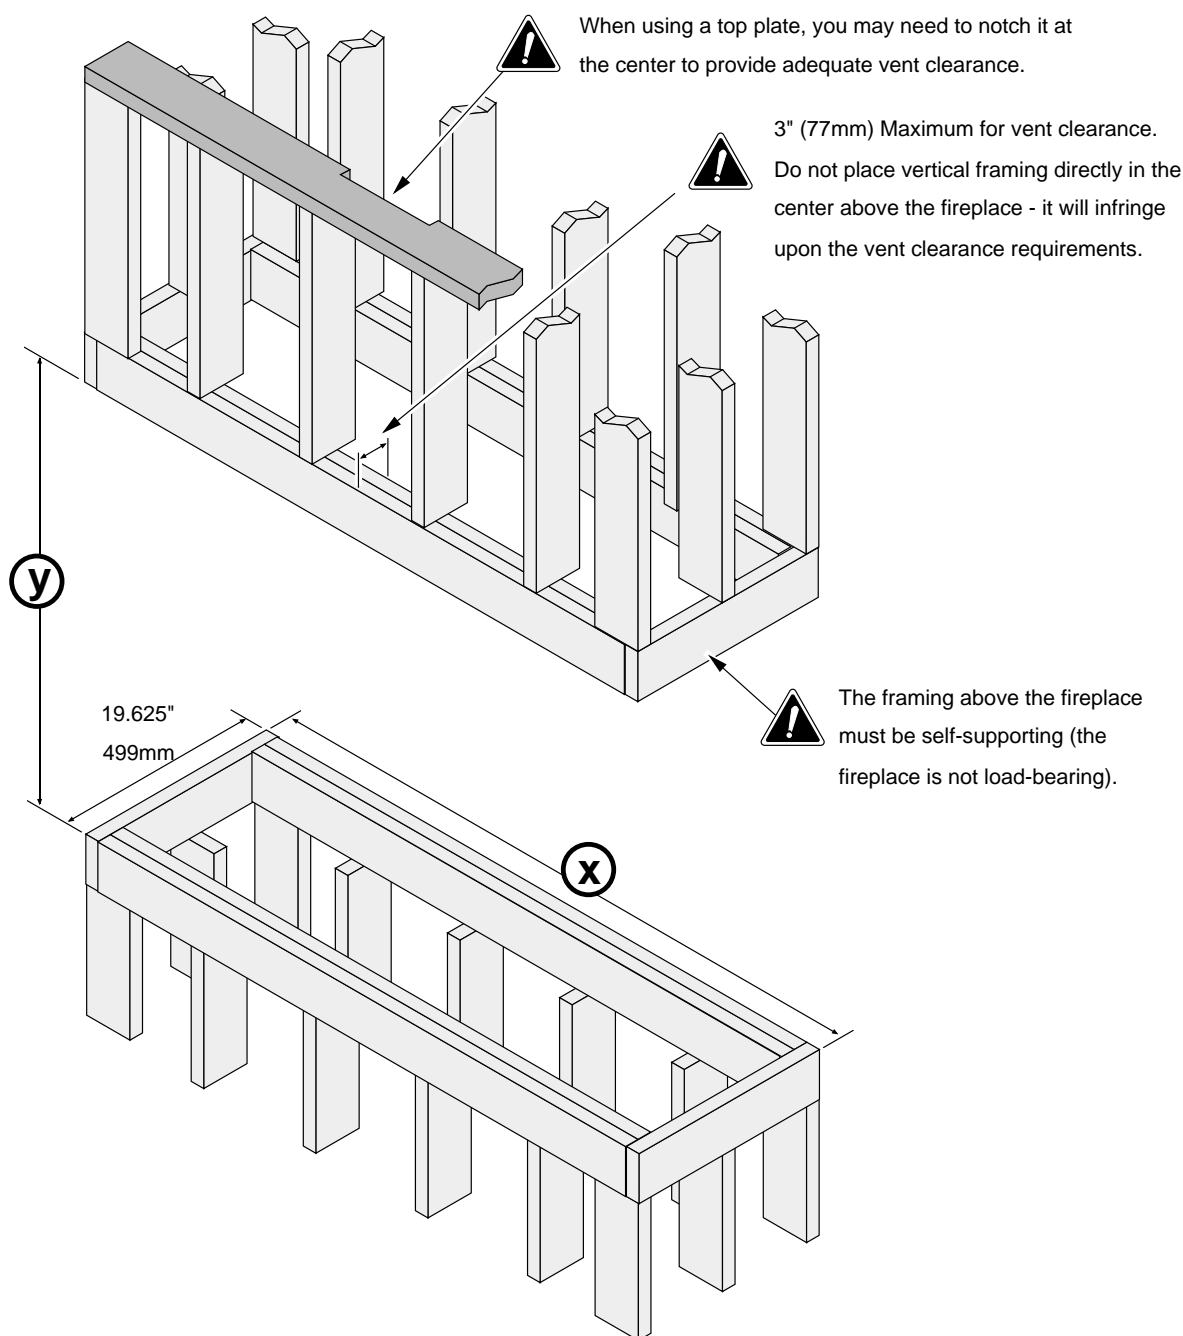

Minimum Framing Dimensions

Version	Width (x)	Height (y) – 12" Glass	Height (y) – 20" Glass	Height (y) – 30" Glass	Height (y) – 36" Glass
48" Island	48.125" (1223mm)	50.625" (1286mm)	58.625" (1490mm)	68.625" (1744mm)	74.625" (1896mm)
60" Island	60.125" (1528mm)				
72" Island	72.125" (1832mm)				
84" Island	84.125" (2137mm)				

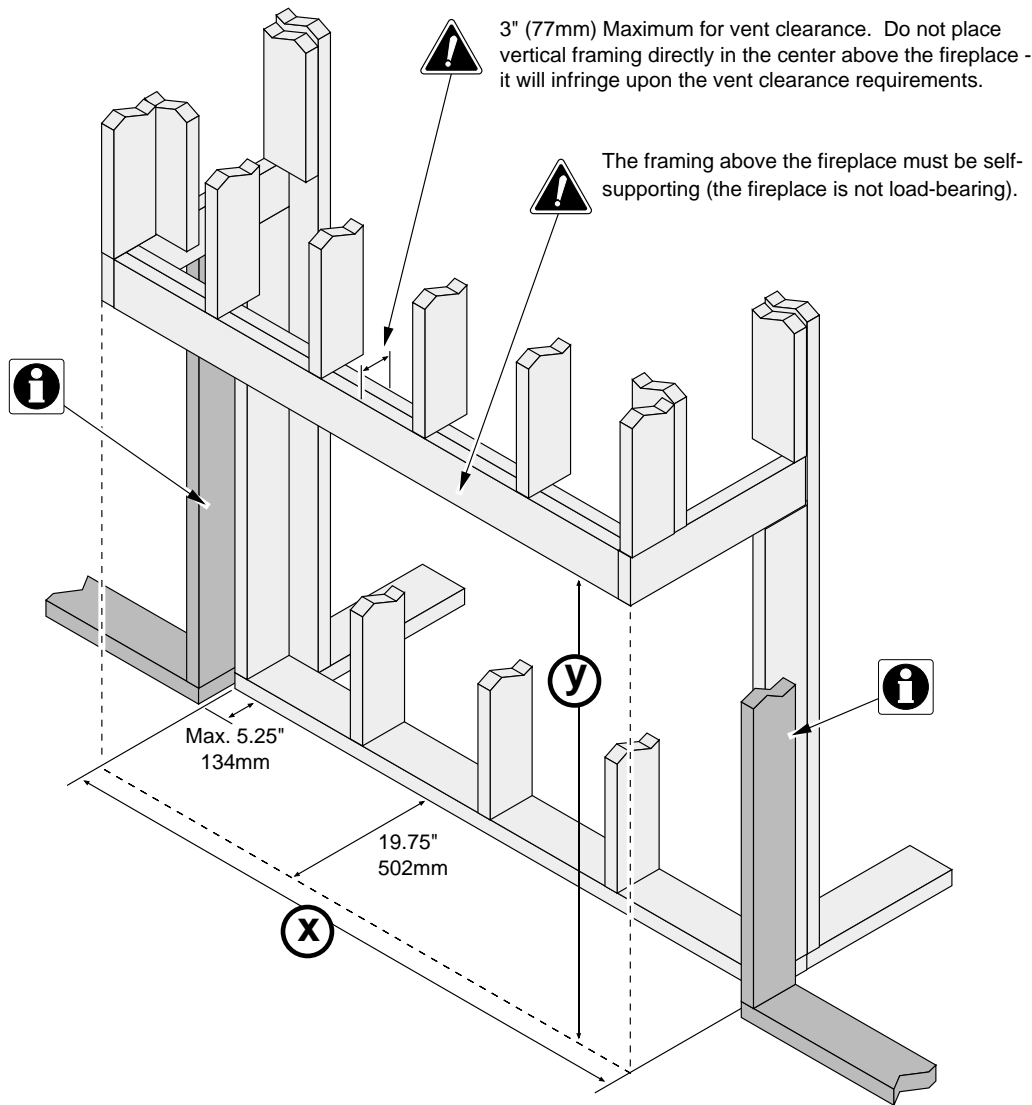
Typical Framing Dims. – Full Bay Configuration**Recessing the Back Edge of the Fireplace (Optional)**

Installers may wish to recess the back of the fireplace to allow for a more shallow installation, placing the side glass next to the side wall(s). If you decide to recess the back of the fireplace, make sure to accommodate the framing and facing dimensions. The back edge of the glass extends to a location 5.75" (147mm) from the back of the fireplace (see dimensions page for details). Framing for this type of installation may protrude forward from the back wall of the opening a maximum of 5.25" (134mm) when using ½" (13mm) drywall. Consult the dimensions page and plan your installation prior to framing the opening.

Minimum Framing Dimensions

Version	Width (x)	Height (y) – 12" Glass	Height (y) – 20" Glass	Height (y) – 30" Glass	Height (y) – 36" Glass
48" Full Bay	48.125" (1223mm)	50.625" (1286mm)	58.625" (1490mm)	68.625" (1744mm)	74.625" (1896mm)
60" Full Bay	60.125" (1528mm)				
72" Full Bay	72.125" (1832mm)				
84" Full Bay	84.125" (2137mm)				

Typical Framing Dims – Right-Sided Corner

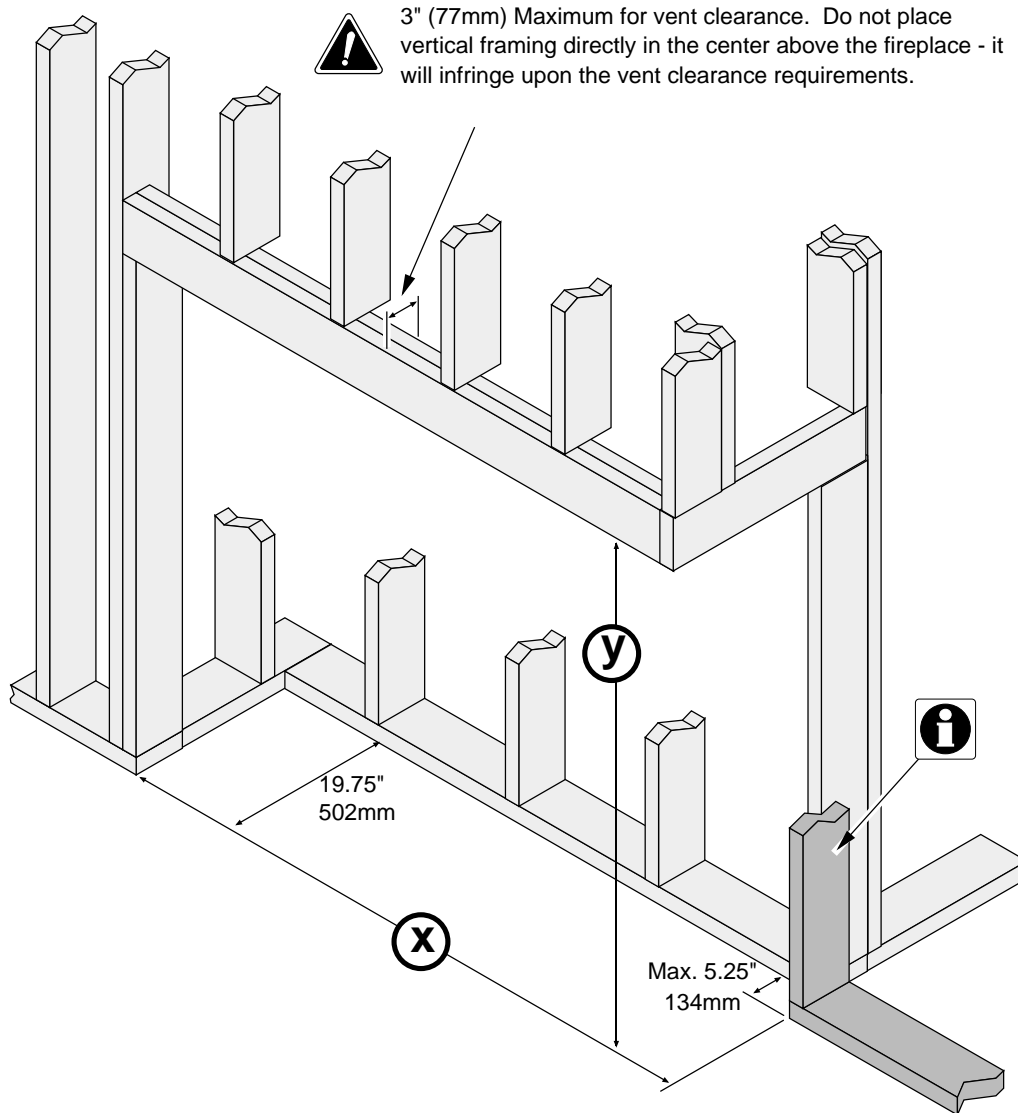


Recessing the Back Edge of the Fireplace (Optional)

Installers may wish to recess the back of the fireplace to allow for a more shallow installation, placing the side glass next to the side wall(s). If you decide to recess the back of the fireplace, make sure to accommodate the framing and facing dimensions. The back edge of the glass extends to a location 5.75" (147mm) from the back of the fireplace (see dimensions page for details). Framing for this type of installation may protrude forward from the back wall of the opening a maximum of 5.25" (134mm) when using ½" (13mm) drywall. Consult the dimensions page and plan your installation prior to framing the opening.

Minimum Framing Dimensions

Version	Width (x)	Height (y) – 12" Glass	Height (y) – 20" Glass	Height (y) – 30" Glass	Height (y) – 36" Glass
42" Right Corner	43.5" (1105mm)	50.625" (1286mm)	58.625" (1490mm)	68.625" (1744mm)	74.625" (1896mm)
54" Right Corner	55.5" (1410mm)				
66" Right Corner	67.5" (1715mm)				
78" Right Corner	79.5" (2020mm)				

Typical Framing Dims – Left-Sided Corner

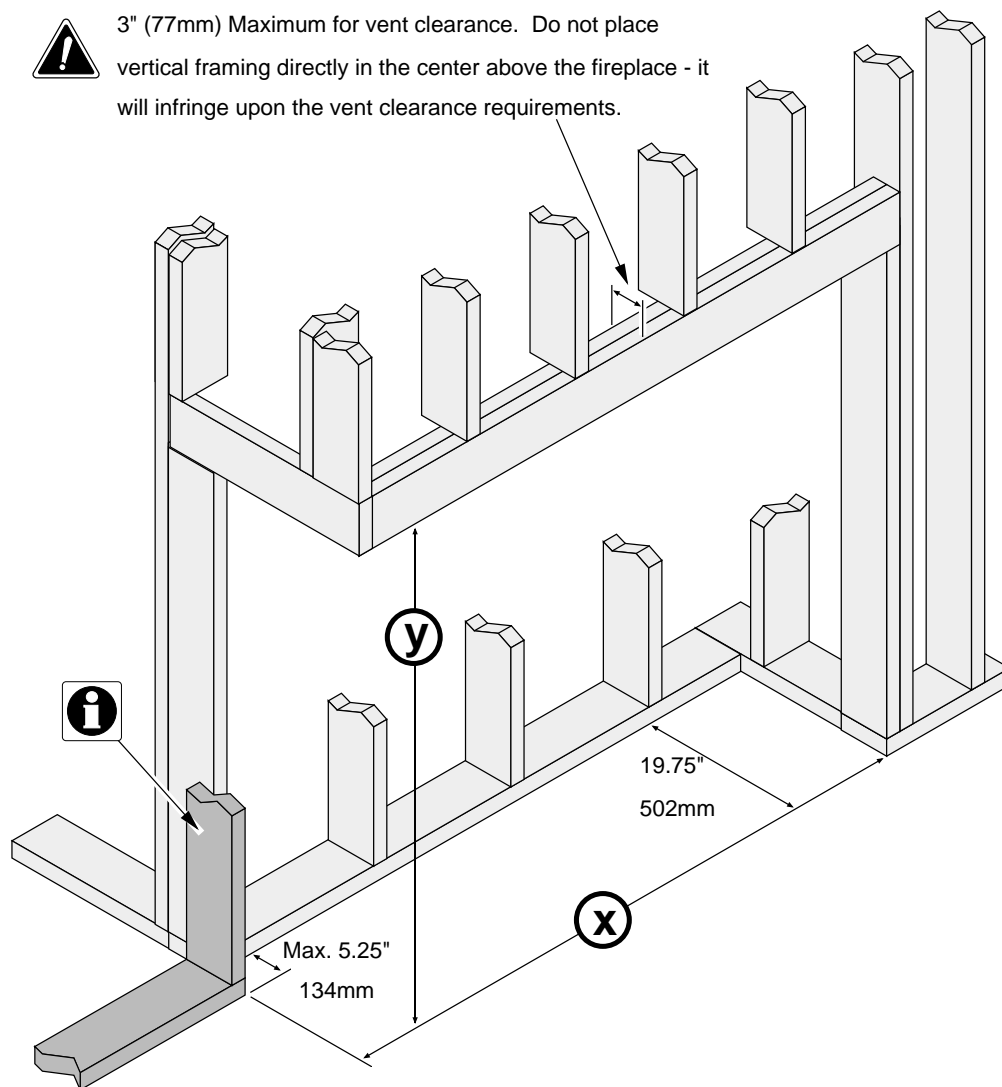

Recessing the Back Edge of the Fireplace (Optional)

Installers may wish to recess the back of the fireplace to allow for a more shallow installation, placing the side glass next to the side wall(s). If you decide to recess the back of the fireplace, make sure to accommodate the framing and facing dimensions. The back edge of the glass extends to a location 5.75" (147mm) from the back of the fireplace (see dimensions page for details). Framing for this type of installation may protrude forward from the back wall of the opening a maximum of 5.25" (134mm) when using ½" (13mm) drywall. Consult the dimensions page and plan your installation prior to framing the opening.

Minimum Framing Dimensions

Version	Width (x)	Height (y) – 12" Glass	Height (y) – 20" Glass	Height (y) – 30" Glass	Height (y) – 36" Glass
42" Left Corner	43.5" (1105mm)	50.625" (1286mm)	58.625" (1490mm)	68.625" (1744mm)	74.625" (1896mm)
54" Left Corner	55.5" (1410mm)				
66" Left Corner	67.5" (1715mm)				
78" Left Corner	79.5" (2020mm)				


Nailing Brackets

Side Nailing Brackets

The side nailing brackets secure the fireplace to the side framing. The number of brackets vary depending upon configuration (island configurations do not have side nailing brackets).


These brackets are shipped flat against the side of the fireplace (see "a" to the right). Remove the 2 mounting screws, position the bracket and secure ("b"). After the fireplace is in place, bend the bracket back ("c") and secure it to the framing with screws ("d").

NOTE: Make sure the fireplace is square and plumb before securing to the framing (use shims if necessary).

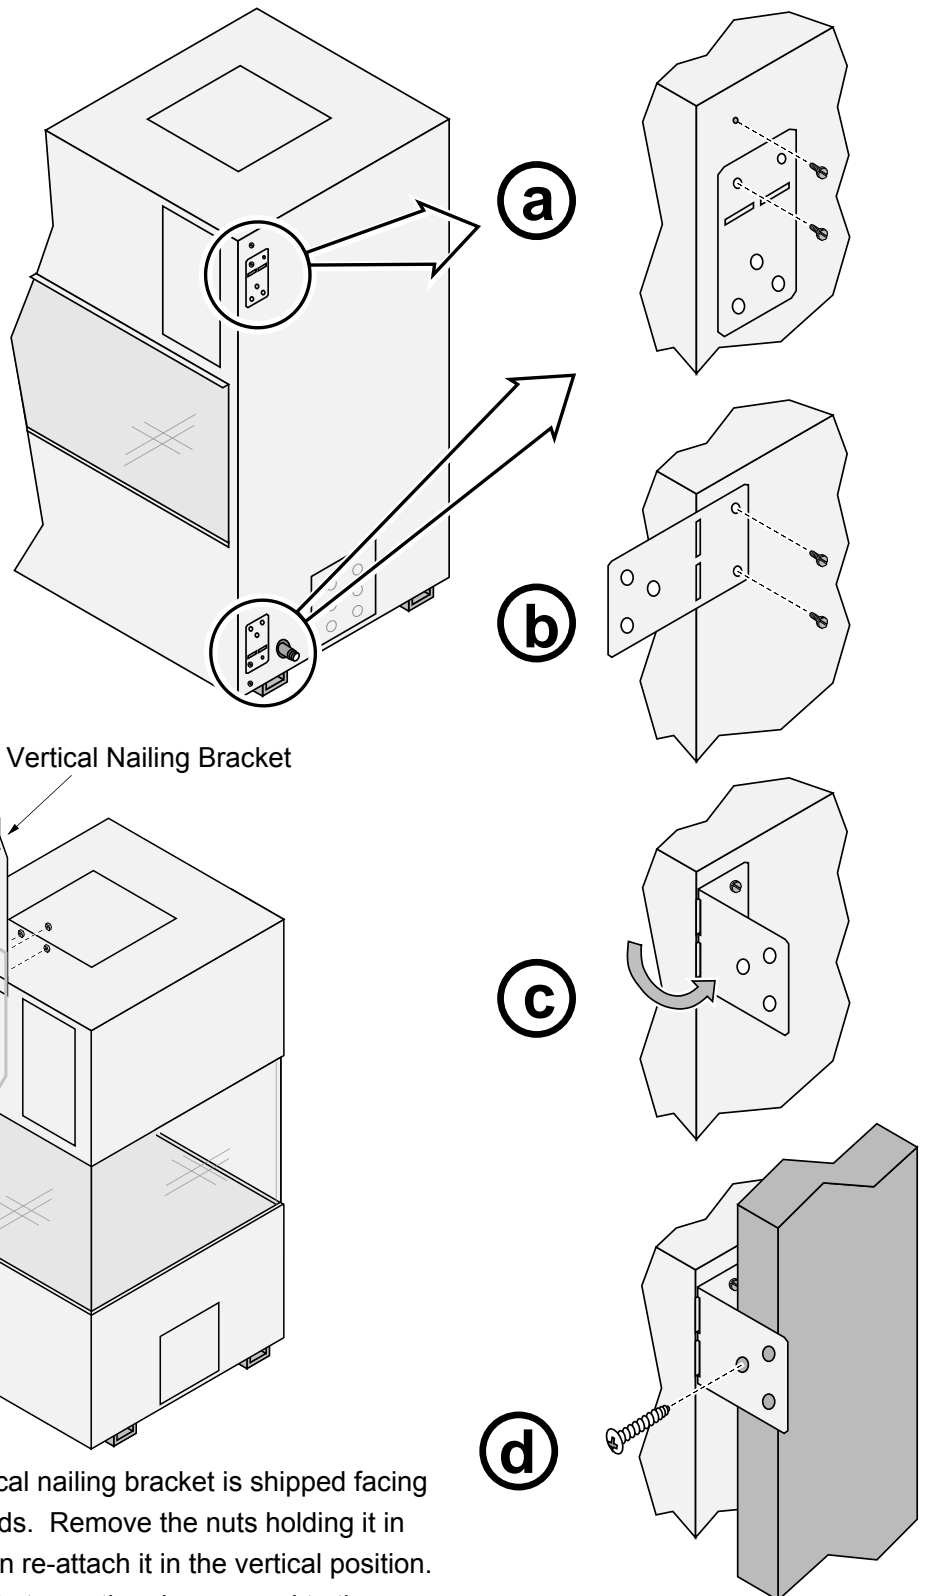

Vertical Nailing Brackets

Some configurations include vertical nailing brackets (Corner, Bay, etc.). See the illustration to the right for details.

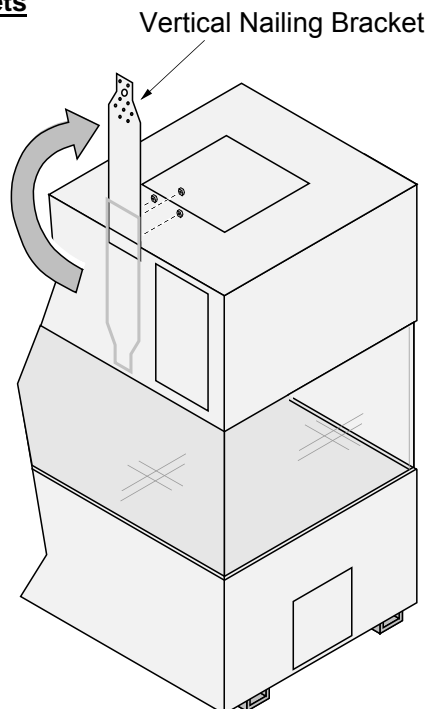

The vertical nailing bracket is shipped facing downwards. Remove the nuts holding it in place then re-attach it in the vertical position. The bracket may then be secured to the framing above fireplace.

Accessing Internal Components

Most internal components can be accessed by removing the front glass pane and intake air channel media tray (see instructions below). If more extensive access is required, see "burner removal" on the following page.




- Turn off gas to the fireplace prior to accessing internal components to prevent accidental ignition.
- Shut off electricity to the fireplace to protect internal circuits.

Remove the front outer glass pane (see page 68). Remove the intake air channel media tray.



At this point most of the internal components may be accessed (see descriptions below).

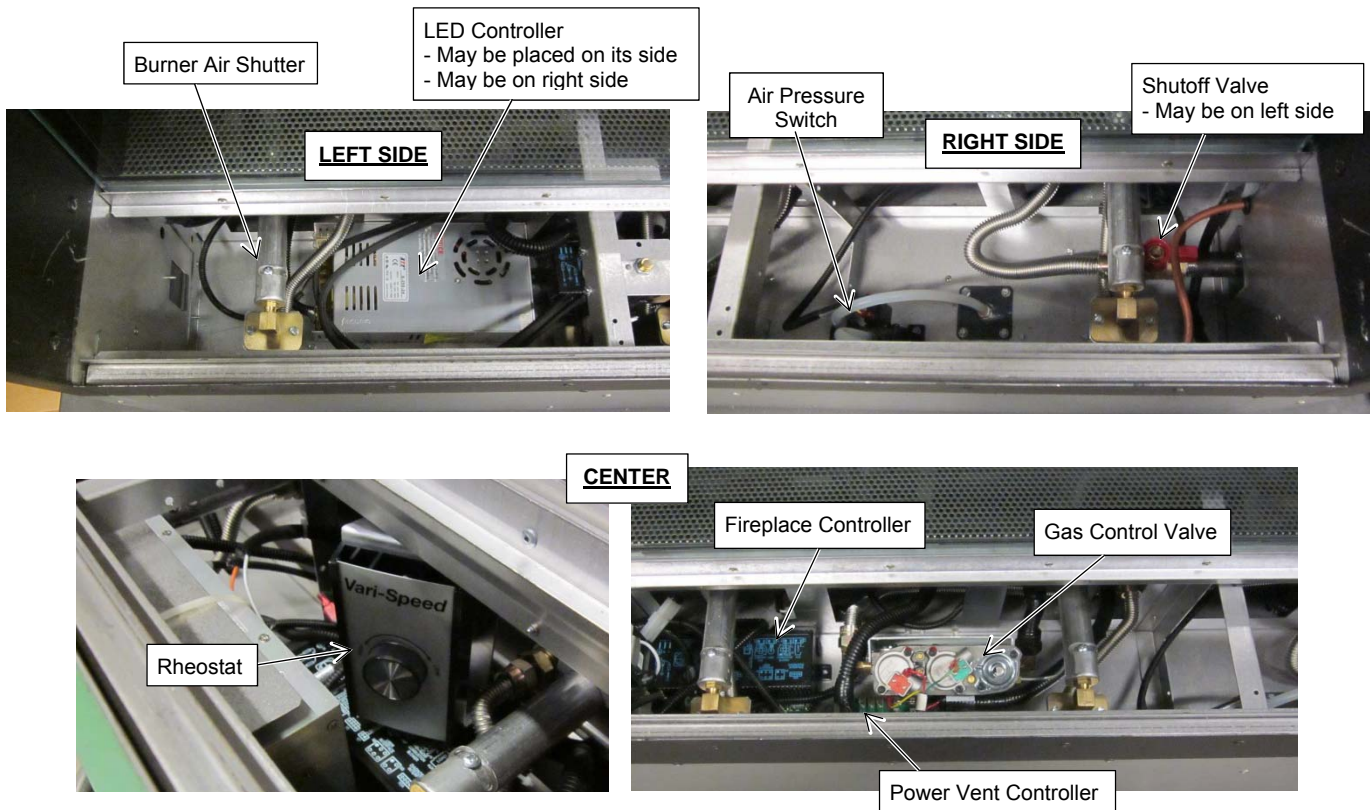**Internal Shut Off Valve Access**


The internal shutoff is accessed following the directions above. The valve is positioned near the gas inlet (left, right, or bottom).

NOTE: The shut off valve must be closed while pressure testing the gas line leading to the fireplace.

Burner Removal

Burner removal is only required if extensive access is needed (installing glass panes on indoor/outdoor units, extensive service, etc.). Follow the directions below to remove the burners.



- a) Follow the directions on the previous page for accessing internal components (remove intake air channel media tray).
- b) Remove the front inner glass pane (see page 68).
- c) Remove the screws holding the burner media trays in place (6 to 8 screws for each tray depending upon length – see photos below).

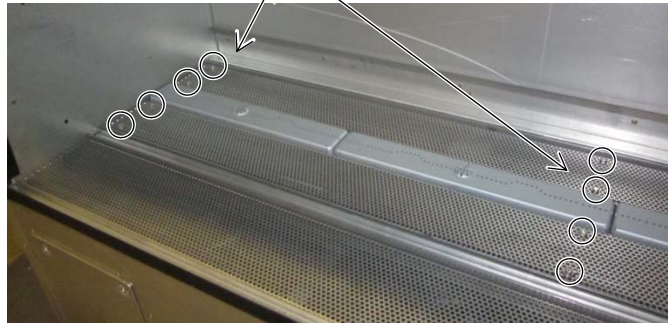

- d) Remove the media trays (use a flat screwdriver to pry up one edge). Make sure to notate the position of the trays when removing. The screw holes will only line up if the tray is properly replaced.



e) Remove the burner lock-down bracket (it is held in place with a single screw).

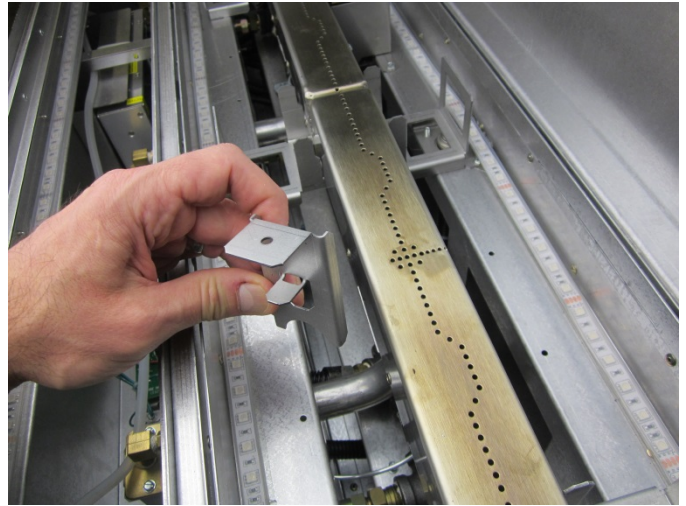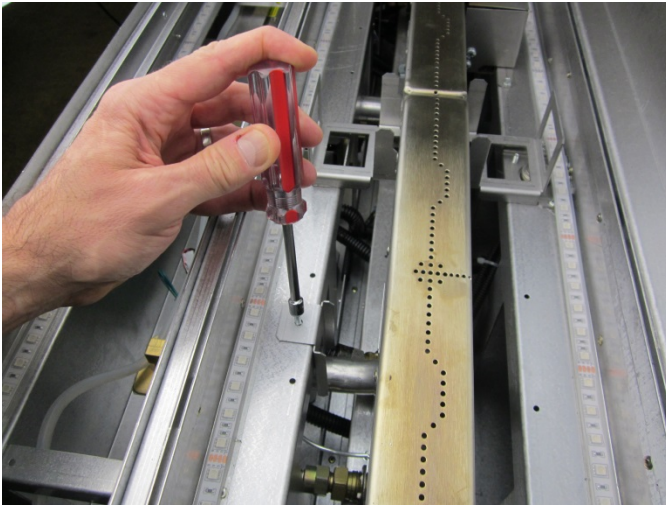

f) Lift the burner up and out of the fireplace. Remove the burner supports.



Gas Line Requirements



MAKE SURE YOU ARE SUPPLYING AN ADEQUATE SUPPLY OF GAS (NG OR LP)

This fireplace, depending upon configuration, consumes a large amount of MegaJoules. Make sure your gas line is properly sized to provide an adequate supply of gas.

- The gas line must be installed in accordance with all local codes and the requirements listed below. In the absence of local codes, follow ANSI 223.1 in US/Canada or AS/NZS 5601.1 in Australia.
- The fireplace and gas control valve must be disconnected from the gas supply piping during any pressure testing of that system at test pressures in excess of 1/2 psig (3.5 kPA). For pressures under 1/2 psig (3.5 kPA), isolate the gas supply piping by closing the manual shutoff valve.
- Leak test all gas line joints and the gas control valve prior to and after starting the fireplace.
- The fireplace has an internal shutoff valve. An additional shutoff valve is required. It must be accessible and within 6' of the fireplace.

Fuel

- This fireplace is designed either for natural gas or for propane (but not for both).

Gas Line Connection

- Installation must be performed by a qualified installer, service agency or the gas supplier (In Massachusetts a licensed plumber/gasfitter).

Gas Inlet Pressure


	Maximum Input Pressure	Minimum Input Pressure
Natural Gas	7" W.C. (1.74 kPA)	5.5" W.C. (1.13 kPA)
Propane	13" W.C. (3.23 kPA)	11" W.C. (2.74 kPA)

- If the pressure is not sufficient, make sure the piping used is large enough, the supply regulator is adequately adjusted, and the total gas load for the residence does not exceed the amount supplied.
- The supply regulator (the regulator that attaches directly to the residence inlet or to the propane tank) should supply gas at the input pressure listed above. Contact the local gas supplier if the regulator is at an improper pressure.

Directions for Connecting a Gas Pressure Test Gauge

The gas control valve (shown to the left) has two accessible ports for testing line pressure and output pressure. Loosen the brass screw on either test port and place a 5/16" i.d. rubber or plastic tubing over the tapered test port. Connect the tubing to the test gauge.


WARNING: The brass screw must be tightened after testing to prevent gas leakage.

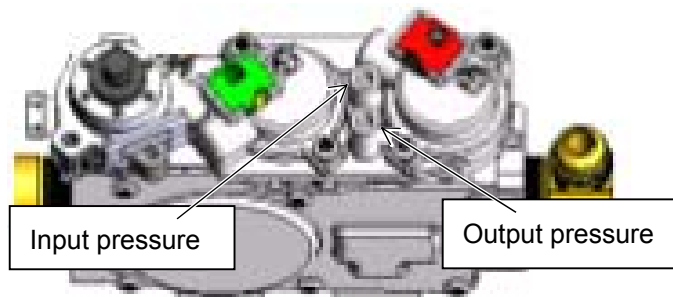

Gas Inlet Location


Gas inlet is determined by fireplace configuration and how the fireplace was ordered. Refer to the dimensions pages for the configuration being used to determine what options are available (pages 8 through 13). When ordering the fireplace, the gas inlet is either from the side (left or right) or from the base (left or right).

Gas inlet dimensions are shown below. Make sure to refer to the end style being used.


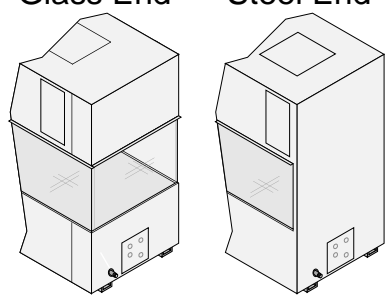
<u>Type of Fireplace</u>	<u>Type of Ends</u>	<u>Glass End</u>	<u>Steel End</u>
1-Sided	Two Steel Ends		
See Through	Two Steel Ends		
Pier	One Steel, One Glass End		
Full Bay	Two Glass Ends		
Island	Two Glass Ends		

Gas Inlet – Steel End

The gas inlet is on the side (not available from the base).

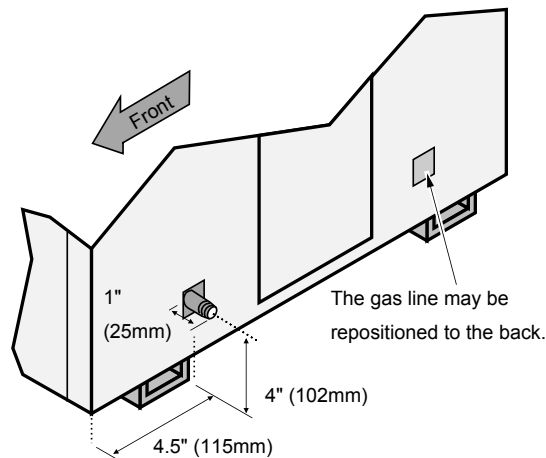**Gas Inlet – Glass End**

The gas inlet is on the side or the base. NOTE: The gas inlet on the base is only available in one location. When looking from the side, the gas inlet from the base will always be on the left.

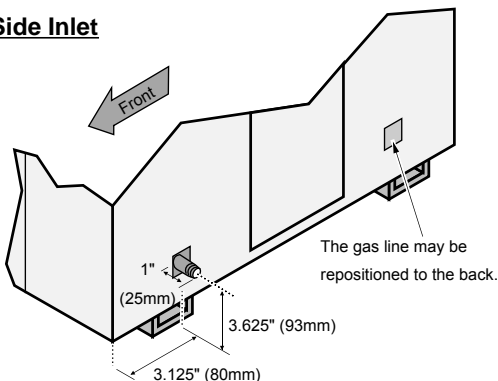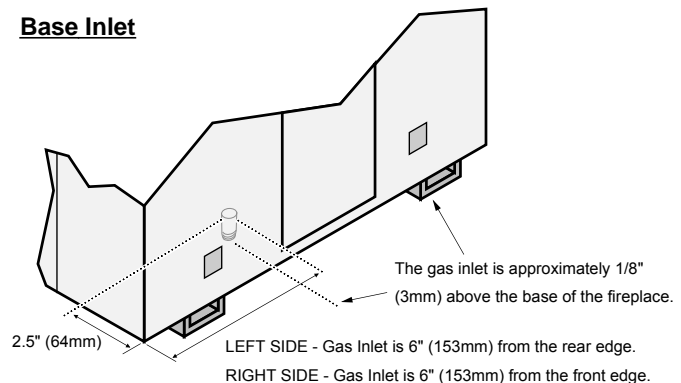Side Inlet**Base Inlet**


Electrical Junction Box




Do not connect 240 VAC to the gas control valve or control system of this fireplace.

- This fireplace is shipped with the electrical junction box on one side or through the base. Location of the junction box is determined at the time the fireplace is ordered and configured at the factory.
- The junction box has a low voltage and high voltage (240v) side.

Junction Box Configuration – Steel Side (Single, Double-Sided, Pier, etc.)

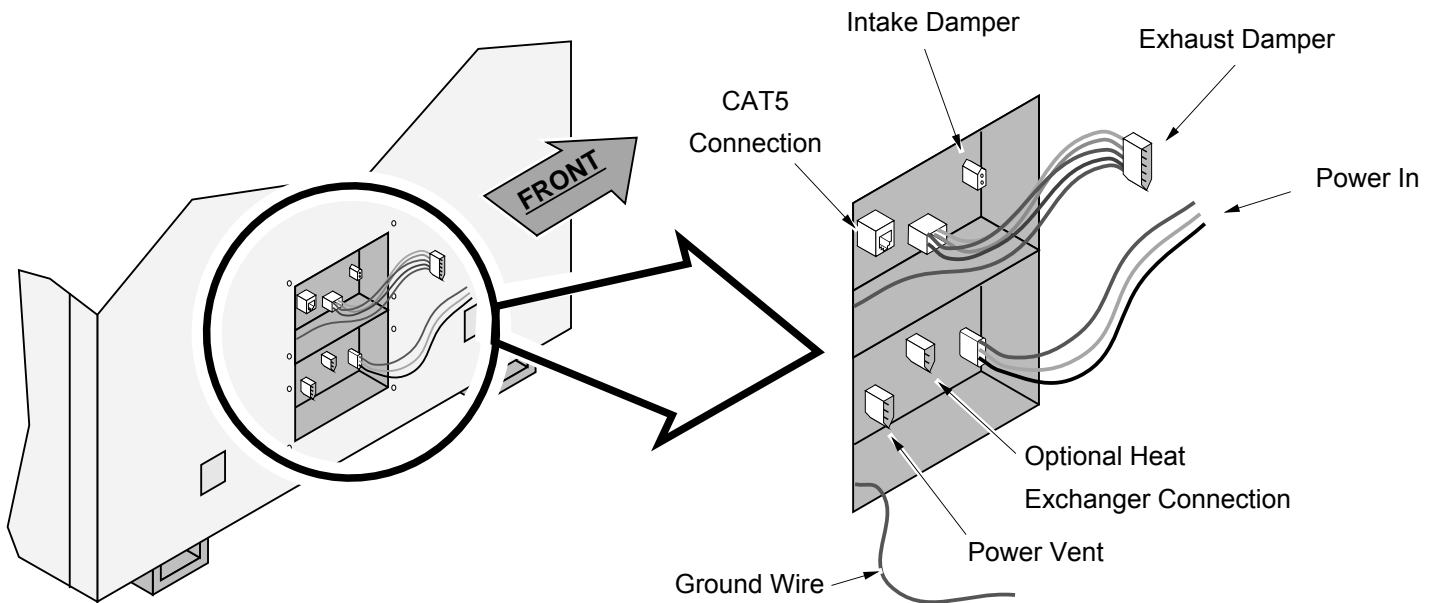

Junction Box Configuration – Glass Side (Island, Full Bay, etc.)

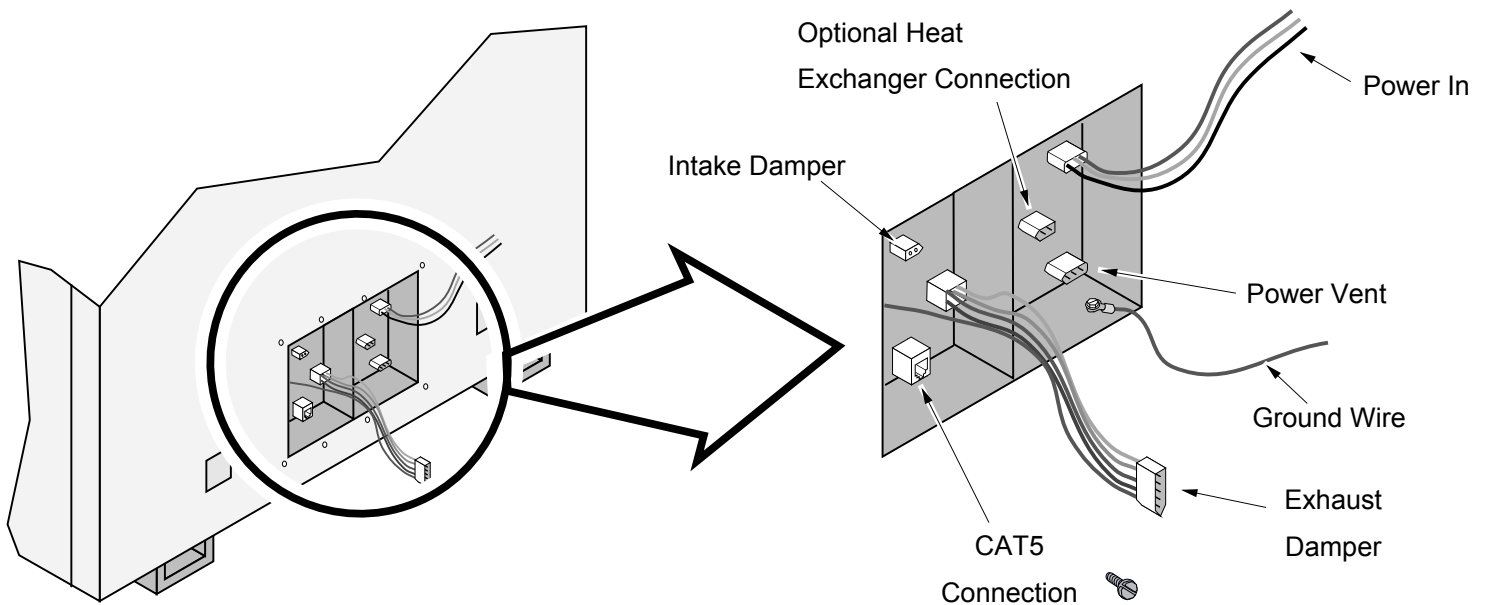


Junction Box Configuration – Glass Side Through-Base Configuration


This configuration allows the electrical connections (and gas line, if desired) to be routed from below. The illustration below shows the area that should be left open to access the junction box cover plate.

NOTE: Make sure to confirm the “POWER IN” or “POWER VENT” labels on the wiring before making connections.

LEFT SIDE THROUGH BASE CONFIGURATION

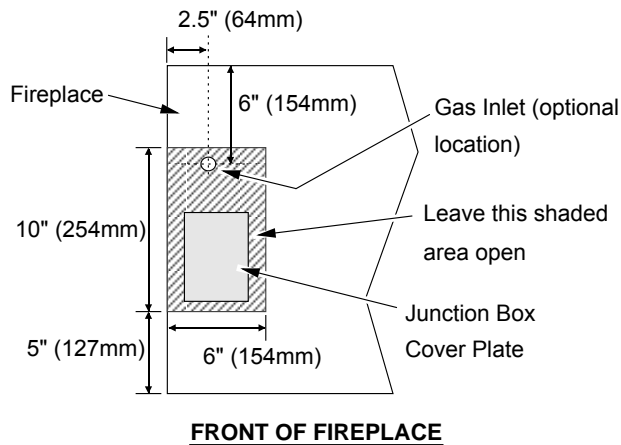

RIGHT SIDE THROUGH BASE CONFIGURATION

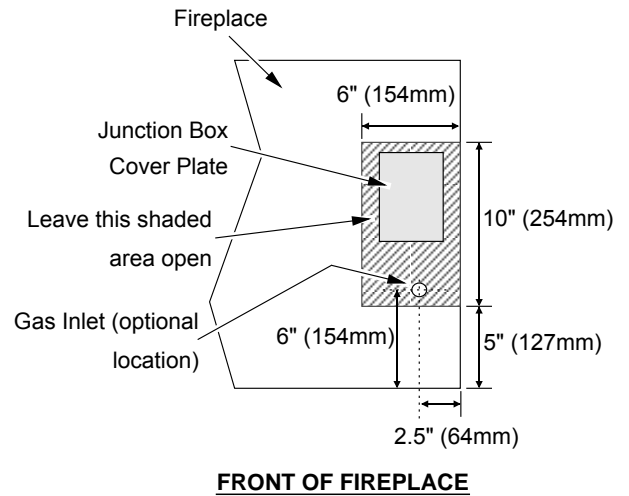

Electrical Input Connection




Do not connect 240v to the gas control valve or control system of this fireplace.

- The electrical line to the grounded harness inside the fireplace must be installed by a qualified installer and must meet all local codes.
- Make sure the household breaker is shut off prior to working on any electrical connection. Turn the breaker on only after all wiring is in place (power vent, on-off LED harness, etc.).
- The appliance, when installed, must be electrically grounded in accordance with local codes or, in the absence of local codes, with the National Electrical Code, ANSI/NFPA 70, or the Canadian Electrical Code, CSA C22.1.
- The electrical line must supply 240 Volts, 50 Hz, and 3.5 Amps (maximum draw). We recommend a dedicated circuit for the fireplace.
- Route the electrical connection through the cover plates and attach to the electrical input wires as shown below. **Make sure to connect the incoming ground wire to both ground wires** (one ground wire attaches to the junction box, the other leads to the molex connector).

Caution: Label all wires prior to disconnection when servicing controls. Wiring errors can cause improper and dangerous operation.




HINT: Keep the high voltage cover plate disconnected until the power vent power lead is attached. Leave the romex clamps loose until the cover plate is re-attached.

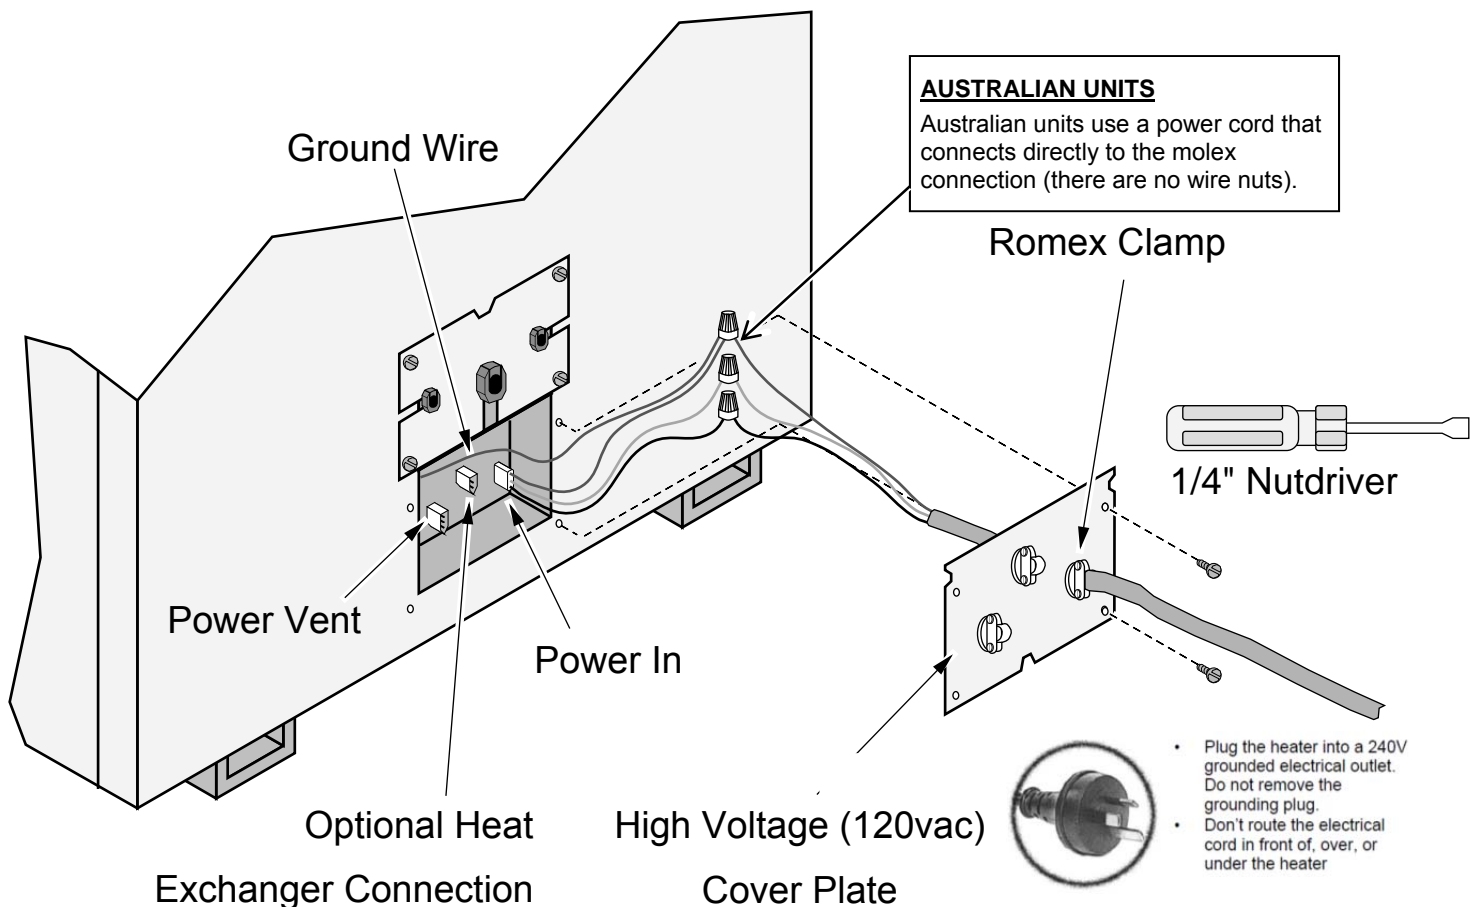


Connecting the Power Vent Lead to the Fireplace

- The power vent is wired to the electrical line exiting the exhaust blower rheostat. Connect a minimum 12 gauge sheathed three-wire electrical line to the power vent lead (labeled "POWER VENT") and connect it to the moxex connector on the fireplace – see illustration below. This wire is routed to the power vent assembly (see "Wiring the Power Vent Assembly" for details).
- After attaching the vent power lead, re-attach the high voltage (240v) cover plate then tighten the romex clamps to secure the wiring.

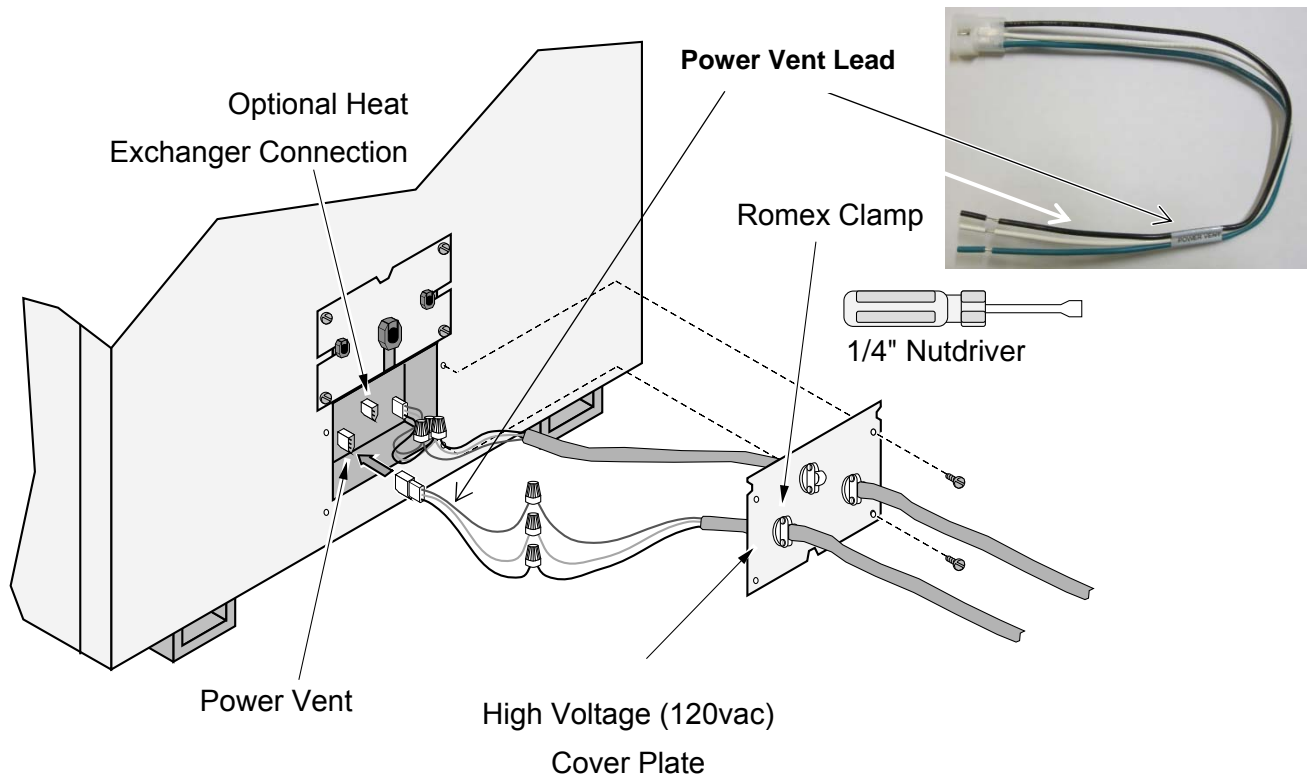

Re-attach the high voltage (cover plate then tighten the romex clamps to secure the wiring.

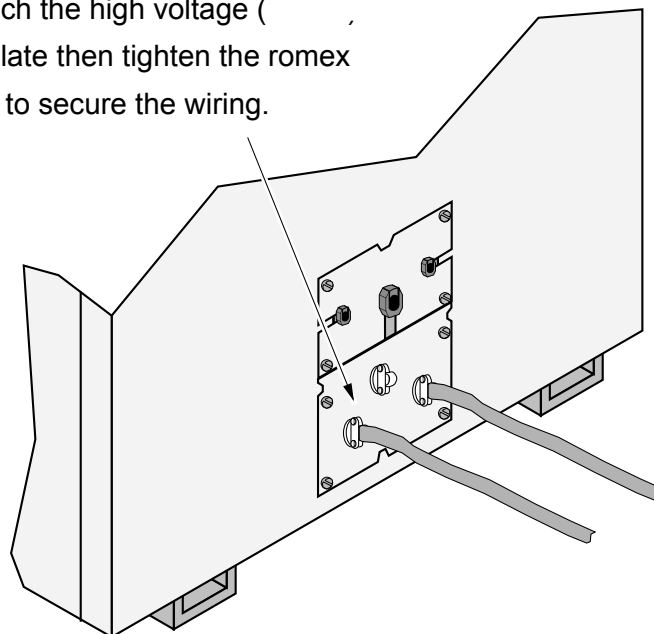


Connecting the Exhaust Damper Harness to the Fireplace

- This fireplace uses a damper near the power vent blower to prevent air from flowing through the fireplace when the fireplace is off.
- The exhaust damper harness is available in various lengths (see page 14 for details).
- Route the exhaust damper harness through the cover plates and attach to the molex connector on the fireplace as shown below.



HINT: Keep the low voltage cover plate disconnected until all wiring to the fireplace is attached. You may also wish to leave the strain reliefs/clamps loose until the cover plate is ready to be attached.

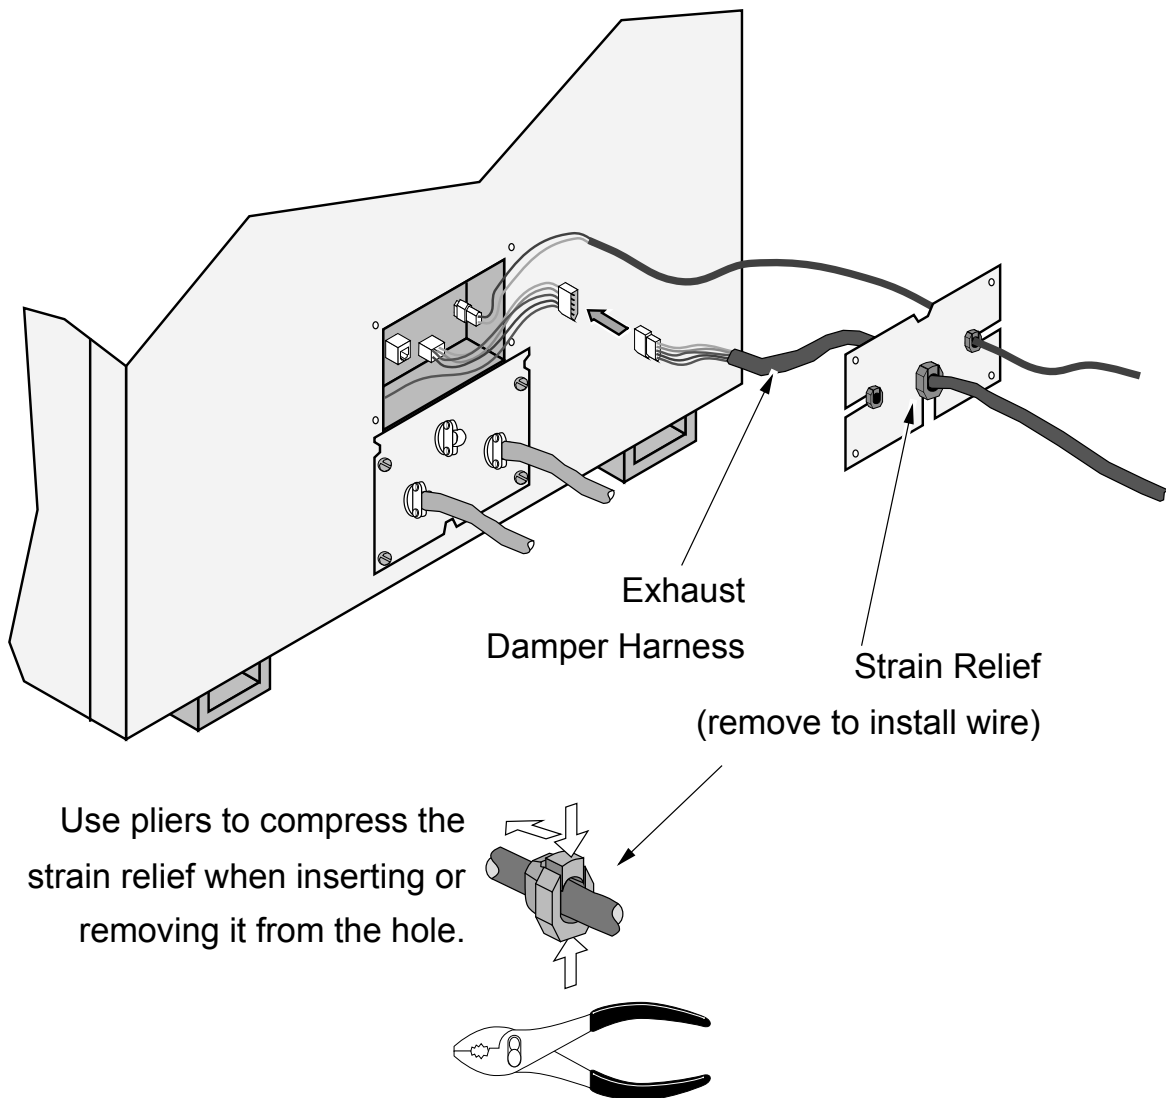

- The opposite end of the damper harness attaches to the power vent assembly (see "Wiring the Power Vent Assembly" for details).

Wiring the Power Vent


- The power vent assembly consists of a power vent and damper. Refer to the wiring diagram on page 74 for wiring details.
- Connect the power vent line (sheathed three-wire electrical line) to the capacitor and blower as shown below.

Remove the cover plate on the exhaust blower housing.


NOTE: the power vent termination version is shown to the right – the inline version is wired in the same manner.



Route the electrical line through the romex clamp and attach the wiring as detailed in the wiring diagram below. After the cover is replaced, tighten the clamp to secure the wiring (do not over-tighten).

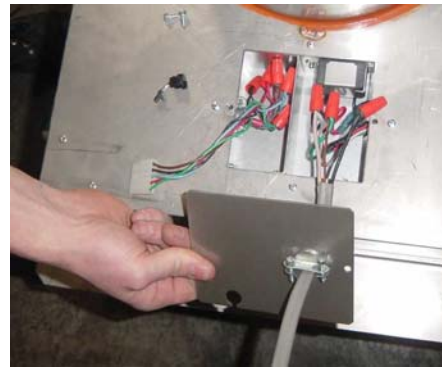

WIRING DIAGRAM - AUSTRALIAN VERSION

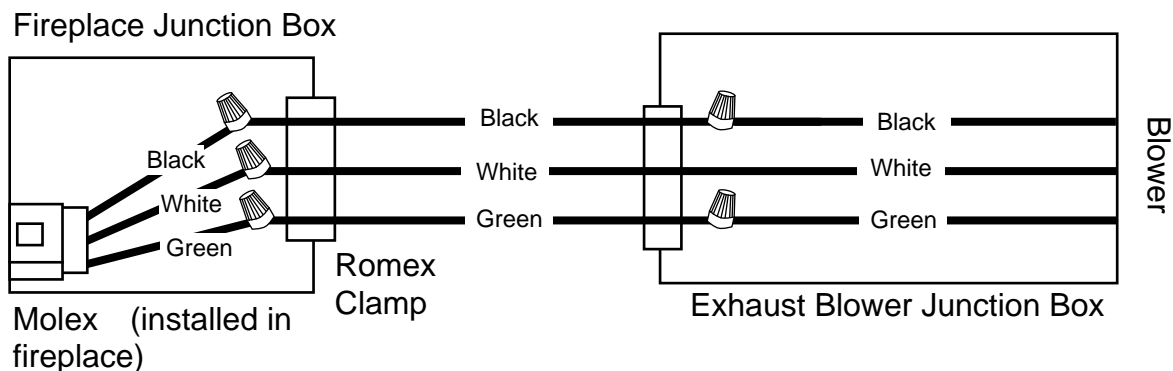

WARNING - BLOWER CAPACITOR WILL RETAIN A CHARGE

Once power is supplied to the blower capacitor, it will retain a charge for approximately 5 minutes, even after power is shut off. Take care when working with this circuit, especially with the hot (black) wire and circuit board/wiring inside the fireplace.


Wiring the Power Vent (continued)

- In addition to the exhaust blower line, a low-voltage wire harness is routed from the fireplace to the damper inside the power vent assembly (see page 6 for wire lengths and part numbers).


Route the exhaust damper wire harness to the junction box on the power vent assembly. Remove the junction box cover plate. Remove the strain relief from the cover plate (see illustration below to the right). Route the wires through the slot on the cover plate and replace the strain relief. Attach the molex connector from the harness to the molex connector inside the power vent assembly).

Exhaust Damper Molex Connector

Replace the junction box cover, making sure all wiring is properly inserted.

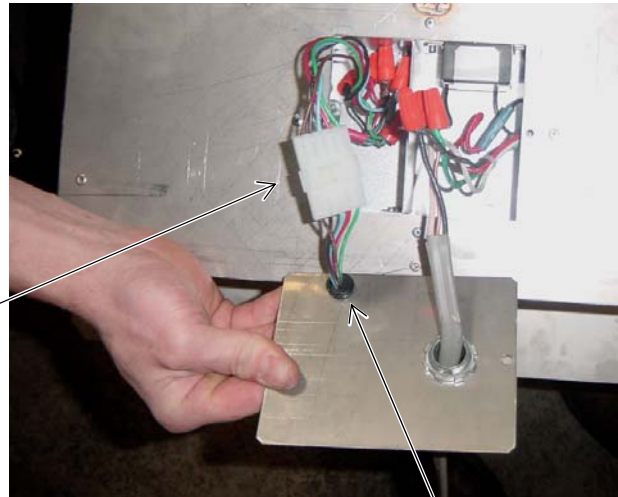

Use pliers to compress the strain relief from the top and bottom while pushing it into the hole in the bracket.

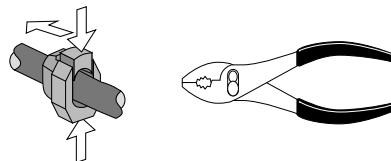

Caution: Label all wires prior to disconnection when servicing controls. Wiring errors can cause improper and dangerous operation.



Test blower operation after attaching the wiring (leave gas off, turn appliance on, verify blower functions correctly).

Connecting the Intake Damper Harness to the Fireplace




WARNING: DO NOT CONNECT THE INTAKE DAMPER WIRES TOGETHER (this will short the system).

- The 25' intake damper harness is shipped in the hardware box (see page 14 for details). If additional length is needed, use part 250-02295 (typically ordered when fireplace is configured) or 18 gauge wire.
- Route the intake damper harness through the cover plate and attach to the molex connector on the fireplace as shown below. The other end is attached to the damper(s).



HINT: Keep the low voltage cover plate disconnected until all wiring to the fireplace is attached. You may also wish to leave the strain reliefs/clamps loose until the cover plate is ready to be attached.

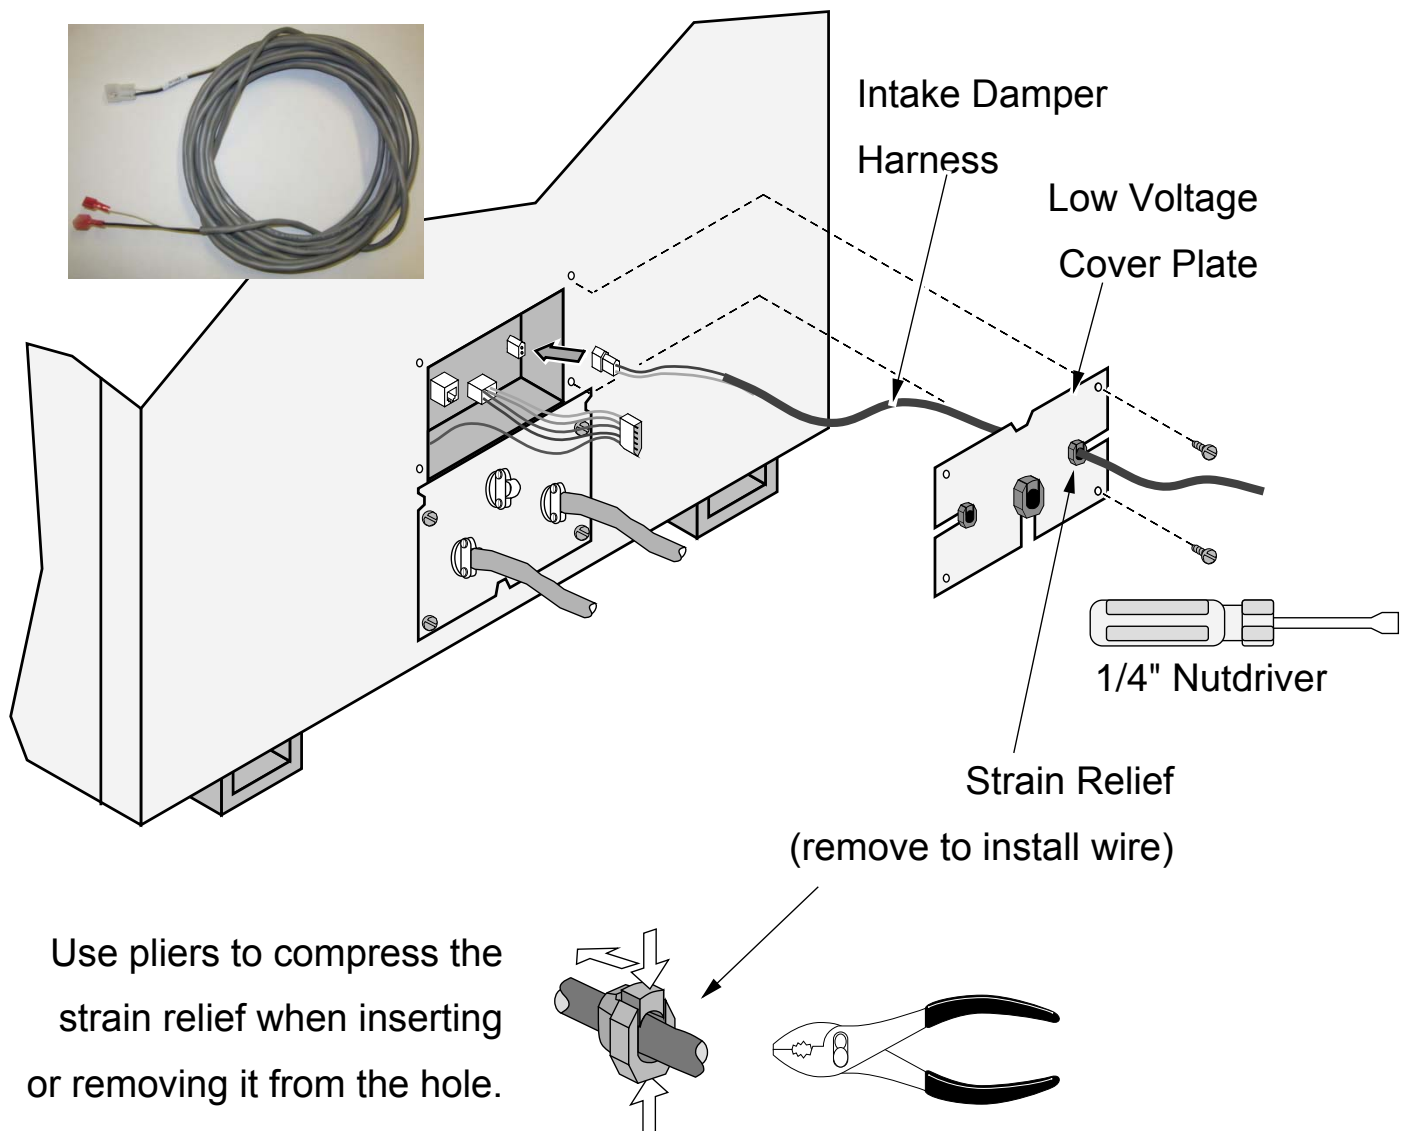

Wiring the Intake Damper



WARNING: DO NOT CONNECT THE INTAKE DAMPER WIRES TOGETHER (this will short the system).



ROUTE THE WIRES TO THE AIR INTAKE LOCATION EVEN IF DAMPER(S) ARE NOT USED

Intake dampers are strongly recommended in cold areas (see page 45). Even if dampers are not being installed, we recommend routing the intake damper wires to the intake location. This allows dampers to be installed at a later time if desired (to reduce air infiltration, humid glass, etc.).




- Route the intake damper harness to the air intake location.
- For external dampers (98900093, 98900094), attach the quick-connects from the intake damper harness to the quick connects on the intake damper (see photo to the right).
- For internal dampers (98900078, 98900078), remove the quick-connects from the intake damper harness and attach wires directly to the terminal blocks (see photo to the right and page 48 for details).



Intake Damper Wire Splitter – Used For Installations Using Multiple External Dampers

The intake damper wire splitter (included with 78" and 84" long units) is used to connect multiple external dampers. This splitter attaches to the intake damper harness and allows for up to five dampers to be attached to the harness (use two splitters if additional dampers are used). The damper has extra connections that may not be used. To insulate these connections, follow the directions below.

- Attach the splitter to the intake damper harness (make sure power is off to the fireplace).
- Cut off the excess connectors (in this example the wiring is set up for 2 dampers).
- Attach the included wire nuts to the exposed wire.

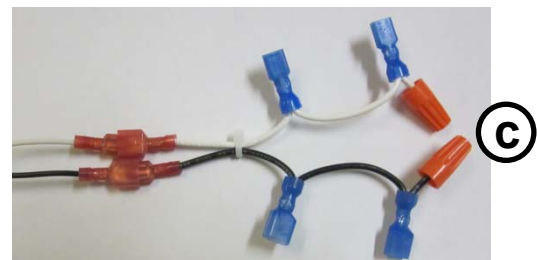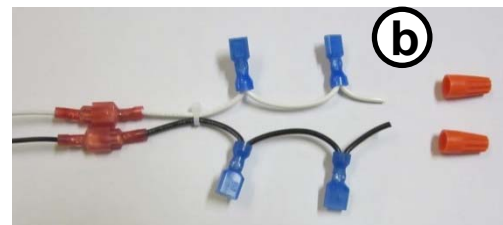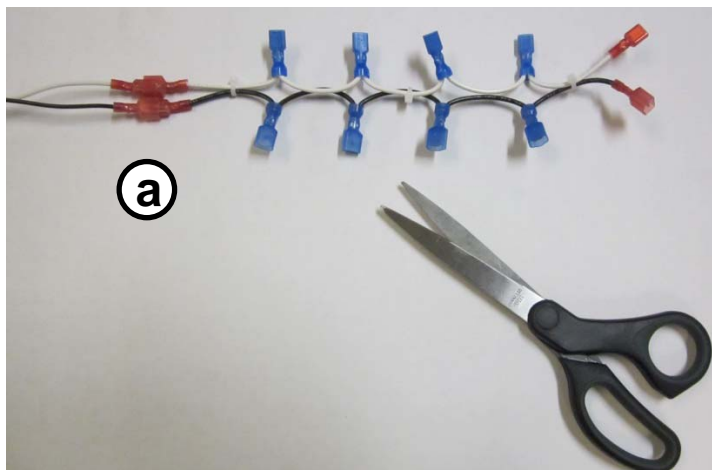

Connecting the CAT5 Harness to the Fireplace




Do not connect 110-120 VAC to the gas control valve or wiring system of this fireplace.

- The CAT5 harness is available in various lengths (see page 14 for details).
- Route the CAT5 harness through the cover plates and attach to the CAT5 connector on the fireplace as shown below.



HINT: Keep the low voltage cover plate disconnected until all wiring to the fireplace is attached. You may also wish to leave the strain reliefs/clamps loose until the cover plate is re-attached.

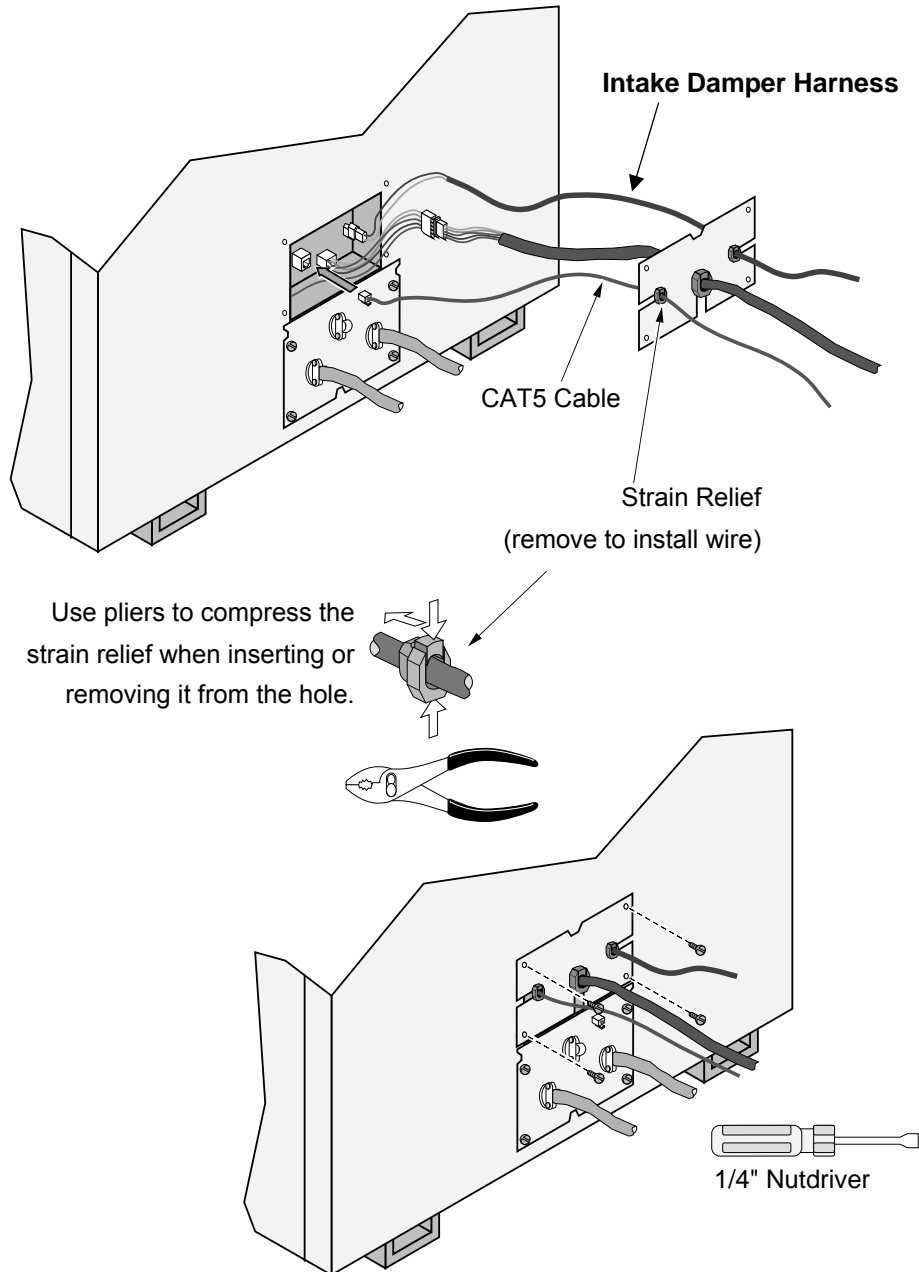

- The opposite end of the CAT5 harness attaches to the TouchSmart controller (see “Installing the TouchSmart Controller” on the following page for details).
- After attaching the CAT5 harness, re-attach the low voltage cover plate, then tighten the Romex clamp to secure the wiring.

Installing the TouchSmart Controller



Do not connect 110-120 VAC to the gas control valve or wiring system of this fireplace.

- The included junction box is used to mount the TouchSmart controller (see page 42). Mount the junction box in an accessible location to allow the user to operate the fireplace.
- Route the CAT5 harness to the junction box (harness is available in various lengths – see page 14). Route the wire through the junction box and attach to the TouchSmart controller.

NOTE: Install 3" to 6" of slack in the harness wires to allow for switch/controller access and removal.



Keep the cable 12" (300mm) away from high voltage (120v) wiring to prevent interference.

- The TouchSmart controller is held in junction box using (3) magnets.


Do not route the cable near 120v wiring, or the the vent (hot surfaces).

Secure the CAT5 cable to the mounting plate with lock tie(s). This prevents the cable from falling into the wall cavity when the cable is disconnected from the touch screen.



NOTE:

Keep cable 12"(300mm) away from high voltage (120v) wiring to prevent interference.

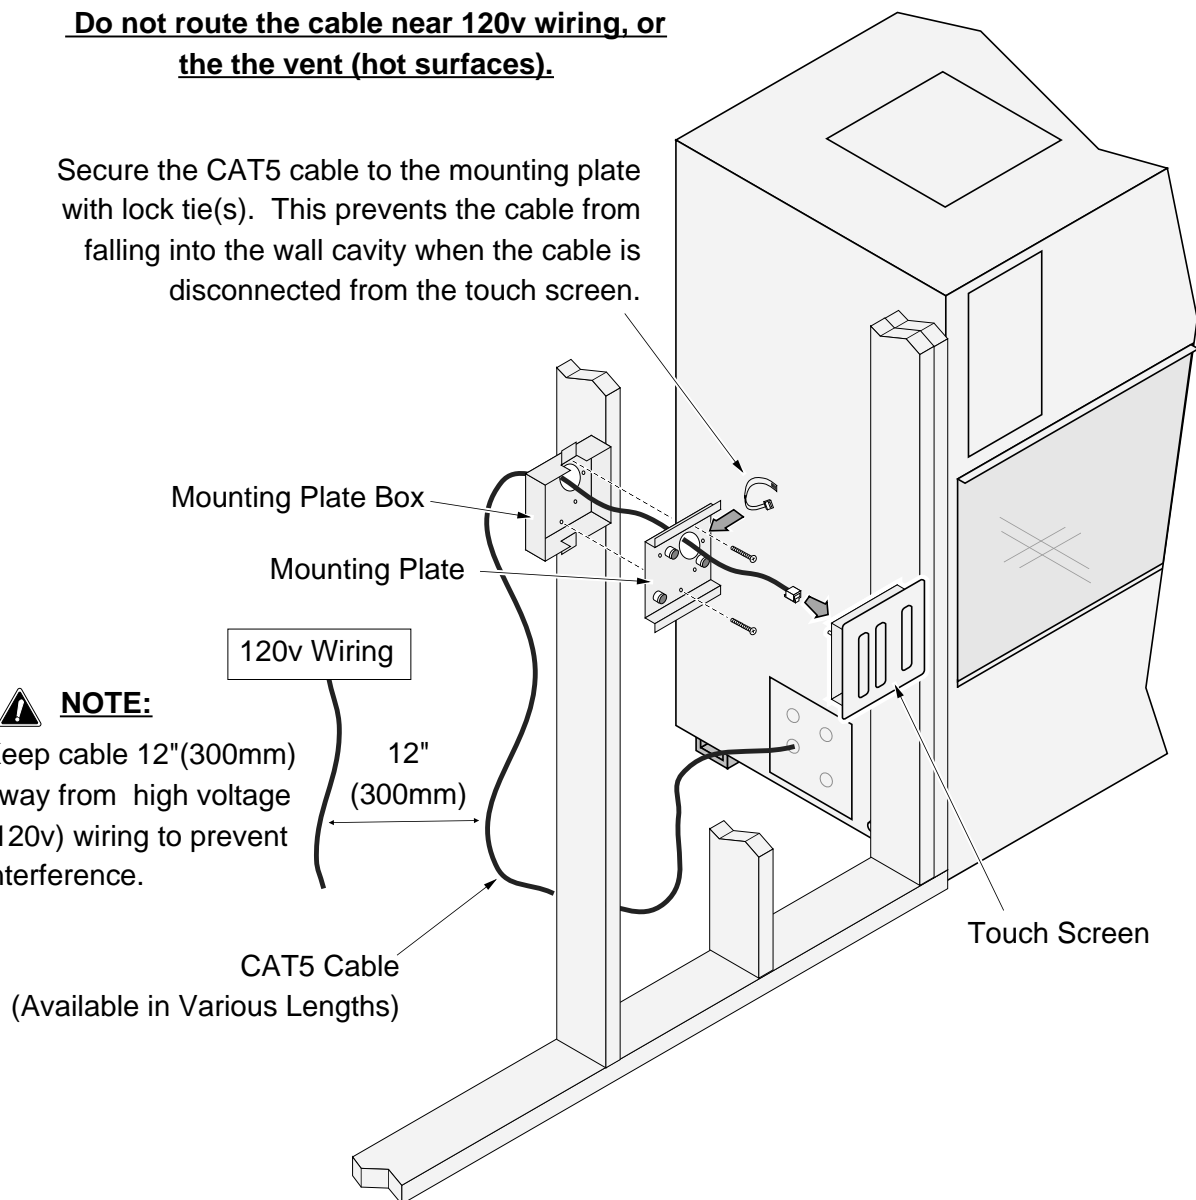

Caution: Label all wires prior to disconnection when servicing controls. Wiring errors can cause improper and dangerous operation. Verify proper operation after servicing.

TouchSmart Mounting Box

There are two options for mounting the TouchSmart box that houses the controls for the fireplace. The retrofit box option is used when the wall is already finished with drywall or the desired location is not close to a framing member. The second option (and most commonly used) is the New install box. This option is best used prior to drywall installation. The two options for the Mounting box installation are detailed below.


Identify an appropriate location for the control box. The location should have a clear path for the harness to be routed from the fireplace and be within reach of the length of CAT5 cable ordered with the fireplace.

NOTE: Make sure to route the CAT5 cable to the Mounting Box and secure with zip tie(s). If drywall installation or other construction is occurring after the box installation, mask the Mounting Box to prevent debris from accumulating.

- Mounting Plate Hardware
 - TouchSmart Mounting Plate
 - Mounting Plate Box – New Const.
 - Mounting g Plate Back Plate – Retrofit
- TouchSmart Hardware
 - (6) Lock Ties (for wiring)
 - (3) Round magnets with felt pads
 - (2) #8 Self-Drilling Screws
 - (2) 8-32 x 1.5" Screws (for Mtg Plate)

Retrofit Box Installation

- Determine a location between studs.
- Cut a 4"W x 3-5/8"H hole in the drywall.
- Attach the three magnets with felt pads to the TouchSmart Mounting Plate as seen in the picture below.
- Loosely attach the Mounting Back Plate to the Touch Screen Mounting Plate using one of the included 8-32 X 1.5" screws (**make the large hole in the on the Mounting Plate and box line up**). The angled edges of the Back Plate should face forward.

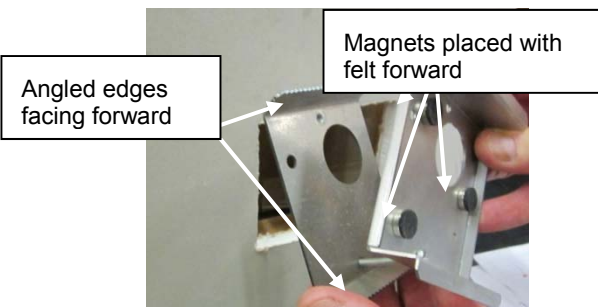


- Insert the Backing Plate into the hole in the drywall. **Make sure that the large hole is in the upper right hand corner.**



- Install the second screw through the Mounting Plate into the Backing Plate. Tighten both screws until the Mounting Plate is secure against the drywall.

New Install Box Installation

- Bend the tabs outward on the New Install Mounting Box (use 2 or 3 tabs, depending upon mounting position). Attach the box to the framing (either from side or bottom). **Make sure that the large hole is in the upper right hand corner and the tabs of the box are flush with framing.**

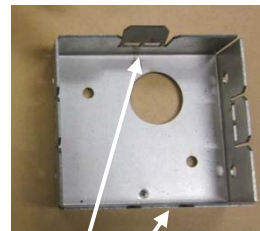


Bend the tabs out




Shown from the

- The drywall must be installed prior to continuing to step 3 below. When installed, the drywall will require a 4"W x 3-5/8"H square hole for the mounting box.
- Attach the three magnets with felt pads to the Mounting Plate as shown below. Attach the Mounting Plate to the box with the two screws (**make the large hole in the on the Mounting Plate and box line up**). The Mounting Plate will fit flush against the drywall.

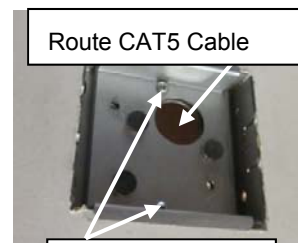

Route CAT5 Cable

Install screws

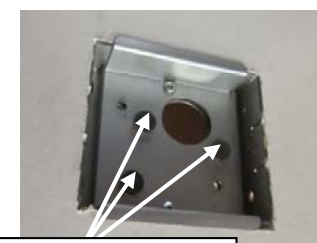

Install magnets


- Route the wire harness through the large hole in the back of the mounting plate.

NOTE: We recommend that you connect the wire harness to the TouchSmart Mounting Plate using zip ties to ensure it does not fall into the wall cavity.



- Attach the CAT5 wire harness port on the back of the TouchSmart controller and gently push the controller into the box. Push additional cable back through the hole in the Mounting Plate as you insert the back of the TouchSmart controller into the mounting plate. The pins on the back of the controller align it to the box. The magnets hold it in place.

NOTE: Do Not install the TouchSmart controller until sheetrock installation and finish has been completed. After the wall is finished, remove any protective covering on the end of the CAT5 cable and connect the

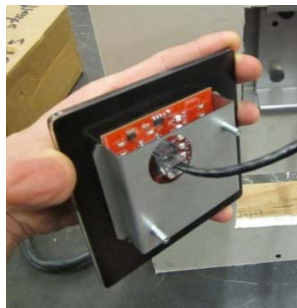


Air Intake Requirements

The fireplace requires air intake(s) to supply combustion air to the firebox. Requirements for the air intake(s) are listed below:

- The air intake(s) must be routed to the exterior of the structure or to an area that freely conveys air from the outside. Do not draw air from a garage or other area that may be subject to fumes or airborne particles.

Air Intake Ducts

- Must use 6" or 8" UL 181 Duct or better (Class 1 or Class 0 – capable of negative pressure reading of 1" water column). Consult your local building department for details on duct installation and requirements in your area. We strongly recommend the use of insulated ducting such as Master Flow™ which is carried at Home Depot™ and other stores that carry HVAC products (insulated ducting is typically R4.2 or greater with vapor barrier). Insulated ducting prevents condensation from forming on the exterior of the ducts or fireplace. This is especially important when the ducts are routed through heated areas that may be subject to humidification.
- The chart below details air intake maximum height and length. If the intake falls within the "Standard Installation" range shown below, the air intakes may be 6" diameter. If the intake falls within the shaded range, you must contact Travis Industries to verify the installation and determine the correct configuration (you may need to use 8" diameter duct).

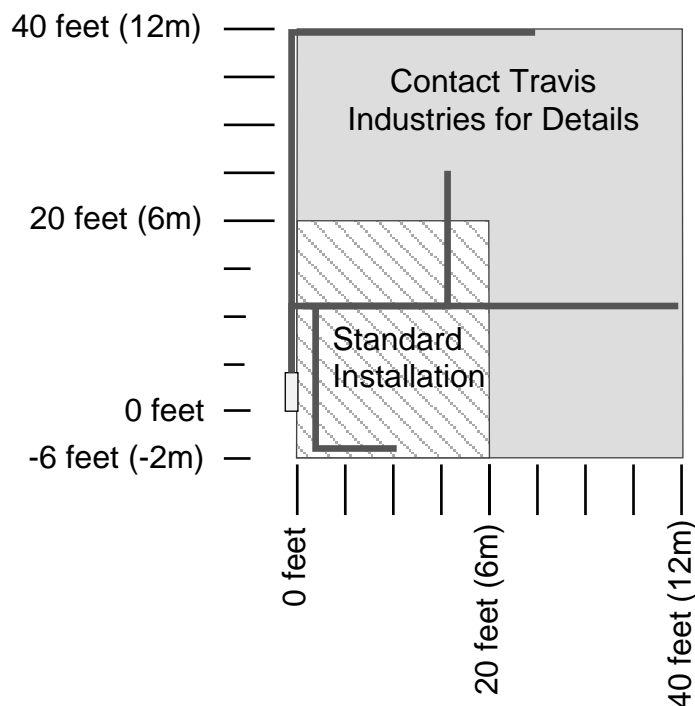

- Connect the air intake ducts to the fireplace, damper (if used), and termination using a suitable securing method (tape, silicone, etc.). Long duct runs must be properly secured.
- We recommend the use of intake dampers. If you do not use dampers, we recommend you route the intake damper wires to the intake location so dampers may be installed at a later time.
- Each air intake termination must be positioned so it does not become blocked by snow, vegetation, or other material. It must be installed with a suitable cap that prevents water or debris from entering. The termination (and damper, if used) must be positioned so it may be accessible for service and verification. If air intake is positioned on a wall, make sure to slope the intake down slightly to prevent water intrusion.


Intake Dampers

WARNING:

DO NOT CONNECT THE INTAKE DAMPER WIRES TOGETHER – THIS WILL SHORT THE SYSTEM.

- Provisions for an intake damper(s) are included with this fireplace (24V AC wires). Intake dampers are recommended for cold areas or locations where air infiltration must be minimized. Connect the intake duct to the damper and route to the termination (if applicable).


- If you live in the shaded regions shown in the illustration to the right, we strongly recommend using intake dampers (except in cases where the air being drawn in is conditioned or part of an air inlet system). In addition, use insulated air ducts and insulate the fireplace enclosure.
- If the fireplace is located in an area with negative pressure, we recommend intake dampers to prevent air from being drawn into the fireplace when it is not in operation.

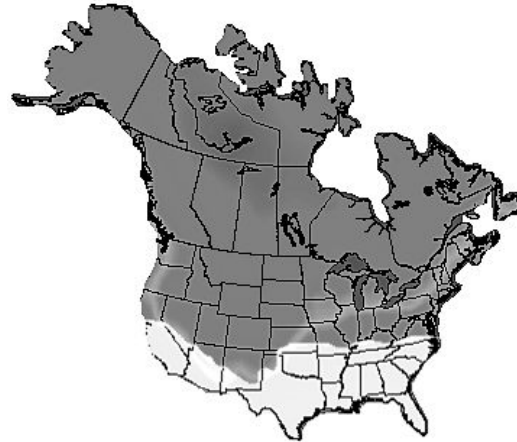

- The intake damper wires may be routed from the fireplace inside or outside the ducting to the damper. Attach the damper wires to the damper (wire orientation does not matter). These wires may be shortened or extended using suitable wiring. When installing, make sure all excess wire is positioned away from the damper so it does not interfere with damper operation.
- After installation, turn the fireplace on and visually check the intake dampers to verify they open correctly.
- If using intake dampers, they must be located in an area that will allow them to be serviced at a later time. In addition, the dampers should be placed so their operation can be verified.

Air intakes in Warm Environments

The DaVinci Custom Fireplace™ uses air-cooled glass to ensure proper temperatures near the viewing area. If operating the fireplace when the outside temperature is hot (above 90 deg. F.), you will notice the glass will become warm to the touch. When temperatures are more moderate, the glass will be cooler. Although this is not a safety issue, we do believe all fireplace viewers (and installers) should be aware of this. If you do anticipate operating this fireplace with higher outside temperatures, you may wish to pull the intake air from a cooler location (e.g.: shaded side of the building, conditioned air, etc.).

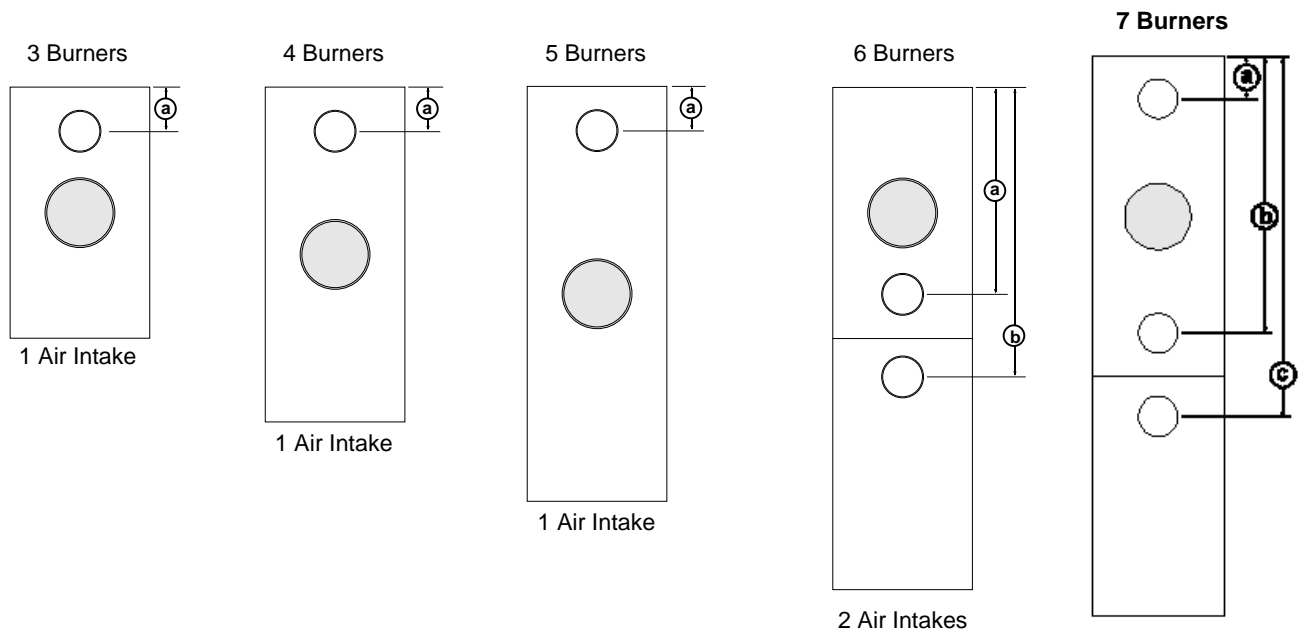Air Intake Duct Quantity and Location**Single Sided / See Through / Side / Pier**

	3 Burners	4 Burners	5 Burners	6 Burners	7 Burners
a	7"	8.5"	10.5"	31"	8.5"
b				43"	41.5"
C					55"

Bay / Island

	3 Burners	4 Burners	5 Burners	6 Burners
a	12"	13.5"	15.5"	36"
b				48"


Air intake Installation – Hood Versions (includes external dampers)

Part Numbers

6" Hood w Damper 98900093

8" Hood w Damper 98900094

Installation Diagram (intake with damper)

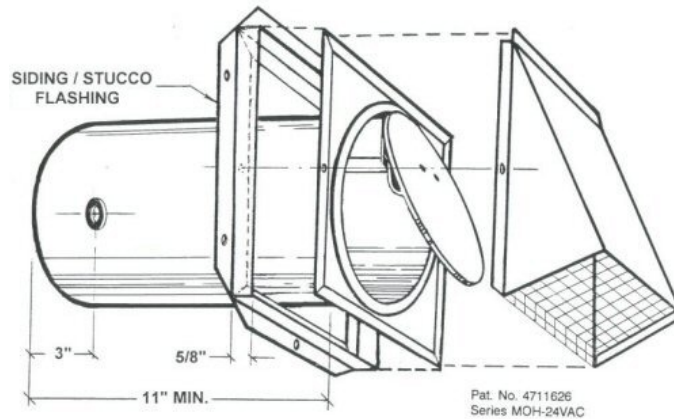

Installation

- **WARNING:**
DO NOT CONNECT THE INTAKE DAMPER WIRES TOGETHER (This will short the system).
- Locate the intake damper wires and make sure they are accessible before proceeding.
- **NOTE:** In the pictured example, we have crimped the intake damper. You may crimp this or use the included slider plate or connector to attach your flex duct.
- **DO NOT SCREW INTO THE TOP OF THE INTAKE DAMPER – THIS MAY CAUSE DAMAGE TO THE INTAKE DAMPER ACTUATOR.**

Slide the intake hood into the included flashing and secure.



Secure the duct to the hood. Use 2 or 3 screws and tape to attach and seal the duct.




Air Intake Dampers (for Hori. or Vert. Termination)

6" Dia. Intake Damper 98900078

8" Dia. Intake Damper 98900079

- 24V AC (orientation of wires does not matter)
- Normally Closed
- Spring Return

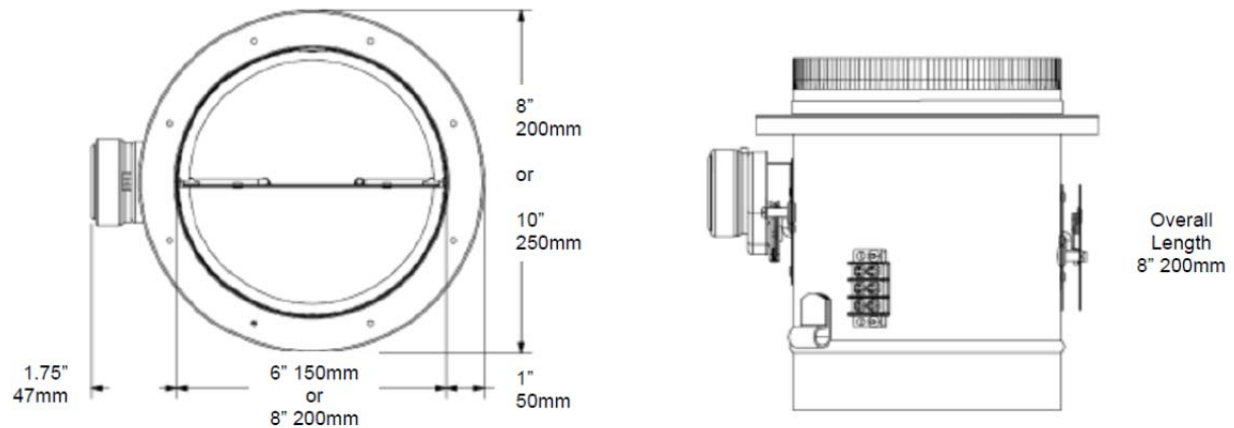

- The intake damper wires are located inside the air intake on some fireplaces. Carefully fashion a hole in the intake damper (or fireplace) and route the wires to the exterior of the duct. Make sure the wires do not contact any sharp edges (use grommets if necessary). Seal the duct to ensure proper airflow.
- Route the intake damper wires from the fireplace to the damper. A 20' extension is provided to extend the wiring (if additional wiring is needed, use part 250-02295 or 18 gauge wire).
- You will need to cut the quick-connects off the end of the wire harness. Attach the intake damper wires to the upper and lower posts on the terminal block attached to the intake damper (see pictures below - **orientation of the two wires does not matter**).




Louvered Termination (used for intake(s) or exhaust vent)

NOTE: Similar louver design may be used at the discretion of the manufacturer, following confirmation of the certifying body.

- The Louver Requires an Adapter – see the following page.
- Packing List:
 - Louvered Termination, Mounting Flange (w siding ledge), Mounting Flange (no ledge), (12) Self Drilling #8 x 1/2" Screws

Dimensions

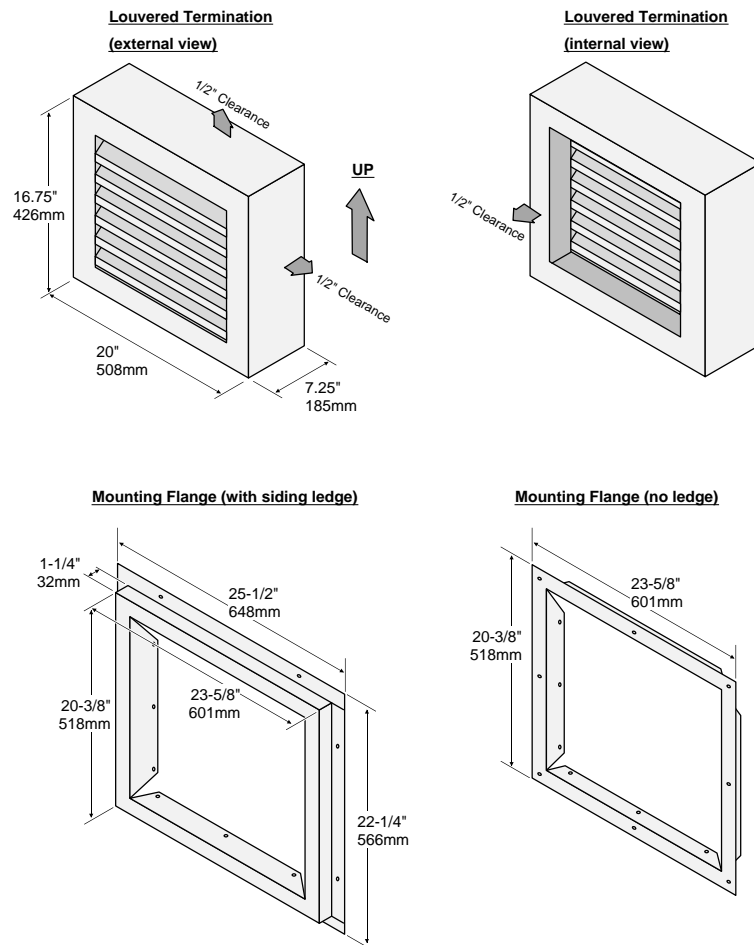


Painting the Louvered Termination and Flange(s)


- The exterior surfaces have been treated (chromate) to optimize paint adhesion. This treatment leaves the aluminum a bronze color. Use a suitable outdoor primer and finish coat on this surface as desired. NOTE: If used as an exhaust termination, use paint capable of withstanding 400° F. (e.g.: Stove Bright).

Installation Considerations

- This termination must be placed horizontally.
- The termination, when used as an exhaust, has a 1/2" clearance to combustibles (use included mounting flange for combustible framing)
- The included mounting flanges may be secured to the louvered termination using the included screws. Use the flange best suited for your installation.

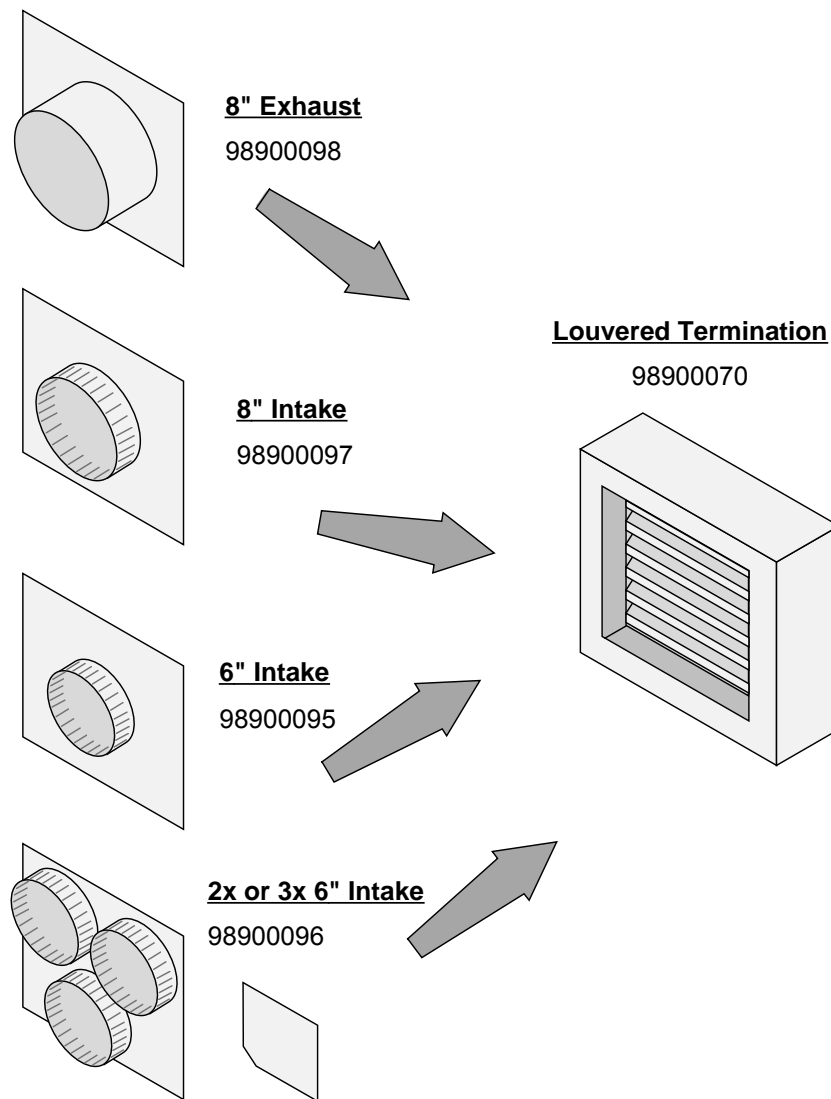Louvered Termination Adapter Plates**Attaching the Adapter to the Louvered Termination**

Use the included screws to attach the adapter to the louvered termination.

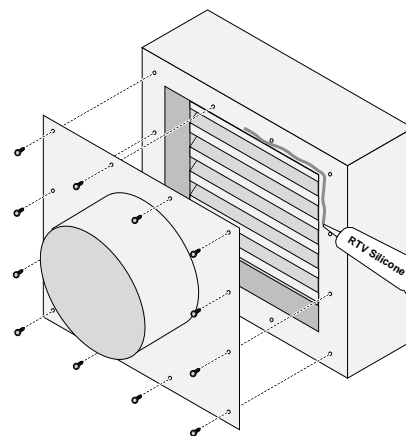

8" EXHAUST ADAPTER ONLY
For the exhaust adapter, apply a bead of high-temperature RTV silicone to the inner perimeter of the Louvered termination.

Vent Requirements

- The gas appliance and vent system must be vented directly to the outside of the building, and never be attached to a chimney serving a separate solid fuel or gas-burning appliance. Each direct vent gas appliance must use its own separate vent system.
- In addition to the requirements listed here, follow the requirements provided with the vent.
- A firestop is required whenever the vent penetrates a wall, floor, or ceiling (passes through framing members). Firestops may be provided by the vent manufacturer (1" clearance).

Vent Clearances

- The vent must maintain the required clearance to combustible materials to prevent a fire. Do not fill air spaces with insulation.

Minimum Clearance to Vent	1" (25mm)
---------------------------	-----------

Altitude Considerations

- This fireplace has been tested at altitudes ranging from sea level to 6,000 feet (1800 M). In this testing we have found that the fireplace, with its standard orifice, burns correctly with just an air shutter adjustment.
- Failure to adjust the air shutter properly may lead to improper combustion which can create a safety hazard. Consult your dealer or installer if you suspect an improperly adjusted air shutter.

Approved Vent

- Use listed 10" or 8" B-Vent (see power vent for diameter used). The actual exterior dimension will vary (typically 11" 279mm or 9" 229mm outer diameter). This vent is available from Travis Industries.

Vent Installation

- Before installing vent sections, place a bead of high-temperature silicone around the joint to ensure an air-tight seal.
- Secure the sections together (twist sections together, secure with screws - see vent manufacturer instructions for detailed requirements).
- Horizontal sections require non-combustible support every three feet (e.g.: plumbing strap)

WARNING: Do not use screws longer than 1/4" to secure the B-Vent together.

If long screws are used to secure the vent together, the screw will penetrate the outer wall of the vent then deflect the inner wall. This makes the inner wall bend inwards, creating unwanted turbulence and resistance inside the vent (see picture below to the right). This decreases exhaust flow and may negatively impact vent durability. See the vent manufacturer instructions for maximum screw size.

Make Sure Screws are Not Longer than 1/4"


1/4" Crimptite
(works fine)



1/2" Tek Screw
(too long)



Long Screws Create an Inward Bend (Flair)

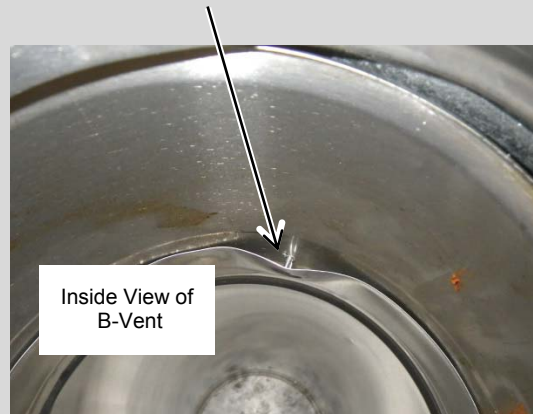


Inside View of
B-Vent

Approved Vent Configurations

The fireplace vent must meet the following requirements (measured from base of fireplace):

- **Minimum Vent Length = 3' (1 M) - Interior blower requires a minimum 5' (1.6 M) vent length**
- Maximum Horizontal Run = 100' (30 M)*
- Maximum Vertical Rise = 100' (30 M)* (measured from base of fireplace)
- Maximum Vertical Drop below Base of Fireplace = 6' (2 M)*
NOTE: The downward vent sections may not exceed 10' total.
- Maximum 90° Elbows = 4 (note: two 45° elbows count as one 90° elbow)
- The chart below details maximum vent height and length. The termination must fall within the "Standard Installation" or "Extended Installation" shaded regions shown below.
- Use the table below to determine which blower must be used.

* If you wish to place the termination outside the shaded regions, or if additional elbows are required, you must contact Travis Industries to verify vent configuration.

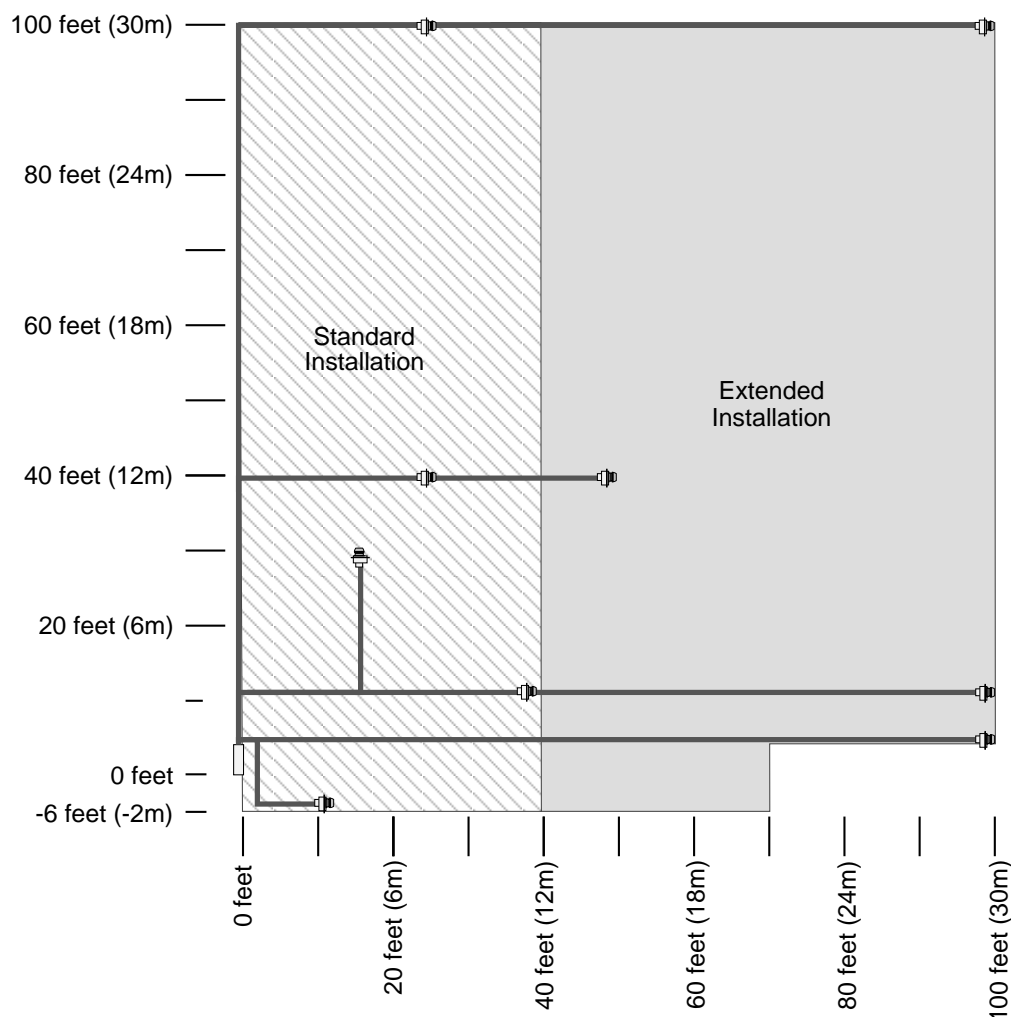

<u>Compatible Exhaust Blower</u>	<u>Standard Installation</u>	<u>Extended Installation</u>
<u>6' Burner (or less)</u>	RS12 or Inline 160	RS12 or Inline 160
<u>7' Burner (or greater)</u>	RS16	RS16


Rheostat Adjustment

Most vent configurations will require no adjustment to the rheostat. If your flame is especially blue or short after 20 minutes, or if the glass is too hot, you may need to adjust the rheostat.

-- If the flames are blue and short after 20 minutes – turn the rheostat down.

-- If the glass is too hot after 20 minutes – turn the rheostat up.

Contact Travis Industries if you have any questions regarding rheostat adjustment.

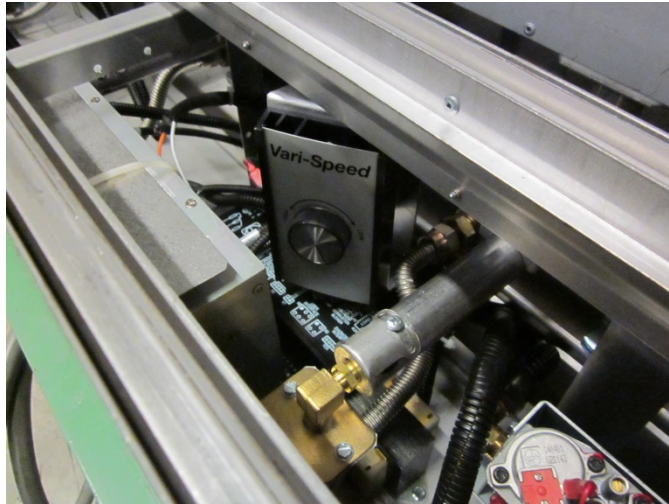

The rheostat may be adjusted with the fireplace in operation. Remove the cover plate nearest the rheostat to access the rheostat and make adjustments.

NOTE: The exhaust blower will run on high for approximately 30 seconds once the fireplace is turned on (pre-purge). After 30 seconds the burner will turn on and the rheostat controls the speed of the exhaust blower.


Restrictor Adjustment

Most vent configurations will require no restrictor adjustment. If your flame is especially blue or short after 20 minutes, and you have adjusted the rheostat to the lowest setting, you may need to adjust the restrictor (it is attached to the firebox ceiling near the exhaust outlet). Contact Travis Industries for further details before adjusting the restrictor.

Termination Requirements

Vent Terminations Must Comply with AS/NZS 5601.1**! Venting terminals shall not be recessed into a wall or siding.**

- A Minimum 12" (305mm) clearance from any door or window
- B Minimum 24" (610mm) above any grade, veranda, porch, deck or balcony
- C Minimum 1" (25mm) from outside corner walls
NOTE: Clearance in accordance with local installation codes and the requirements of the gas supplier.
- D Minimum 24" (610mm) from inside corner walls
NOTE: Clearance in accordance with local installation codes and the requirements of the gas supplier.
- E Minimum 24" (610mm) clearance below ventilated or unventilated soffits or roof surfaces
NOTE: Clearance in accordance with local installation codes and the requirements of the gas supplier.
- F Minimum 12" (305mm) clearance below a veranda, porch, deck or balcony
NOTE: Permitted only if veranda, porch, deck, or balcony is fully open on a minimum of two sides beneath the floor.
NOTE: Clearance in accordance with local installation codes and the requirements of the gas supplier.
- G Minimum 48" (1219mm) clearance from any adjacent building
- H Minimum 84" (2134mm) clearance above any grade when adjacent to public walkways or driveways
NOTE: may not be used over a walkway or driveway shared by an adjacent building
- I Minimum 12" (305mm) clearance to any non-mechanical air supply inlet to the building or the combustion air inlet to any other appliance.
- J Minimum 36" (914mm) clearance above any mechanical air supply inlet if within 10' (3M) horizontally
EXCEPTION: The air intake for this fireplace may be placed a minimum 24" (610mm) to the side or below the exhaust termination (do not place the intake above the exhaust termination).
- K Minimum 36" (914mm) from the area above the meter/regulator (vent outlet) - this extends 15' (4.5M) above the regulator
NOTE: Clearance in accordance with local installation codes and the requirements of the gas supplier.
- L Minimum 36" (914mm) from the meter/regulator (vent outlet)
NOTE: Clearance in accordance with local installation codes and the requirements of the gas supplier.
- M Minimum 12" (305mm) above the roof line (for vertical terminations)
- N Minimum 24" (610mm) horizontal clearance to any surface (such as an exterior wall) – for vertical terminations

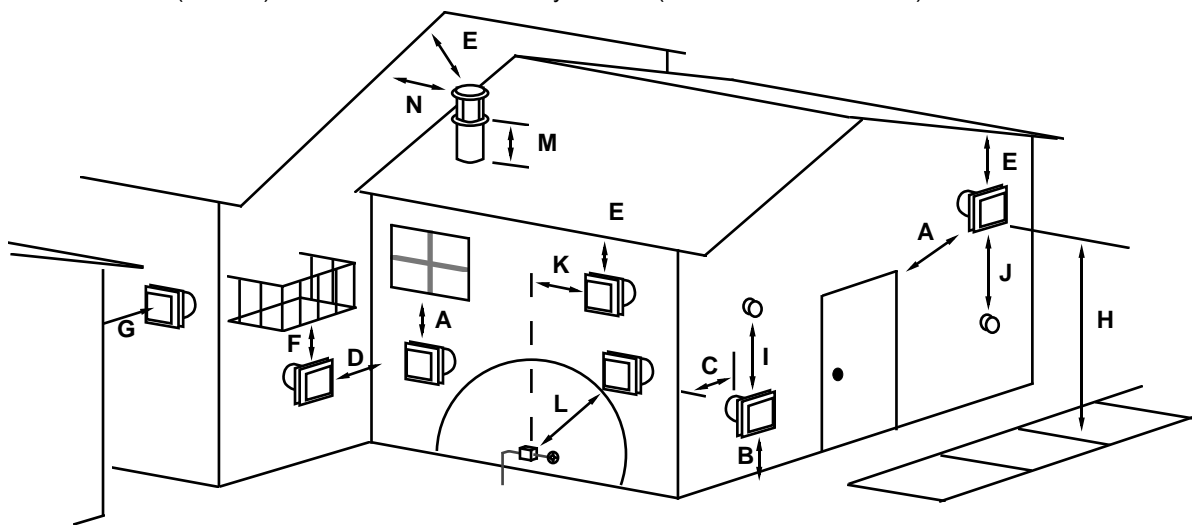


NOTE: Measure clearances to the nearest edge of the exhaust hood.

- Vent termination must not be located where it will become plugged by snow or other material


Power Vent – Dimensions, Framing, Mounting

Exterior Power Vent Dimensions – Low Volume (RS12) 94400903

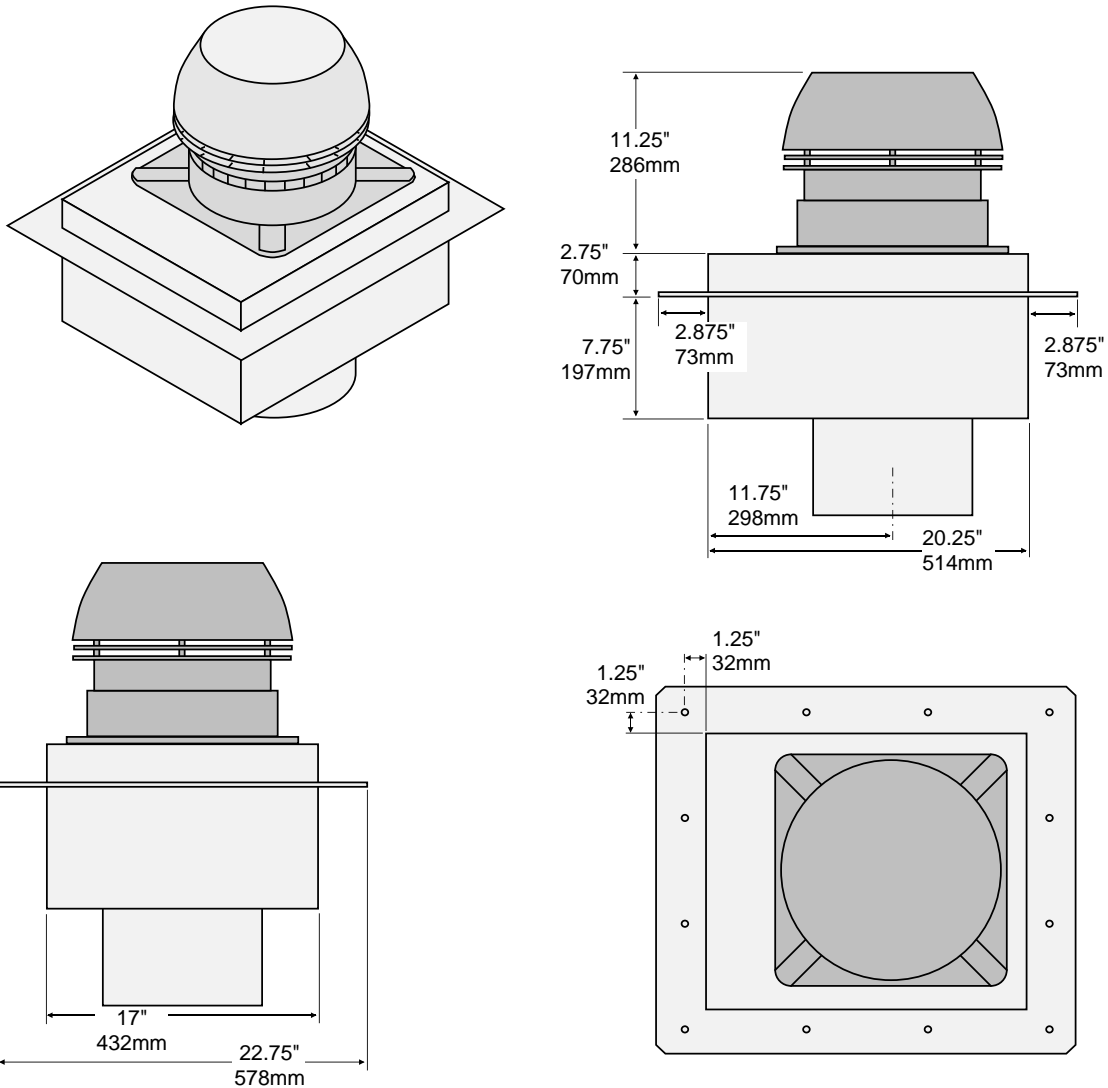


RS-12 / 16 Rain Cap

The rain cap is designed for installation using the RS 12 or 16 exterior power vent. Contact Travis Industries if you have questions regarding the use of this cap.




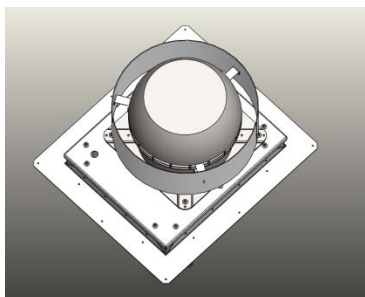


Rain Cap Installed

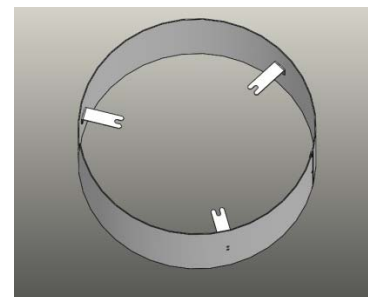

Rain Cap Shroud with Brackets

Exterior Power Vent Dimensions – High Volume (RS16) 94400904

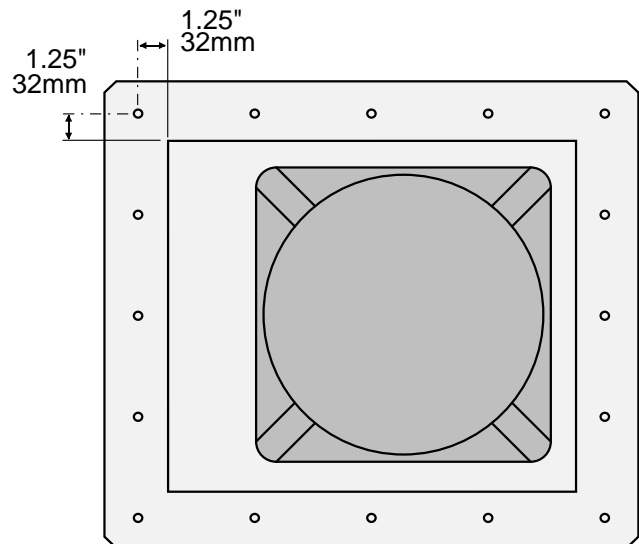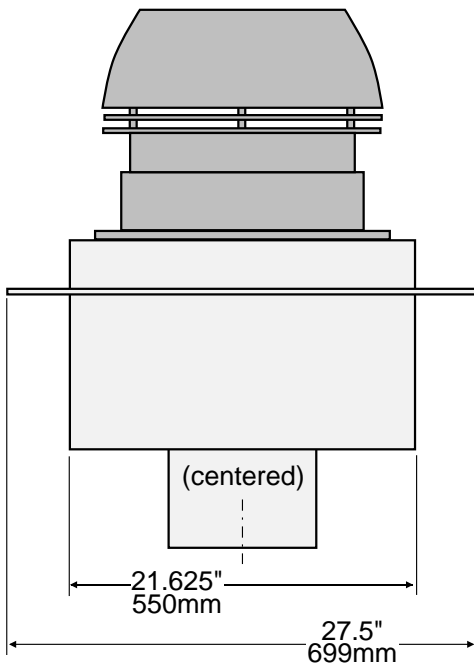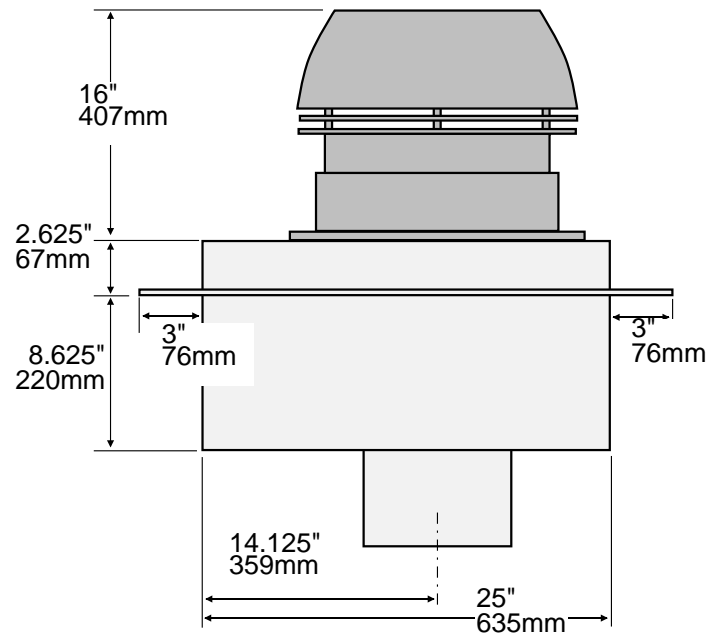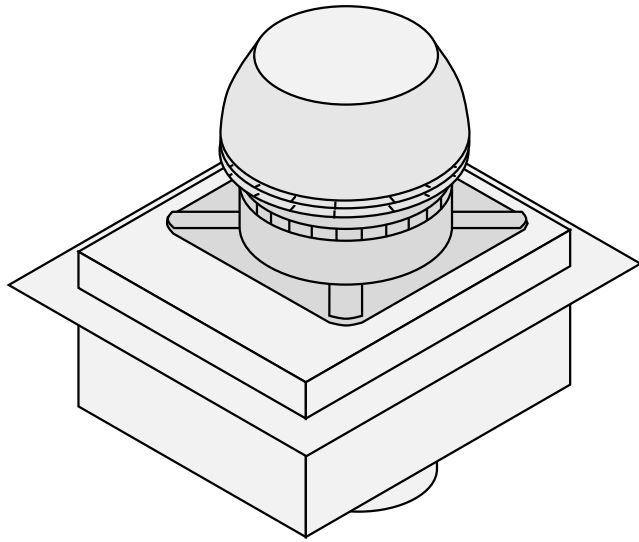


Framing - Exterior Power Vent (94400903 & 94400904 only)

- The power vent assembly must be mounted into framing capable of supporting the weight of the assembly and vent.
- Framing must provide a 1/2" gap to power vent assembly housing. This allows for proper cooling of the blower and damper.
- Framing dimensions are listed below (these dimensions include the required 1/2" gap).

Horizontal Termination

Vertical Termination

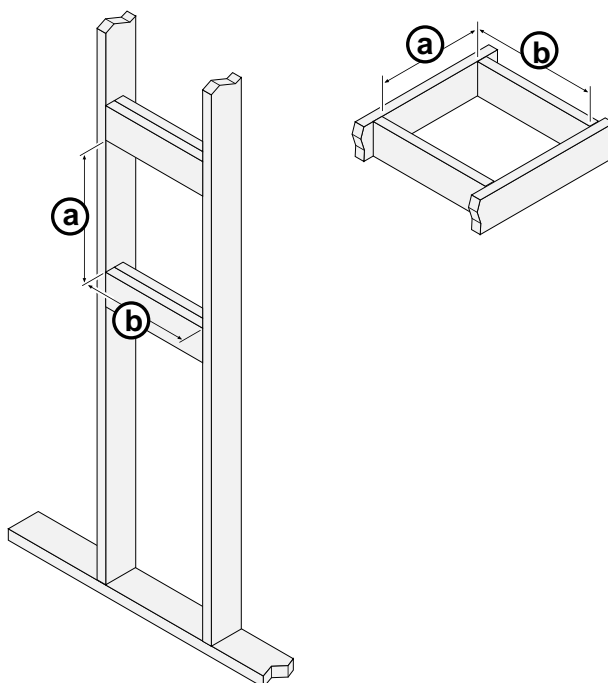

	<u>Height (a)</u>	<u>Width (b)</u>
<u>Small Blower</u>	21.25" (540mm)	18" (458mm)
<u>Large Blower</u>	26" (661mm)	22.625" (575mm)



- Box may be mounted in a vertical or horizontal position. If mounted in a horizontal position, the box must be mounted with the cooling holes on top (to allow for proper airflow).

Cooling Holes
**MAKE SURE TO
 PROVIDE A 1/2"
 GAP TO ALL
 SIDES FOR
 COOLING**



Mounting - Exterior Power Vent (94400903 & 94400904 only)


- Box must be properly weatherized to prevent rain or snow from entering.
- Flashing strips are included with the blower to provide additional protection. The flashing may be placed with the edge outwards for horizontal terminations when submerged in siding. It may also be placed with the edge inwards for vertical terminations to provide a drip edge.
- When mounted vertically we recommend the blower assembly be mounted with a slight tilt (approx. 5°) to allow for rain to run off the assembly (see illustration below). Tilt the assembly so the blower shroud is on the upper end.

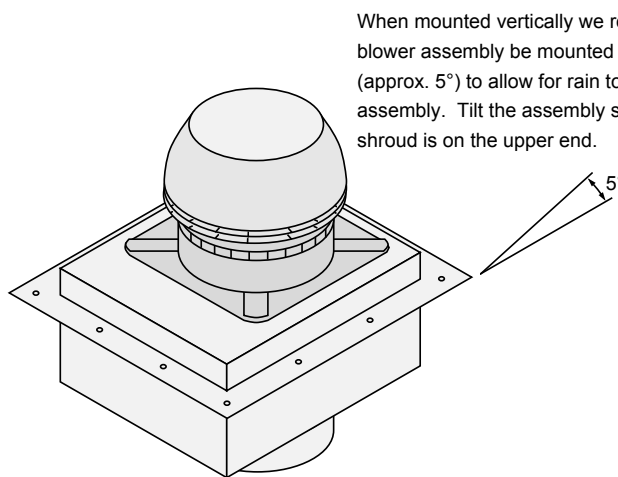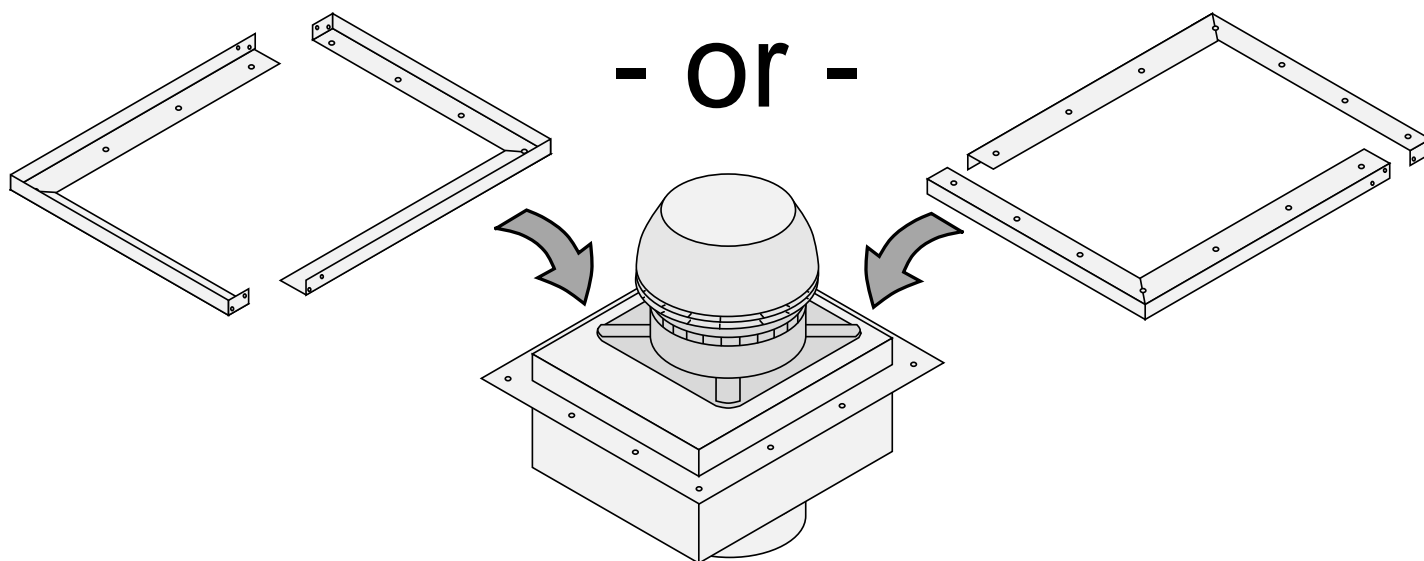


Interior Power Vent – Dimensions and Mounting

Interior Power Vent Dimensions – (Lo 160) 94400905

- ! The blower may be placed on its side or with the motor upwards. **DO NOT POSITION THE ASSEMBLY SO THE BLOWER MOTOR IS BELOW THE ASSEMBLY.** This will greatly shorten blower life and void the warranty.

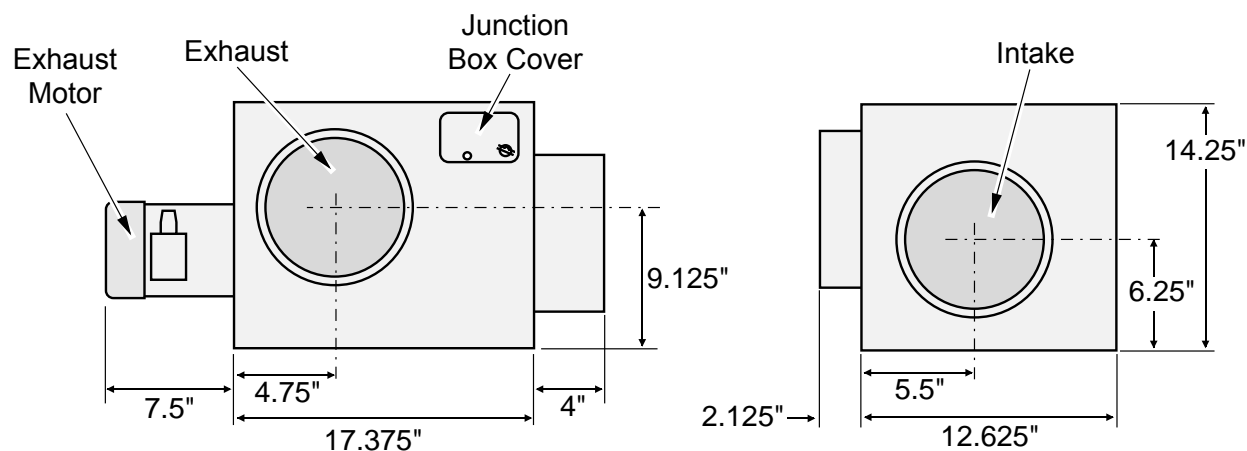


Interior Power Vent - Typical Installation Arrangements

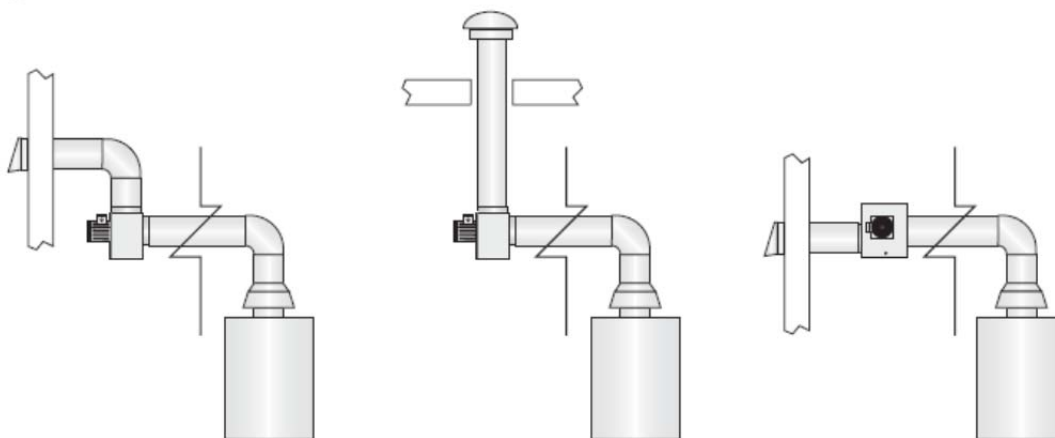

Interior Power Vent - Minimum Vent Pre and Post Blower

In order to achieve optimal performance and energy consumption, the vent pipe should be installed as in Fig. 10 and the distances observed.

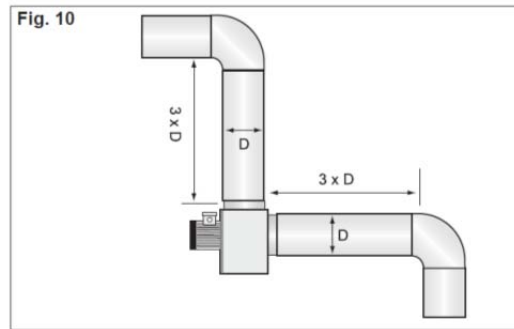


- Minimum Vent Pre-Blower = 2' Straight Section (24") – 4' (48") or more recommended
- Minimum Vent Post-Blower = 2' Straight Section (24") – 4' (48") or more recommended

Interior Power Vent – Mounting

- ! The blower may be placed on its side or with the motor upwards. **DO NOT POSITION THE ASSEMBLY SO THE BLOWER MOTOR IS BELOW THE ASSEMBLY – SEE ILLUSTRATION TO THE RIGHT.** This will greatly shorten blower life and void the warranty.

- Use the included brackets to help secure the blower and exhaust damper in place (see illustration below).
- Use straps/supports/framing to secure the blower in a workmanlike manner.
- The b-vent after the exhaust blower must be sealed (use rtv silicone or equivalent).
- Test the blower prior to sealing the vent enclosure to ensure proper noise abatement has been achieved. You may wish to isolate the blower mounting to reduce vibration.

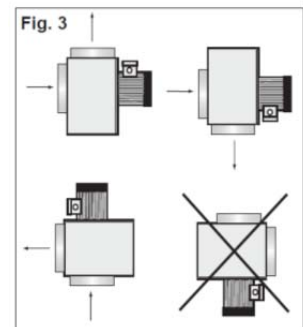


The power venter can be mounted with plumber's strap or threaded rod with nuts and washers, or it can be placed on support legs (included).

As Fig. 5 illustrates, the venter can be placed in virtually any position or direction, except with the motor pointing down. When placing the venter on the support legs (1), the vibration dampers (4) should be used and secured by nuts (2).


The support legs are attached to the bottom of the venter using the enclosed sheet metal screws (3). In this configuration, the venter is typically placed on a shelf hung from a wall.


If hanging the venter from the ceiling, threaded rods should be used. Attach the support legs (1) to the bottom of the fan and secure with the sheet metal screws (3). Do not use the vibration dampers. Instead, use the holes on the top of the legs for the threaded rods, and secure these with the nuts (5).

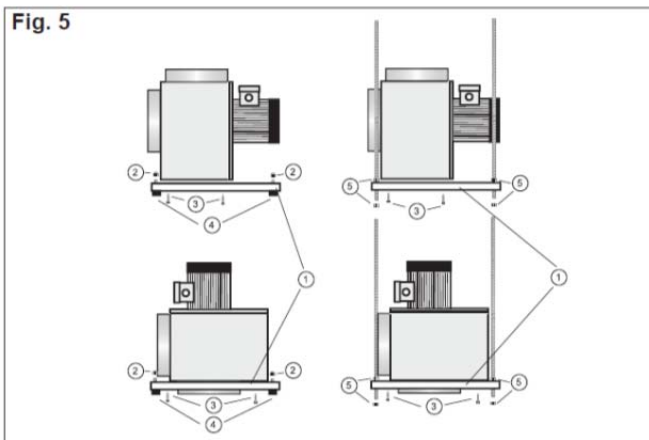

Interior Power Vent Enclosure

- The exhaust blower assembly consists of a blower and damper constructed into a single box. This assembly is best placed in a location where it can be accessed from all sides (ceiling plenum, utility closet, mechanical chase, attic space, service corridor, etc.). It is imperative that the assembly be placed in a location where the vent connections and junction box may be accessed.
- If you do wish to enclose the blower assembly, make sure to place it in a location where it may be accessed and the vent and wiring disconnected for servicing. The illustration below details the minimum clearances required for the exhaust blower enclosure. Make sure to include an access door on the side that has the junction box. This will allow a service person to access to the junction box and vent connections.

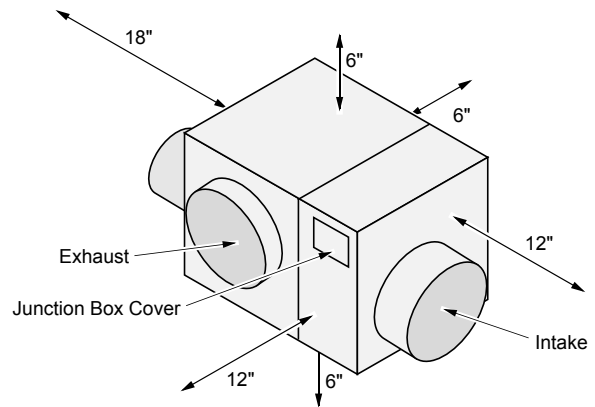

 The blower assembly requires a 1" clearance to combustibles.

Interior Power Vent - Attaching Vent to the Blower Assembly


- When attaching the vent to the blower assembly, make sure to accommodate servicing at a later time.
- Attach a male adapter to both the intake and exhaust (e.g.: Duravent 8GVAM). When attaching make sure to orient the adapter correctly (note direction of flow). For the exhaust, the adapter will be sealed and screwed to the exhaust box.
- After the male adapter, use an adjustable length connector on both the intake and exhaust (e.g. Duravent 8GV12A). Make sure to position the connector so the tensioner may be loosened after the installation is complete. This arrangement allows for the adjustable lengths to be loosened at a later time and the vent connections detached from the exhaust blower assembly.

Interior Power Vent - Components

The power venter consists of the following components:

- | | |
|-------------------------|--|
| a. Housing | f. Door latches |
| b. Access door | g. Door handle |
| c. Motor | h. Support legs with vibration dampers (2) |
| d. Centrifugal impeller | i. Sheet metal screws (4) |
| e. Power venter housing | l. Wire conduit |

Fig. 1

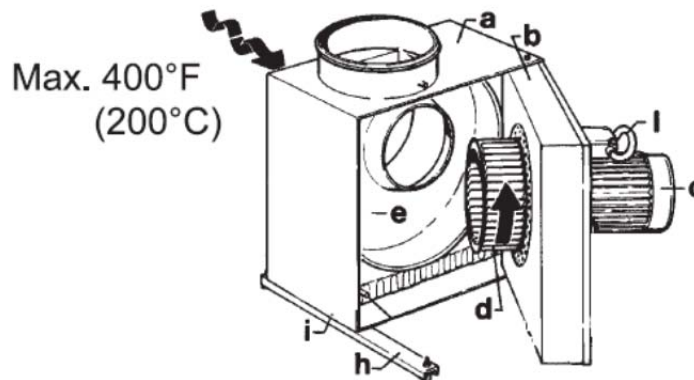

Interior Power Vent - Termination

- The interior power vent must use a listed B-Vent termination or the Travis Louvered Termination (98900070) for horizontal terminations (make sure to use the appropriate adapter).

Hearth Requirements

A hearth is not required for this fireplace. If a hearth is installed, it must not extend above the glass opening (we recommend the hearth be a minimum 1" below the glass opening to allow for glass installation). The hearth may be combustible or non-combustible.


Facing Requirements

- Drywall, tile, or other facing (combustible or non-combustible) may be placed directly on the face of the fireplace (see "a" below).
- Facing may be placed along the perimeter of glass opening, but must not extend over it. This area must remain open to allow for glass removal and installation.
- Fireplace must not be used to support the facing. Heavy facing must be self-supporting.




WARNING: Do not use adhesive to secure the facing. The high temperatures of the fireplace may cause adhesives to emit odors. Use mastic or thin set (or other non-combustible, non-odorous adherent) to attach the facing.

NOTE: Screws may be used to secure cement board or tile backer to the fireplace. Do not penetrate the fireplace more than 1/2" (13mm).

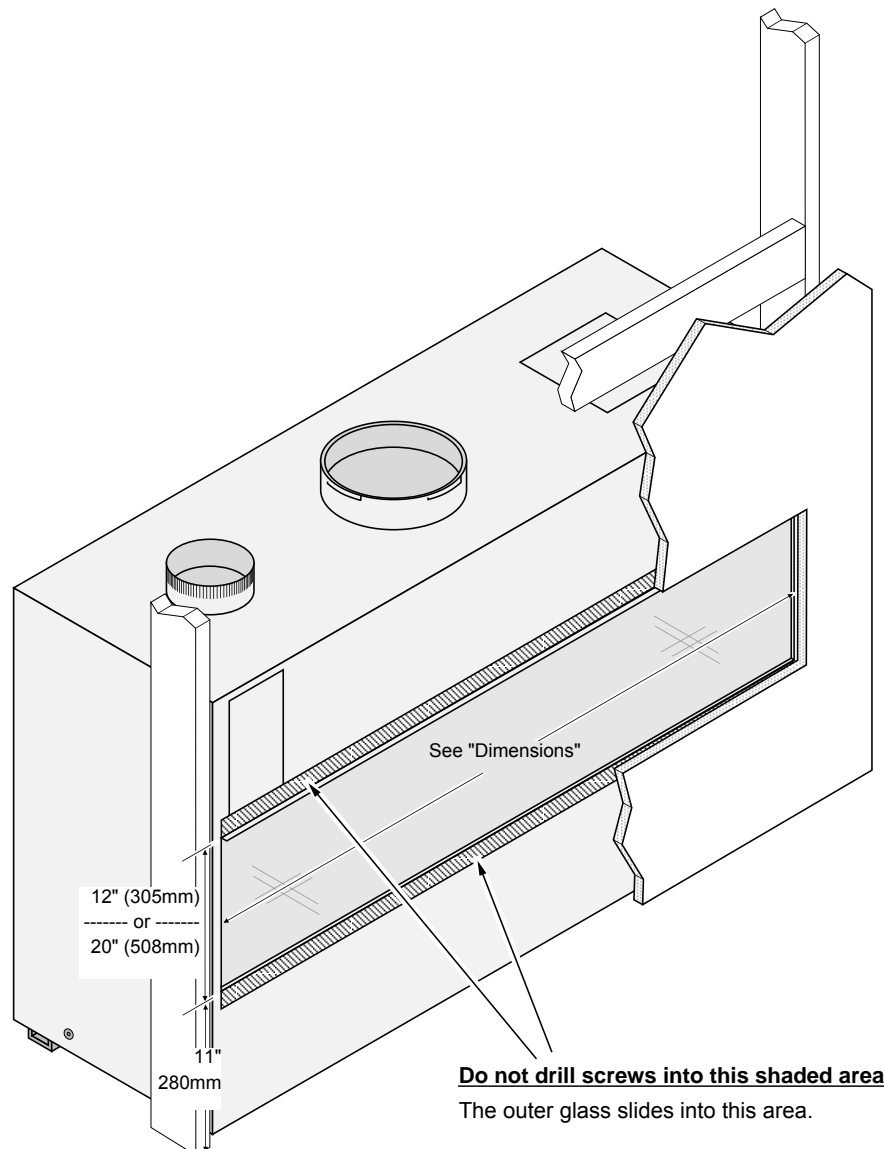

Do Not Drill or Screw Zone

When using screws to secure drywall to the fireplace, make sure to avoid the area shown below. Make sure screws penetrate no more than 1/2" (13mm) into the fireplace.

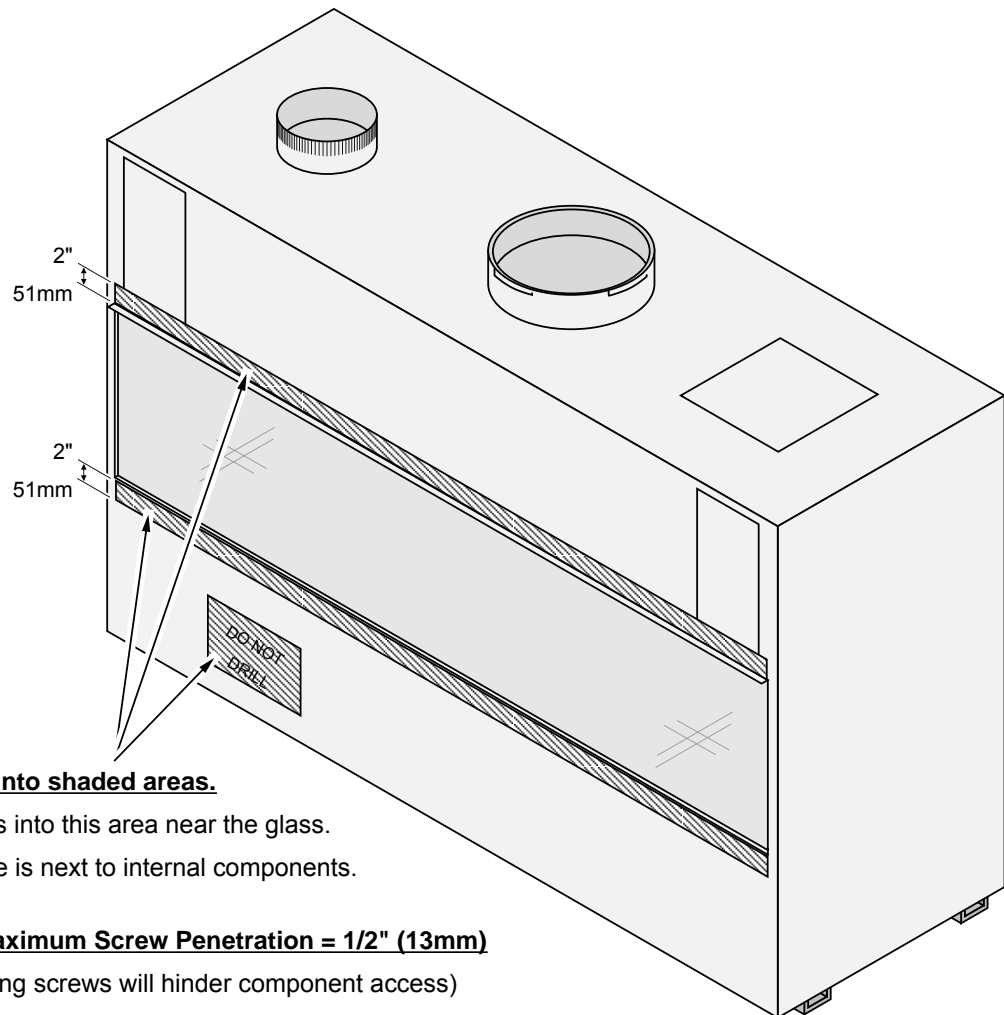

Do not drill screws into shaded areas.

The outer glass slides into this area near the glass.

The "do not drill" zone is next to internal components.

Maximum Screw Penetration = 1/2" (13mm)

(long screws will hinder component access)

Mantel Requirements

- A mantel (combustible or non-combustible) may be installed above the fireplace. Make sure it does not overlap the glass opening.

Fireback Installation

Firebacks are shipped separately from the fireplace and must be installed prior to installing the crushed glass. There are three different sizes of firebacks (12", Divider, and End Firebacks). Depending upon the type of fireplace, you will need multiple pieces (see table below). Follow the instructions below to install.

Fireback Quantity Needed – Category 1 Fireplaces

<u>Type of Fireplace</u>	<u>Burner Length</u>	<u># of 12" Firebacks</u>	<u># of End Firebacks 4.25" Wide</u>	<u># of Divider Firebacks (8.625" Wide)</u>	<u># of Bay Firebacks (5.5" Wide)</u>
1-Sided	7'	7	2	2	0
	6'	6	2	2	0
	5'	5	2	2	0
	4'	4	2	2	0
	3'	3	2	2	0
See Through	Any Length	0	4	2	0
Pier	Any Length	0	2	1	0
Island	Any Length	0	0	0	0
Full Bay	6'	6	0	0	2
	5'	5	0	0	2
	4'	4	0	0	2
	3'	3	0	0	2
Side	6'	6	1	1	1
	5'	5	1	1	1
	4'	4	1	1	1
	3'	3	1	1	1

Fireback Installation Order

<u>Type of Fireplace</u>	
1-Sided	(a) Install 12" firebacks (start at ends and work inwards – align if necessary). (b) Install divider firebacks. (c) After inner glass is in place, install end firebacks.
See Through	(a) Install divider firebacks. (b) After inner glass in place, install end firebacks
Pier	(a) Install divider firebacks. (b) After inner glass in place, install end firebacks.
Island	No firebacks, no worries.
Full Bay	(a) Install bay firebacks on both ends (install near end and slide to the outside). (b) Install 12" firebacks.
Side	(a) Install bay firebacks at the end (install near the end and slide to the outside). (b) Install 12" firebacks. (c) Install divider fireback. (d) After inner glass in place, install end fireback

Identifying the Firebacks

12" Fireback



This notch fits over the ledge at the back of the firebox.

Divider Fireback




The divider fireback has a notch on the bottom.

Bay Fireback



This notch fits over the ledge at the back of the firebox.

Note how the top angles downwards to the outside.

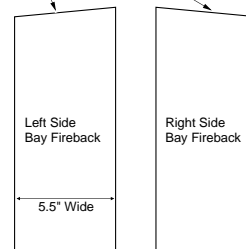


Older End Firebacks (newer firebacks are interchangeable and may be placed on either side)




The end fireback has a hole on the bottom.

Older end firebacks are side specific (each side is not interchangeable). Make sure to place the end fireback with the slope facing outward (see illustration to the right).

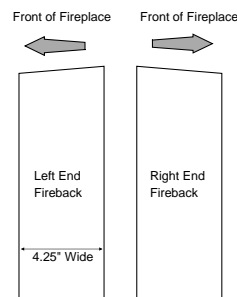



Glass Fireback

- The optional glass fireback is placed along the back wall of the firebox.
- It is shipped with the glass panes.
- To install, lift it into place using suction cups (see the illustration to the right for instructions on sliding it into place). The painted surface of the glass scratches easily and must be placed away from the fire.
- Glass firebacks use black enamel firebacks for the end, divider and bay firebacks.

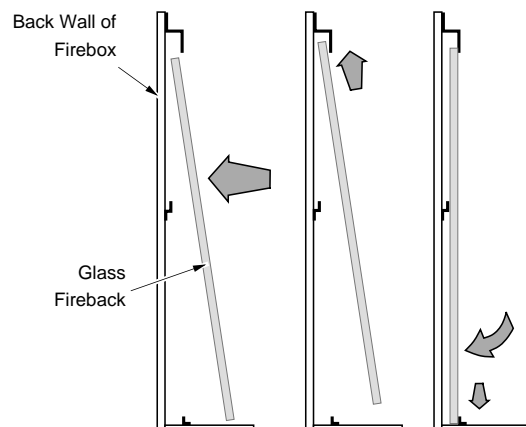

Installing the 12" Firebacks

The fireback has a notch on each side that slides over a rail at the back of the firebox.

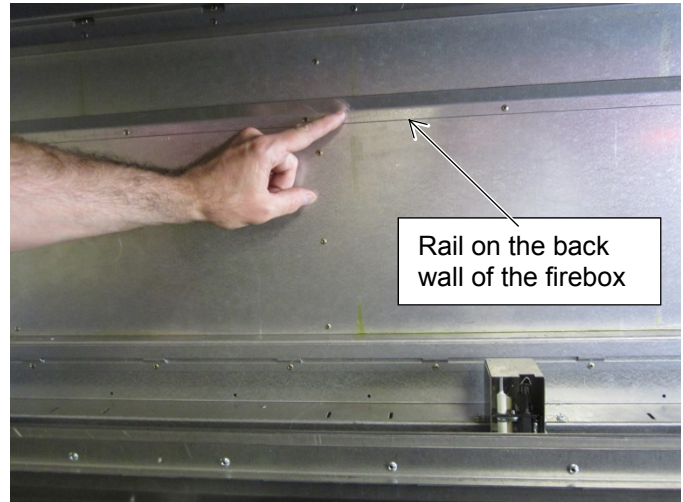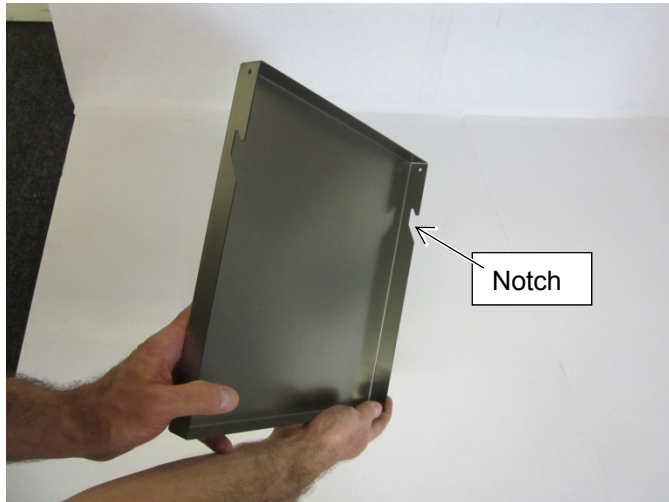

Install each fireback using suction cups (or two hands). Place the fireback into position, making sure the notch fits over the rail. Once attached, the fireback may be slid left or right. Once all firebacks are installed, make sure they are equally spaced and fully seated.

**Installing the Bay Firebacks**

NOTE: If using a bay fireplace, install the bay firebacks before installing the 12" firebacks. The bay firebacks install in the same fashion as the 12" firebacks. Place the fireback in place, approximately 6" from the end (make sure it is the correct side – the top edge slopes down at the end). Then slide it outwards into place (see pictures below).



Installing the Divider and End Firebacks

These firebacks use two magnets to hold each fireback in place. The magnets are shipped pre-attached to the fireplace walls.



NOTE: The divider firebacks have a notch at the bottom. Place it as shown below.



Install the inner glass panes before installing the end firebacks (NOTE: Remove the magnets before glass installation). The end fireback has angled top. Place the fireback with the slope facing outwards.



Glass Pane Installation and Removal

This fireplace uses a dual layer of glass to provide combustion air to the fireplace and keep the exterior cool. The glass panes are packaged separately and do not use a steel glass frame.



The appliance must be completely cool before removing the glass.



Do not strike or slam the glass.



Warning: Do not operate appliance with the glass removed, cracked or broken. Replacement of the glass should be done by a licensed or qualified service person.



Use only glass provided by Travis Industries for this appliance. Do not use substitute glass.

Suction Cups

NOTE: Suction cups are required for glass installation and removal. These are available from Travis Industries (sku 94400914).

When to Install the Glass Panes

The glass is typically installed after all other steps have been completed. This helps ensure the glass is kept clean and away from potential damage.

- (a) Fireplace should be in location and attached to power, gas, vent and intake.
- (b) Install the firebacks.
- (c) Install the inner glass and test-start the fireplace. This is done to verify appliance operation only. Do not let the appliance burn for more than 5 minutes.
- (d) Remove the front inner glass.
- (e) Install the crushed glass over the burner and inner media trays.
- (f) Replace the front inner glass.
- (g) On Pier, Bay, and Island models, install the side outer glass panes.
- (h) If crushed glass is being used in the intake air channel, install it at this time.
- (i) Install the remaining outer glass panes.

Overview of Glass Panes – Category 1 Fireplaces

<u>Type of Fireplace</u>	<u>Length (Nominal)</u>	<u># of Glass Panes</u>	<u>Glass Sizing</u>
1-Sided	5'	2	TBD
Pier	5'	6	TBD
Full Bay	5'	6	TBD
Island	5'	8	TBD
2-Sided	5'	4	TBD

**Check for the DaVinci Logo Before Installing the Glass**


The outer piece of glass has a DaVinci logo. Make sure it is on the lower right and is facing outwards.

Attaching the Suction Cups to the Glass Panes


NOTE: Make sure the glass and suction cups are clean before attaching the suction cups. These surfaces must be clean and dry for the suction cups to work properly.

NOTE: The larger glass panes may require an additional helper. We recommend using 2 people with 4 suction cups when handling long glass panes (over 5' long, especially 20" tall version).


- (a) Place one suction cup onto the glass panel. Press the suction button repeatedly until the red line on the suction cup submerges into the handle. This indicates proper vacuum.

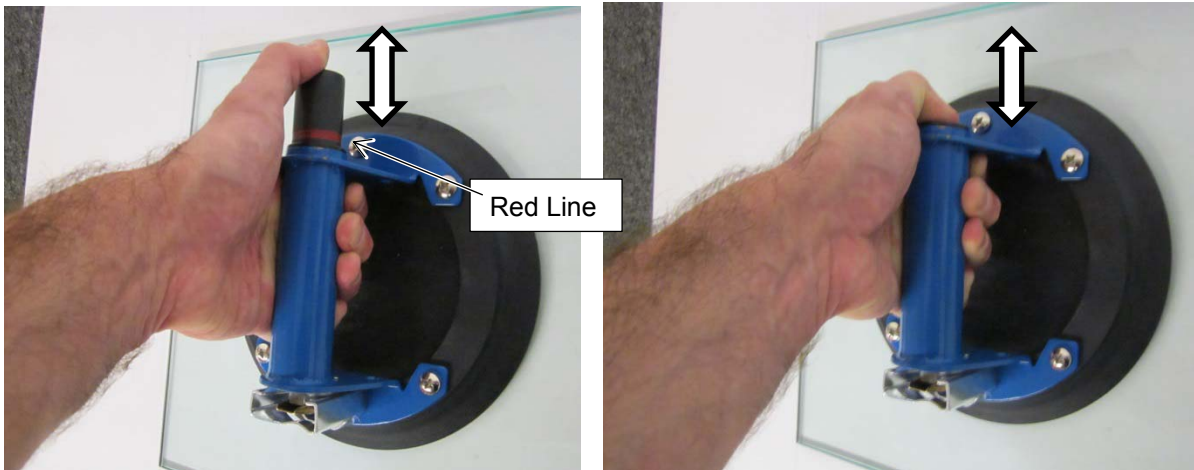

- (b) Repeat step "a" for the remaining suction cups. **NOTE:** The suction cups have a lever opposite the suction button. This lever releases air, allowing the suction cup to disengage from the glass. **DO NOT PRESS THIS LEVER UNLESS YOU ARE RELEASING THE SUCTION CUP.**

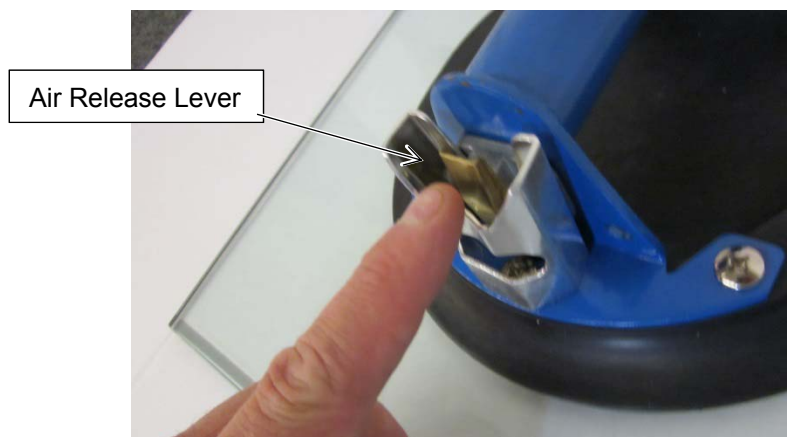

- (c) Verify the suction cups are properly aligned and the red line is submerged before lifting the glass (see photos below).

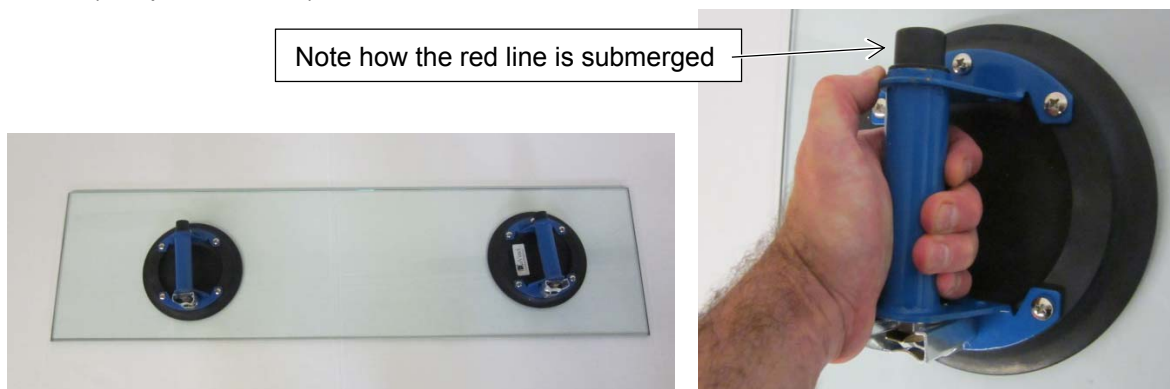


Installing the Glass Panes Into the Fireplace

Before installing the glass, make sure to measure it to verify it is the correct piece. Refer to the section "When to Install the Glass" on page 68 to determine when to install the glass.


- (a) Before installing the glass pane, **verify the lower channel is free of crushed glass or any other debris**. Any debris left in this channel will cause an air lead and may damage the glass pane.



- (b) Lift the glass pane and insert it at an angle so the top edge inserts into the upper slot.

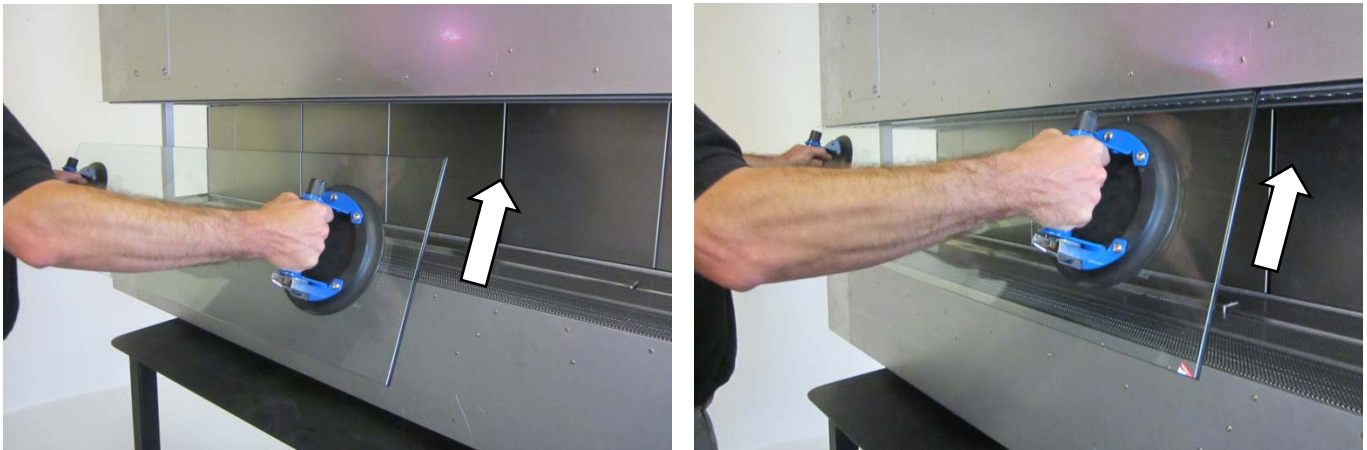

- (c) Swing the lower edge of the glass pane inwards until the lower edge can insert into the lower slot.

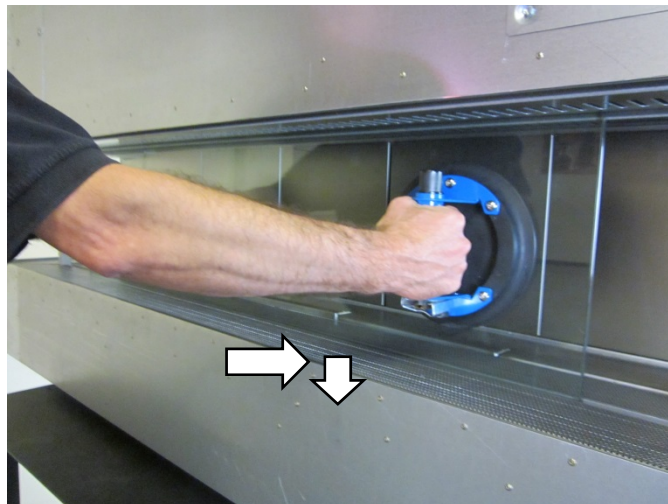

Steps for Finalizing the Installation

1. Before installing the glass, purge the gas line. This allows gas to be detected once it enters the firebox.
2. Leak test all the gas joints.
3. Follow the instructions on page 68 for "When to Install the Glass".
4. Start the fireplace.
5. Check the air shutter following the directions below.


Air Shutter Adjustment

There are several burners inside the fireplace (one burner for each foot of burner length). Each burner has its own air shutter. The air shutters are pre-adjusted at the factory for the fuel being used and probably do not need further adjustment. If the flames are sooty or blue and short, follow the directions below.

- a) Let the fireplace burn for 20 minutes.
- b) Check the flame height. Each center flame should be 9" to 12" tall at the highest point. Individual flames may have a different pattern, but the overall height should be similar from left to right.
NOTE: The flames will look different when the crushed glass is installed. Make sure the crushed glass is removed directly above the cluster of burner holes (see "Crushed Glass Installation").
- c) If adjustment is needed, the fireplace will need to be shut off and allowed to cool. Remove the front outer piece of glass. Remove the media tray directly behind the glass to access each air shutter (see illustration below).

FLAMES SOOTY – Open the air shutter an additional 1/8" (3mm)

FLAMES SHORT AND BLUE – Close the air shutter an additional 1/8" (3mm)

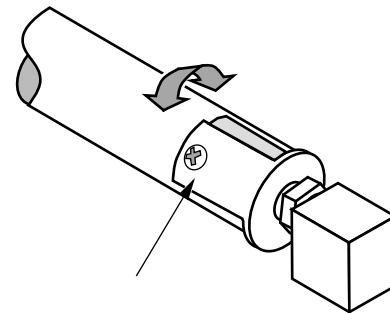

Loosen this screw then rotate the air shutter to adjust the air shutter.

- d) Restore the fireplace to the correct configuration and verify the flames (step "a" and "b" above).

6. Give this manual to the home owner for future reference and fully explain operation of this fireplace.
7. Turn the appliance off and install the crushed glass.

Crushed Glass Installation

Crushed glass is placed over the burners and center media trays. As an option, crushed glass may also be placed over the intake air channel media trays (the area between the two panes of glass). Use only ¼" crushed glass from Travis Industries and/or other media specifically approved by Travis Industries.

Placing Crushed Glass on the Burner and Center Media Trays

Glass Quantity = 1.5 Pounds (0.66 Kg) Per Linear Foot (300mm)

**1 Level Cup (8 fl. oz.) (240ml) = 0.95 lbs.
So...1 Slightly Rounded Cup = 1 lb.**



Determine the amount of glass needed for the fireplace being installed. Set this glass aside in portions to allow for an even amount of glass to be placed over the surface of the burner and media tray. NOTE: It is better to install too little glass than too much.



- (a) On Pier, Island, and Bay models, make sure the side inner glass is in place. Open up a bag of crushed glass and pour it evenly on to the burner and media trays. Use a brush or glove to evenly distribute the glass over the surface.



- (b) After distributing the glass, make sure to uncover the area over the center of each burner. There is a grouping of burner holes that should be left open. This makes the flames coalesce and create a taller flame pattern. On the burner next to the pilot, clear off the center burner holes and clear off the set of burner holes leading to the pilot. This open area allows the pilot ignite the burner quickly so the fireplace ignites properly.

NOTE: Failure to clear this area will result in poor fireplace ignition. This may lead to delayed ignition "pops" or sooting.

Clear off the ports on the center of each burner. In addition, clear off the line of burner holes leading to the pilot and area directly over the pilot.

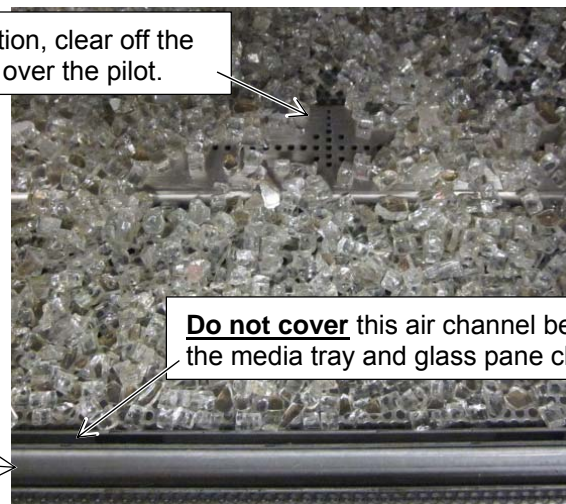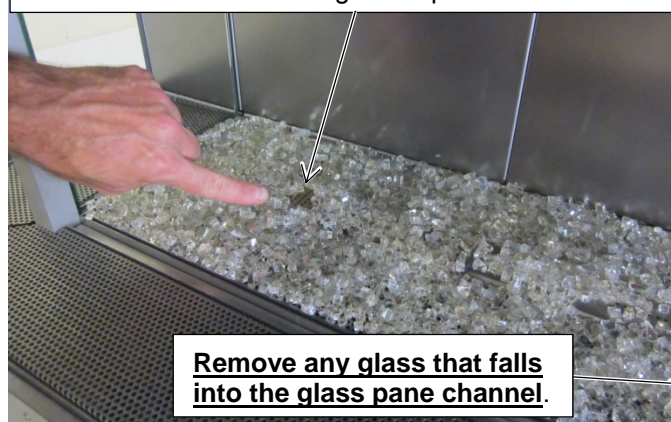

Placing Crushed Glass in the Intake Channel (Between Panes of Glass) - OPTIONAL

Glass Quantity = 0.75 Pound (0.33 Kg) Per Linear Foot (300mm)

Glass Quantity – Island, Pier, & Bay Ends = 1.25 (0.6 Kg) Pounds Per End

**1 Level Cup (8 fl. oz.) (240ml) = 0.95 lbs.
So...1 Slightly Rounded Cup = 1 lb.**




Determine the amount of glass needed for the fireplace being installed. Set this glass aside in portions to allow for an even amount of glass to be placed over the media trays in the intake channel. NOTE: It is better to install too little glass than too much.

- (a) On Pier, Island, and Bay models, make sure the side outer glass is in place. Open up a bag of crushed glass and pour it evenly on to the media tray(s). Use a brush or glove to evenly distribute the glass over the surface.



Caution: Label all wires prior to disconnection when servicing controls. Wiring errors can cause improper and dangerous operation. Verify proper operation after servicing.



Before You Begin

- Read this entire manual before you use your new heater (especially the section "Safety Precautions" on pages 4 & 5). Failure to follow the instructions may result in property damage, bodily injury, or even death.


Starting the Heater for the First Time

- **Condensation** may appear on the glass each time you start the heater - this is normal.
- **Blue Flames** will occur on the heater when it first comes on. After fifteen minutes the flames will turn a more realistic yellow and orange color.
- **NOTE: Whenever power is connected to the fireplace (e.g.: power outage or breaker re-set), the exhaust blower will turn on and run for approximately 6 minutes).**


Location of Controls

There are two different TouchSmart controllers. The controller on the left is used for fireplaces that do not use the heat exchanger option. The Right shows the controller that does utilize the heat exchanger option.

Non-Heat Exchange Controller

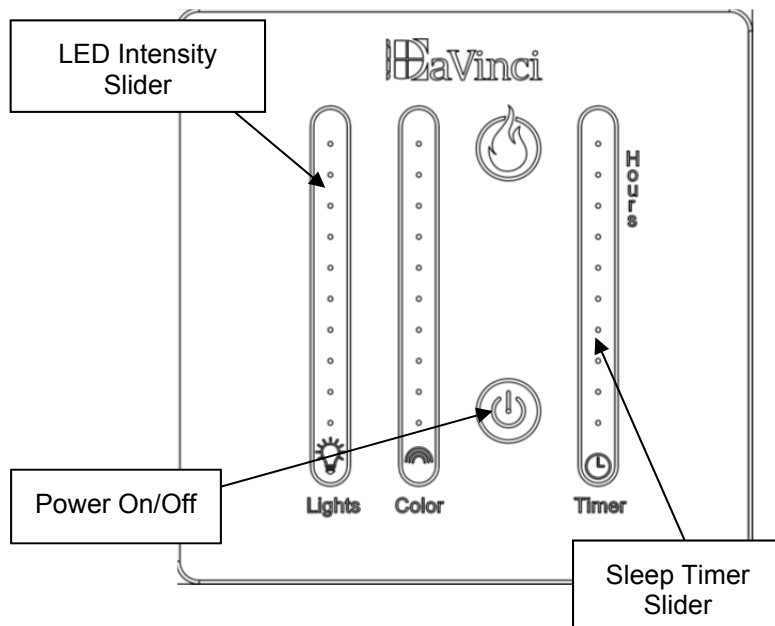

Heat Exchange Controller

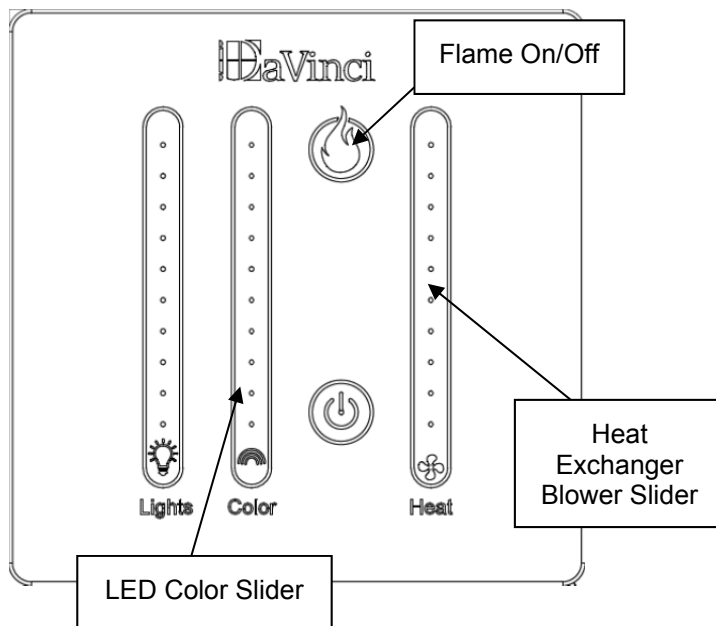

LED Intensity Slider

Slide finger up to increase LED intensity, slide down to decrease intensity.

LED Color Slider

Slide finger up or down to cycle through LED colors

Flame On/Off

Press this button to turn the flames ON/OFF



The fireplace takes approximately 40 seconds to turn on after the switch is turned to the "ON" position.

Power On/Off

Press to turn LED's on without using the flame function (LED's will return to the last used settings). Press again to turn off the LED's AND flame off with one command.

Sleep Timer Slider (fireplaces without heat exchangers only)

Touch anywhere on the slider to activate the sleep timer. Slide finger up to increase the time before the fireplace turns off, down to decrease time. Each light on the slider represents (1) hour.

Heat Exchanger Blower Slider (fireplaces with optional heat exchanger only)

Touch anywhere on the slider to activate the heat exchanger blower. Slide finger up to increase the blower speed, down to decrease speed.


DANGER HIGH VOLTAGE: Disconnect power before attempting maintenance or repair.

Yearly Service Procedure

- Failure to inspect and maintain the fireplace may lead to improper combustion and a potentially dangerous situation. We recommend the following procedures be done by a qualified technician.

THIS FIREPLACE IS NOT USER SERVICEABLE: Contact your dealer for servicing.

- Inspect the pilot flame. It should touch approximately 3/8" of the top of the flame sensor. If it does not, contact your dealer for service.
- Shut off gas to the fireplace and let it cool for 15 minutes. Remove the glass (see page 68).
- Remove crushed glass. If excessive sooting is found, the fireplace will require adjustment. Contact your dealer.
- Inspect the burner and remove any debris.
 - Make sure the burner is not warped, cracked, or damaged.
 - Check the firebox and area around the pilot to make sure there is no warping or damage.
 - If any problem is found, discontinue use and contact your dealer for service.
- Replace the crushed glass. Clean and replace the glass (see Glass Cleaning on page 77). If the glass is damaged, replace. Make sure the gasket along the perimeter of the glass contacts the face of the firebox and forms an air-tight seal. If it does not, re-align or replace the gasket to insure an air-tight seal.
- Inspect the area behind the access door. Clean if necessary. Check the gas control valve and the gas lines. If damage is found, discontinue use and contact your dealer for service. Clean the air channels, ducts, and blower (if applicable).
- Start the main burner. After 15 minutes the flames should be orange/yellow and not touch the top of the firebox. If the pilot or main burners do not burn correctly, contact your dealer for service. Monitor blower operation.
- Remove any debris or vegetation near the vent termination. Contact your dealer if any sooting or deterioration is found near the vent termination.

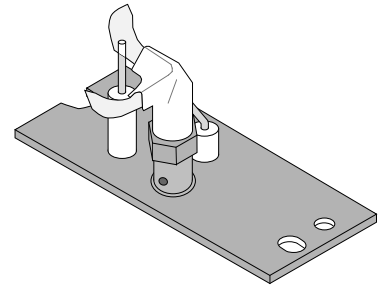


Glass Cleaning

The appliance must be completely cool before cleaning the glass.

The glass may be cleaned with a non-abrasive cleaner. To clean the inside of the glass, remove the glass, place it on a non-scratching surface, and clean the inside surface.

WARNING: do not operate the fireplace without the glass in place.

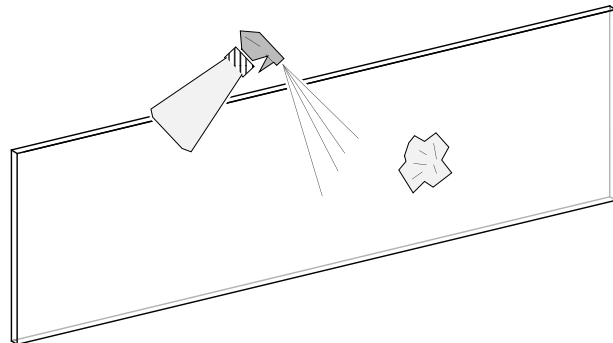

Replacement Parts

Caution: Use only Travis Industries replacement parts. Do not use substitute materials.

Warning: Do not operate appliance with the glass front removed, cracked, or broken. Replacement of the glass should be done by a licensed or qualified service person.

Contact your local Travis Industries Dealer for Replacement Parts

Register your **Dragon Wholesaling** Limited 7 Year Warranty online at lopi.com.au or complete the enclosed Warranty card and mail it within **ten (10)** days of the appliance purchase date to: Dragon Wholesaling Pty. Ltd. Unit 4, 16 Lexington Drive Bella Vista NSW 2153 Australia. **Dragon Wholesaling** warrants this gas appliance (appliance is defined as the equipment manufactured by Travis Industries, Inc.) to be defect-free in material and workmanship to the original purchaser from the date of purchase as follows:

Check with your dealer in advance for any costs to you when arranging a warranty call.
Mileage or service charges are not covered by this warranty. This charge can vary from store to store.

Component	Years 1 & 2 Parts & Labor	Years 3 Through 5 Parts & Labor	Years 6 & 7 Parts Only
Burner Assembly Burner Pan Assembly, Air Shutter Assembly, Main Burner Orifice			
Electrical Assembly Wiring Harness, Snap Discs, Rheostat Speed Control, Exhaust Blower, Dampers, LEDs			
Gas Control Assembly Adjustable control valve, fireplace controller, pilot assembly and pilot wiring			
Glass Glass (breakage from thermal shock)			
Ceramic Logs Log Set, Embers			
Accessories Firebacks, Heat Exchanger			
One-Way Freight Allowance One-way freight allowance on pre-authorized repair done at factory is covered.			
Firebox Assembly Adjustable Air Restrictor, Glass Attachment Mechanism			

EXCLUDED COMPONENTS:

Paint, Gasketing, and Accent Light Bulbs

CONDITIONS & EXCLUSIONS

- This new gas appliance must be installed by a qualified gas appliance technician. It must be installed, operated, and maintained at all times in accordance with the instructions in the Owner's Manual. Any alteration, willful abuse, accident, neglect, or misuse of the product shall nullify this warranty.
- This warranty is nontransferable, and is made to the ORIGINAL purchaser, provided that the purchase was made through an authorized DRAGON WHOLESALING dealer.
- Discoloration and some minor expansion, contraction, or movement of certain parts and resulting noise, is normal and not a defect and, therefore, not covered under warranty. The installer must ensure the appliance is burning as per the rating tag at the time of installation. Over-firing (operation above the listed input rate) of this appliance can cause serious damage and will nullify this warranty.
- The warranty, as outlined within this document, does not apply to the chimney components or other Non-Travis accessories used in conjunction with the installation of this product. If in doubt as to the extent of this warranty, contact your authorized DRAGON WHOLESALING retailer before installation.
- Dragon Wholesaling will not be responsible for inadequate performance caused by environmental conditions such as nearby trees, buildings, roof tops, wind, hills or mountains or negative pressure or other influences from mechanical systems such as furnaces, fans, clothes dryers, etc.
- This Warranty is void if:
 - The unit has been operated in atmospheres contaminated by chlorine, fluorine or other damaging chemicals.
 - The unit is subject to submersion in water or prolonged periods of dampness or condensation.
 - Any damage to the unit, combustion chamber, heat exchanger or other components due to water, or weather damage which is the result of, but not limited to, improper chimney/venting installation.
- Exclusions to this 7 Year Warranty include: injury, loss of use, damage, failure to function due to accident, negligence, misuse, improper installation, alteration or adjustment of the manufacturer's settings of components, lack of proper and regular maintenance, damage incurred while the appliance is in transit, alteration, or act of God.
- This 7 Year warranty excludes damage caused by normal wear and tear, such as paint discoloration or chipping, worn or torn gasketing, corroded or cracked logs, embers, etc. Also excluded is damage to the unit caused by abuse, improper installation, modification of the unit, drilling of the orifices, or the use of fuel other than that for which the unit is configured. Units are shipped for natural gas and must be converted to propane using the included conversion kit. Confirm fuel configuration with your installer.
- Damage to gold or nickel surfaces caused by fingerprints, scratches, melted items, or other external sources left on the gold or nickel from the use of cleaners other than denatured alcohol is not covered in this warranty.
- DRAGON WHOLESALING is free of liability for any damages caused by the appliance, as well as inconvenience expenses and materials. Incidental or consequential damages are not covered by this warranty. In some states, the exclusion of incidental or consequential damage may not apply.
- This warranty does not cover any loss or damage incurred by the use or removal of any component or apparatus to or from the gas appliance without the express written permission of DRAGON WHOLESALING and bearing a DRAGON WHOLESALING label of approval.
- Any statement or representation of DRAGON WHOLESALING products and their performance contained in DRAGON WHOLESALING advertising, packaging literature, or printed material is not part of this 7 year warranty.
- This warranty is automatically voided if the appliance's serial number has been removed or altered in any way.
- No dealer, distributor, or similar person has the authority to represent or warrant DRAGON WHOLESALING products beyond the terms contained within this warranty. DRAGON WHOLESALING assumes no liability for such warranties or representations.
- Dragon Wholesaling will not cover the cost of the removal or re-installation of hearths, facing, mantels, venting or other components.
- If for any reason any section of this warranty is declared invalid, the balance of the warranty remains in effect and all other clauses shall remain in effect.
- THIS 7 YEAR WARRANTY IS THE ONLY WARRANTY SUPPLIED BY DRAGON WHOLESALING, THE MANUFACTURER OF THE APPLIANCE. ALL OTHER WARRANTIES, WHETHER EXPRESS OR IMPLIED, ARE HEREBY EXPRESSLY DISCLAIMED AND PURCHASER'S RECOURSE IS EXPRESSLY LIMITED TO THE WARRANTIES SET FORTH HEREIN.

IF WARRANTY SERVICE IS NEEDED:

- If you discover a problem that you believe is covered by this warranty, you MUST REPORT it to your DRAGON WHOLESALING dealer WITHIN 30 DAYS, giving them proof of purchase, the purchase date, and the model name and serial number.
- Dragon Wholesaling has the option of either repairing or replacing the defective component.
- If your dealer is unable to repair your appliance's defect, he may process a warranty claim through DRAGON WHOLESALING, including the name of the dealership where you purchased the appliance, a copy of your receipt showing the date of the appliance's purchase, and the serial number on your appliance. At that time, you may be asked to ship your appliance, freight charges prepaid, to DRAGON WHOLESALING. DRAGON WHOLESALING, at its option, will repair or replace, free of charge, your DRAGON WHOLESALING appliance if it is found to be defective in material or workmanship within the time frame stated within this 7 year warranty. DRAGON WHOLESALING will return your appliance, freight charges (years 1 to 5) prepaid by DRAGON WHOLESALING, to your regional distributor, or dealership.
- Check with your dealer in advance for any costs to you when arranging a warranty call. Mileage or service charges are not covered by this warranty. This charge can vary from store to store.

Air Intake Installation	46
Air Intake Requirements	34
Air Shutter Adjustment	71
Altitude Considerations	51
Approved Vent Configurations	52
Approved Vent	51
MJ Specifications	7
Clearances	17
Dimensions	7
Drywall Installation	62
Electrical Connection	40
Exhaust Box Mounting	55
Facing Requirements	62
Fireplace Placement Requirements	16
Fuel	29
Gas Inlet Pressure	29
Gas Line Connection	29
Gas Line Location	29
Gas Line Requirements	22
Hearth Requirements	55
Installation Options	7
Mantel Requirements	63
Mounting the Junction Box (Switch and Rheostat)	31
Packing List	14
Raised Fireplaces	17
Recommended Installation Procedure	15
Rheostat Adjustment	53
Steps for Finalizing the Installation	71
Termination Requirements	54
Vent Clearances	51
Vent Installation	51
Vent Requirements	48
Wiring the Exhaust Blower (continued)	36
Wiring the Exhaust Blower	33